Standalone Network Video Recorder

Premium NVR
8 &16 Channel Models

User`s Manual

NVR802H-NVR1602H (“A” Type)

NVR804H-NVR1604H (“B” Type)

MADE IN KOREA

This document contains preliminary information and is subject to change without notice. **V.12/2014**

FCC Compliance Statement

Notice to Users**:** This equipment has been tested and found to comply with the limits for a Class A digital device. Pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

CAUTION

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION

DES CHANGEMENTS OU DES MODIFICATIONS NON EXPRESSEMENT APPROUVEES PAR LE RESPONSABLE DE LA CONFORMITE POURRAIENT ANNULER L'AUTORISATION DE L'UTILISATEUR A EXPLOITER L'EQUIPEMENT.

The equipment complies with the requirement of FCC CFR 47 PART 15 SUBPART B, Class A.

Explanation of Graphical Symbols

This symbol indicates the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.

Ce symbole indique la présence d'instructions importantes et de maintenances dans le manuel accompagnant le produit

This symbol indicates the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Ce symbole indique la présence de « haute tension » non-isolé dans le produit qui peut avoir pour conséquence un risque de la décharge électrique aux personnes.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
ATTENTION : Pour réduire les risques d'électrocution, ne pas ouvrir et se référer à une personne compétente.

Warnings

- Installation and servicing should be performed only by qualified and experienced personnel.
- Power off the NVR when connecting cameras, audio, or sensor cables.
- The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.
- The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the NVR for examination or attempting to fix the unit.
- The manufacturer may not be held liable for any issues with the unit if any labels are removed in the product.

Cautions

- This product has free voltages (100V ~ 240V). See installation instructions before connecting to the power supply.
- This product uses a Lithium battery.
- To avoid any risk of explosion, do not replace the battery on the main board by anything other than a Lithium battery.
- Dispose of used batteries according to the manufacturer's instructions.
- This equipment and all communication wirings are intended for indoor use only.
- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

WEEE (Waste Electrical and Electronic Equipment)

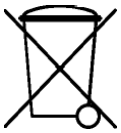

Customers in European Union countries are advised to dispose this product, at the end of its useful life, as per applicable local laws, regulations and procedures.

Important Safeguards

1. Read Instructions

- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

2. Retain Instructions

- The safety and operating instructions should be retained for future reference.

3. Cleaning

- Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

- Never add any attachments and/or equipment without manufacturer approval as such additions may result in the risk of fire, electric shock, or other personal injury.

5. Water and/or Moisture

- Do not use this equipment near water or in contact with water.

6. Accessories

- Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult and serious damage to the equipment.
- Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer.

- Move this equipment and cart combination with care. Quick stops, excessive force and uneven surfaces may cause the equipment and cart combination to overturn.

7. Power Sources

- This equipment should be operated only from the type of power source indicated on the marking label. If not sure the type of power, please consult to distributor or local power company.
- UPS (Uninterruptible Power Supply) is highly recommended when the power input is not stable to protect NVR and HDD(s).

8. Power Cords

- Operator or installer must remove power, BNC, alarm and other connections before moving the equipment.

9. Lightning

- For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

10. Overloading

- Do not overload wall outlets and extension cords to avoid the risk of fire or electric shock.

11. Objects and Liquids

- Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock.
- Never spill liquid of any kind on the equipment.

12. Servicing

• Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage Requiring Service

• Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

① When the power-supply cord or the plug has been damaged.

② If liquid is spilled or objects have fallen into the equipment.

③ If the equipment has been exposed to rain or water.

④ If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

⑤ If the equipment has been dropped or damaged the cabinet.

⑥ When the equipment exhibits a distinct change in performance—this indicates a need for service.

14. Replacement Parts

• When replacement parts are required, ensure the service technician uses replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

15. Safety Check

• Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

• This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

ATTENTION
RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN TYPE INCORRECT
DISPOSEZ DE BATTERIES EN ACCORS AVEC LES INSTRUCTIONS

18. Operating Temperature

• An operating temperature range is specified so that the customer and installer may determine a suitable operating environment for the equipment.

19. Elevated Operating Ambient Temperature

• If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the specified operating temperature range.

20. Reduced Air Flow

• Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

21. Mechanical Loading

• Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

22. Circuit Overloading

• Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over-current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

23. Grounding (Earthing)

• Connection of ground wire is highly recommended to protect the NVR from external electric shock, such as lightening, electrical surge.

WARNING
WARRANTY IS VOID IF SEAL OR LABEL IS REMOVED OR DAMAGED.

The List of Configuration

NVR Set	**A Type : 8 / 16CH** **B Type : 8 / 16CH**
Manual / CMS CD	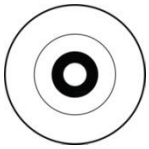
Quick Guide	
Screws	
HDD Brackets	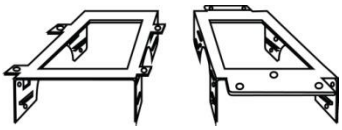
Rack Bracket **(B Type)**	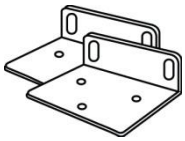
Data Cable	
Power Cable	
Adapter	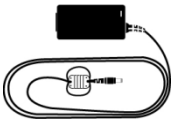

Mandatory Setup & Operation Precautions

✪ STEP 1. Date / Time Configuration (‘before’ HDD(s) installation)

- Plug a network cable, if any.
- Turn on the NVR and press ‘OK’ on no HDD(s) detection message.
- Go to **SETUP>SYSTEM>General>Setup**.
- Check on ‘NTP Setup’ box, and then select your ‘Time Zone’.
- Select DST (Daylight Saving Time) ‘On’ or ‘Off’ accordingly.
- When the NVR has no internet connection, adjust Date/Time manually. Otherwise the NVR will adjust the correct time every hour automatically.
- Click/Select ‘EXIT’ on your right and top corner.
- Turn off the NVR for Step 2 (HDD(s) installation).

✪ STEP 2. HDD(s) Installation / Addition / Moving / Replacement / Removal

- **HDD(s) Installation/Addition**: Make sure the NVR is turned off. Connect a power cable and a SATA cable from NVR’s main board to HDD(s). Use SATA port #1 (written on the board) for the first HDD and in order. Power the NVR on and follow the screen. NVR starts recording. No rebooting required.
- **HDD(s) Removal**: Make sure the NVR is turned off. Disconnect a power and a SATA cable from NVR’s main board to HDD(s). Power the NVR on and follow the screen. (You may leave SATA port #1 unused when you removed the attached #1 HDD.)
- **HDD(s) Selection**: Even most of HDDs are compatible with NVRs; suggested HDD list is available by request.

✪ Power Off

- Do not turn NVR off, or plug off the power adapter while NVR is in operations (record/playback). It may cause permanent damage to the equipment. Please Click (↵) **Shutdown** on System Menu Bar and then **UNPLUG** the power cable after NVR is shut down completely. It is safe to wait for 5 seconds before turning the power on again.
  (‘Shut Down’ by NVR’s menu selection does NOT physically power off the machine. Please physically unplug the power cable from the NVR to completely turn off.)
- Do not turn off External storage device (e.g., USB memory stick (powered), removable external hard disk, and similar) while the NVR is on. It may cause permanent damage to the equipment. When you have to turn off external storage device, make sure the NVR is turned off. When you turn those on, turn on external storage first and then NVR. (you may unplug simple USB thumb drive freely unless it is in archiving process)
- Do not turn NVR off, or plug off the power adapter when the NVR is formatting an HDD(s). It may cause permanent damage to the equipment. Make sure the power is “ON” until the formatting of an HDD is completed. (note, a NVR formats HDD(s) in seconds)

✪ Monitor resolution

- For the best picture display, a NVR’s local monitor output has a default resolution of 1920x1080 pixels. If your attached monitor does not support 1080p resolution, and you cannot see any picture, please change the NVR’s resolution to the lowest as following.
- The lowest resolution (1024x768) Hot Keys: Use the front button
- Press followings in order one by one. **REW>FF>BACKWARD>FORWARD**
- The resolution should be changed to 1024x768.

✪ Default Password

- For all (NVRs and Software) default password is 1111 (four 1(one)s).
- For your protection, it is strongly recommended to change. Computer-like passwords are supported.

✪ Upgrade

- You may upgrade a NVR when the HDDs are added properly.
- Contact your dealer/technical support when you need a help on updating.

Table of Contents

1. PRODUCT FEATURES 9
1.1 Unpacking 9
1.2 Service 9
1.3 System Connection Diagram 9
1.4 Network Interconnection 12
1.5 Specification 13
2. INSTALLATION 14
2.1 Hard disk Installation 14
2.1.1 SATA Port 14
2.1.2 Internal SATA Storage 14
2.1.3 e-SATA External Storage 14
2.1.4 HDD Installation 14
2.1.5 HDD Capacity 14
2.1.6 Monitor Connections 14
2.1.7 HDMI connections 15
2.1.8 Audio Connections 15
2.1.9 TCP/IP (Ethernet) Connections 15
2.1.10 Alarm Connections (TTL) 16
2.1.11 Master Alarm (B Type) 16
2.1.12 Alarm Connections (Relay) 16
2.1.13 RS-485/422 Connections 16
2.1.14 USB Connections 16
2.1.15 Grounding (Earthing) 16
2.1.16 Factory Reset Switch 16
2.1.17 Power Supply connections 16
2.1.18 Connections Guideline 16
3. INPUT DEVICE AND SCREEN ICONS 17
3.1 LEDs 17
3.2 Front Panel 17
3.3 Using a Mouse 17
3.4 Screen Icon 18
4. SETUP 19
4.1 Login 19
4.2 SYSTEM 20
4.2.1 Status 20
4.2.2 General 20
4.2.3 Event 25
4.3 DEVICE 27
4.3.1 Display 27
4.3.2 Network 30
4.3.3 Alarm 33
4.3.4 Storage 34
4.3.5 Camera 37
4.3.6 Audio 38
4.3.7 Text-In 38
4.4 RECORD 38
4.4.1 Record 38
4.4.2 Schedule 39
4.5 RELAY 40
4.5.1 ALARM IN 40
4.5.2 EMERGENCY 41
4.5.3 TEXT-IN 41
4.5.4 VIDEO LOSS 42
5. OPERATION INSTRUCTION 43
5.1 Viewing 43
5.1.1 First Image 43
5.1.2 View Format 44
5.1.3 Digital Zoom 44
5.1.4 Freeze Live Image 44
5.1.5 Pan / Tilt / Zoom Control 45
5.1.6 System Log 46
5.1.7 Key Lock 46
5.1.8 Emergency Recording 46
5.1.9 Alarm Out Control and Acknowledge 46
5.2 Playback 47
5.2.1 Search 47
5.2.2 Digital Zoom in Playback 51
5.2.3 One-touch Playback 51
5.3 Menu Bar 52
5.4 Bookmark 52
5.5 Archive 53
6. CMS PRO 56
6.1 CMS Pro Features 56
6.1.1 Introduction 56
6.1.2 Features 56
6.1.3 System Requirements 56
6.2 Installation 57
6.2.1 Software Installation 57
6.2.2 Login 58
6.3 Menu 59
6.4 Setup 60
6.4.1 Local Setup - Device 60
6.4.2 Device Group Setup 62
6.4.3 Local Setup - Environment 63
6.4.4 Local Setup - Account 66
6.4.5 Local Setup – E-map 67
6.4.6 Remote Device Setup 70
6.4.7 Change Password 71
6.4.8 Help 71
6.5 View 72
6.5.1 Server List 72
6.5.2 Remote Device System Log 72
6.5.3 Remote Device Event Log 72
6.5.4 CMS System Log 73
6.5.5 Health Check 73

6.5.6 Show All Windows 75
6.6 Application 75
6.6.1 Search 75
6.6.2 Exit 75
6.7 Live (Live Video Monitoring System) 76
6.7.1 Overview 76
6.7.2 Live Monitor Menu 76
6.7.3 Screen Layout Control 82
6.7.4 Change Division Display 82
6.7.5 Sequencing 82
6.7.6 Audio Volume Control 83
6.8 Search 83
6.8.1 Overview 83
6.8.2 Time Bar Search 83
6.8.3 Event Search 85
6.8.4 POS/ATM Search 85
6.8.5 Thumbnail Search 86
6.8.6 Smart Search 86
6.9 E-Map 87
6.9.1 Overview 87
6.9.2 Controls 87
6.9.3 E-map Camera – Instant Playback 87
6.9.4 Alarm In/Out Control 88
6.9.5 Audio 88
6.10 Uninstalling CMS Pro 88
7. ICMS VIEWER 90
7.1 System Recommendations 90
7.2 Program Installation 90
7.3 Login 91
7.4 Watch Mode 91
7.4.1 Log-in Screen 91
7.4.2 Local Setting 92
7.5 Live View 95
7.5.1 Connection 95
7.5.2 Display Mode 95
7.5.3 Health Check 96
7.5.4 PTZ Control 96
7.5.5 System Log 97
7.6 Search Mode 97
7.6.1 Date/Time Search 97
7.6.2 Event Search 98
7.6.3 POS/ATM 99
7.7 Disconnection 100
7.8 Uninstall 101
8. CMS WEB CLIENT PRO 103
8.1 System Requirements 103
8.2 Setup and Login 103
8.3 Live Display 104
8.4 Search Screen 105
8.5 PTZ Control 106
8.6 Capture 107
9. CMS MOBILE VIEWER 109
9.1 iPhone / iPad (mViewer Pro) 109
9.1.1 System Requirements 109
9.1.2 Installation 109
9.1.3 Site Registration 110
9.1.4 Connection 111
9.1.5 Live View (Portrait View) 112
9.1.6 Live View (Landscape View) 113
9.1.7 PTZ Control 113
9.1.8 Search 114
9.1.9 Snapshot gallery 115
9.1.10 Setting 116
9.1.11 Uninstallation 116
9.2 Android Phone (mViewer Pro) 117
9.2.1 System Requirements 117
9.2.2 Installation 117
9.2.3 Site Registration 118
9.2.4 Connection 119
9.2.5 Live View (Portrait View) 119
9.2.6 Live view (Landscape View) 120
9.2.7 PTZ control 121
9.2.8 Alarm Out Control 121
9.2.9 Search 122
9.2.10 Snapshot Gallery 123
9.2.11 Setting 123
9.2.12 Uninstallation 124
10. TEXT-IN (POS) 126
10.1 Usage of Serial-In Function 126
10.2 Connection Method 126
10.3 Connection Diagram 126
10.4 Relay 128
10.4.1 Relay Setup (Optional) 128
10.4.2 Schedule Setup (Mandatory) 129
10.5 Setup (Mandatory) 129
10.5.1 Text Overlay 129
10.5.2 Link Cam 130
10.5.3 Device Setting 130
10.5.4 Example 131
10.6 Search 133

1. Product Features

1.1 Unpacking

• This equipment is an electronic appliance, so it should be handled with special care.
• After unpacking, please check if all the following items are included.

- NVR Main body
- **A Type** : Power Supply Adapter (DC 12V, 3A) and Power Supply Cable
- **B Type** : Power Supply Adapter (DC 12V, 6A) and Power Supply Cable
- Installation CD (CMS Pro Software & User's Manual)
- Quick Guide

1.2 Service

• If there is any problem in the product, please refer servicing to a supplier or a distributor with qualified service personnel.

WARNING
WARRANTY IS VOID IF SEAL OR LABEL IS REMOVED OR DAMAGED.

1.3 System Connection Diagram

A Type – 8 / 16 channel Series NVR

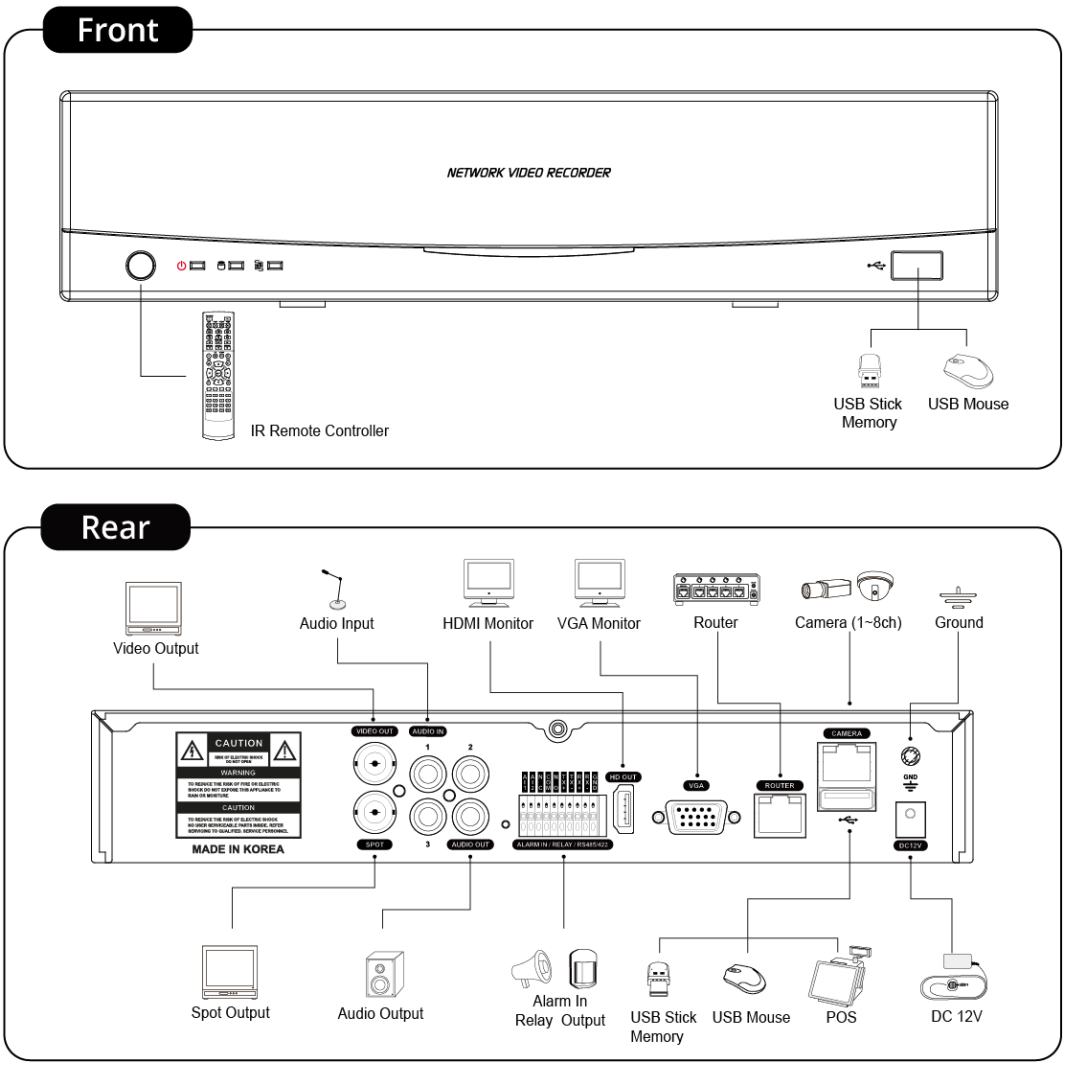

B Type – 8 / 16 channel Series NVR

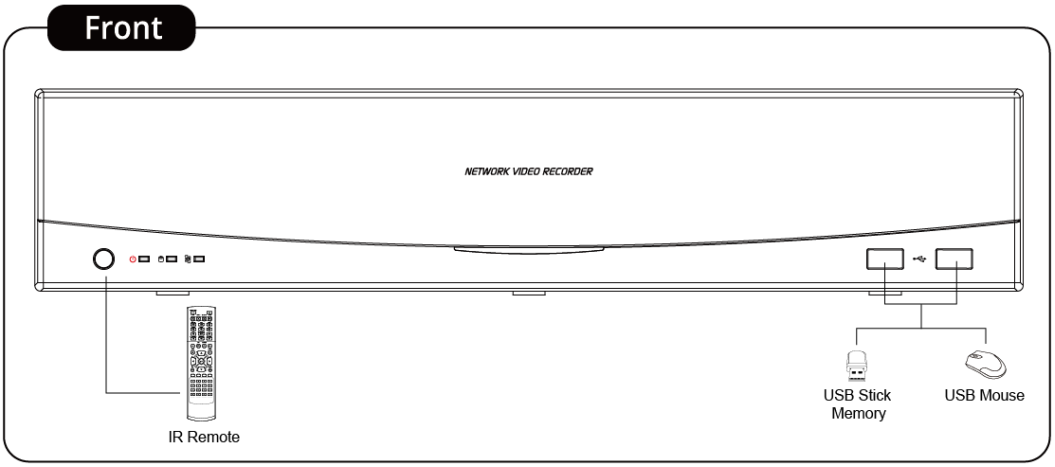

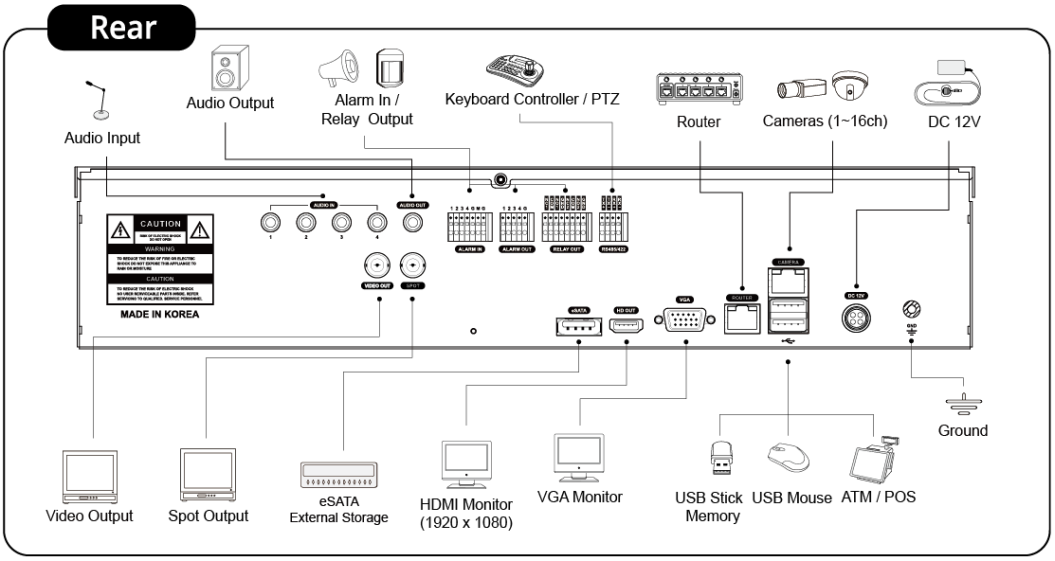

1.4 Network Interconnection

- Case1 (Recommended)

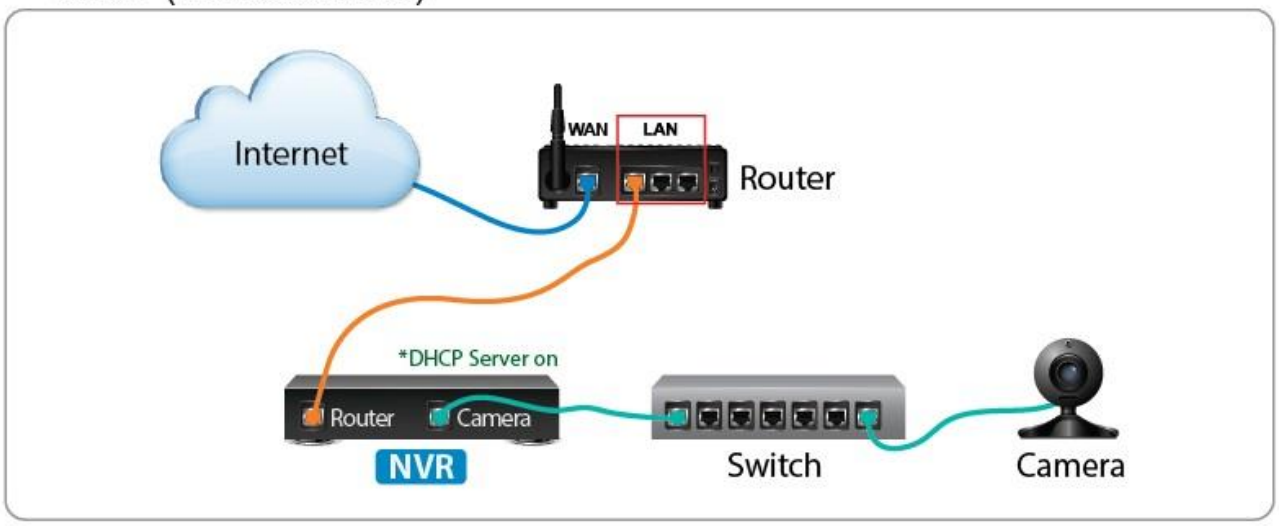

- Case2

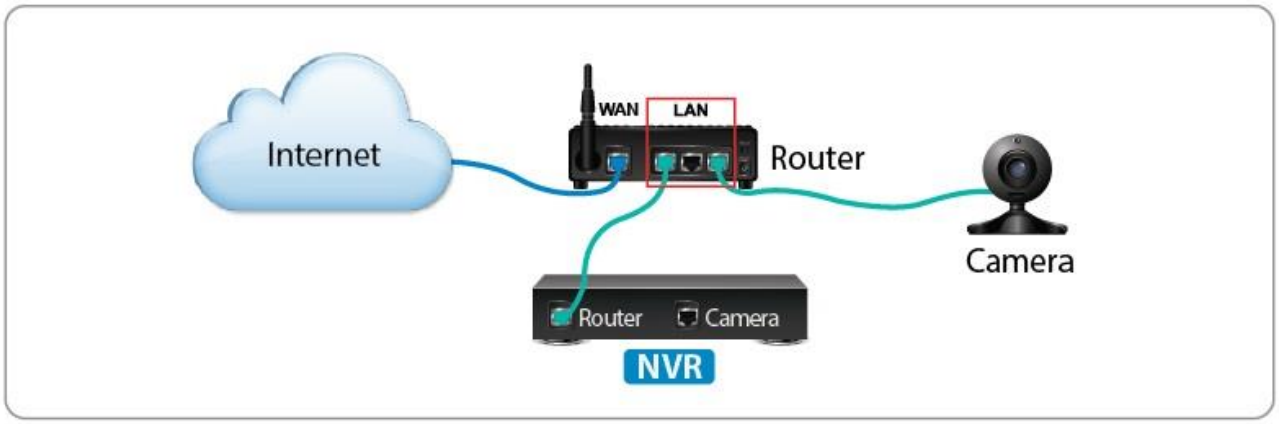

- Case3

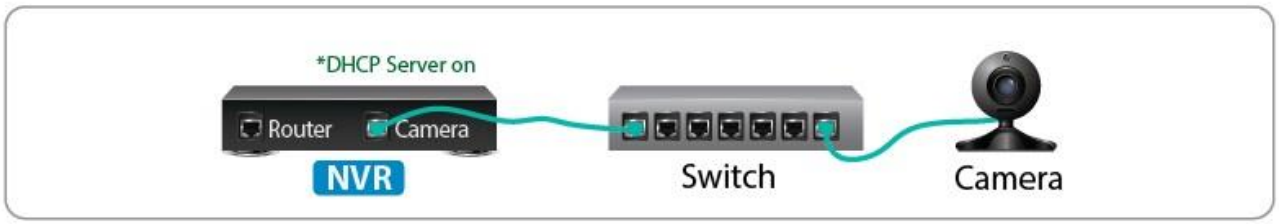

- Case4 (Not Recommended)

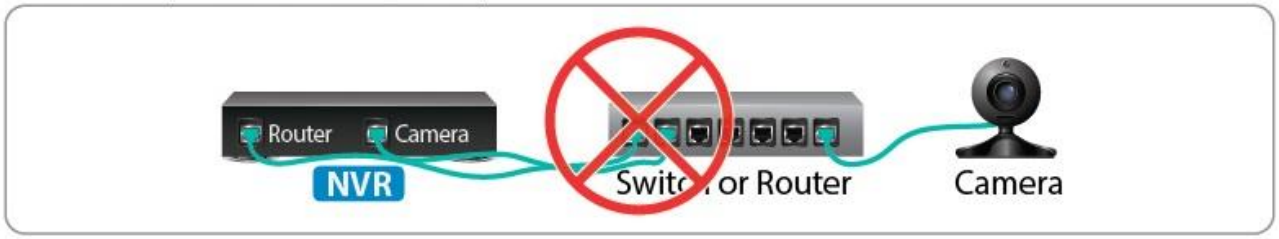

1.5 Specification

• A Type

Type	A
Video Input	8 / 16
Video Output	Composite : 1
VGA	1 port (Max. 1920 x 1080)
HDMI	1 port (Max. 1920 x 1080)
Spot Out	Composite : 1 (Single Spot)
Throughput	80 / 160Mbps
Audio Input / Output	3 Input / 1 Output
Alarm Input	2 Input
Alarm Output	1 (Relay)
Primary Storage	2 x SATA HDD

• B Type

Type	B
Video Input	8 / 16
Video Output	Composite : 1
VGA	1 port (Max. 1920 x 1080)
HDMI	1 port (Max. 1920 x 1080)
Spot Out	Composite : 1 (Single Spot)
Throughput	80 / 160Mbps
Audio Input / Output	4 Input / 1 Output
Alarm Input	4 Input
Master Alarm	1 Port
Alarm Output	4 (TTL) / 1 (Relay)
Primary Storage	4 x SATA HDD
eSATA	1 Port

2. Installation

2.1 Hard disk Installation

2.1.1 SATA Port

- When installing HDDs, make sure to connect from SATA 1 Port.
- **A Type**
  - Main board of this NVR has two SATA port: it is indicated as SATA 1 and 2.
- **B Type**
  - Main board of this NVR has five SATA ports: they are indicated as SATA 1, 2, 3, and 4
- Up to eight SATA devices are able to be connected to the SATA ports in serial; however the devices must be connected onto correct SATA port.

2.1.2 Internal SATA Storage

- **B Type** NVR has 5 internal SATA Ports.
- 1-4 SATA Port: It is designed to mount HDD. Connect from SATA 1 port when installing HDDs.

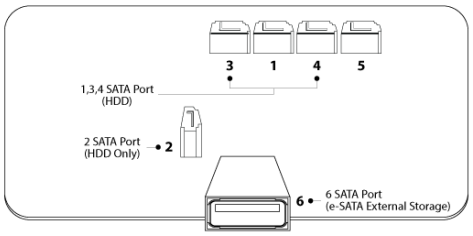

2.1.3 e-SATA External Storage

- B Type NVR has one external SATA Port; the picture above shows external **SATA 6 Port**.
- 6 SATA Port: It is designed to mount up to 4HDDs per external SATA Port.

2.1.4 HDD Installation

- Securely mount a hard disk using bracket and screws provided.
- Please do not use any different hard disk cables (data cable and power supply cable) other than provided.
- Otherwise, it may cause damage to the hard disk.

CAUTION

INSTALL HARD DISK AFTER NVR POWER OFF. OTHERWISE, IT MAY CAUSE PERMANENT DAMAGE TO THE HARD DISK. TO TURN OFF NVR, PLEASE USE SHUTDOWN KEY ON SYSTEM MUNU BAR LOCATED ON THE RIGHT MARGIN. AND THEN UNPLUG THE POWER CABLE FROM NVR.

2.1.5 HDD Capacity

- Each model has different HDD capacity.
- Below table shows the maximum HDD capacity for each model.

Type	A	B
Capacity	8 TB	16 TB

2.1.6 Monitor Connections

- Video Out
  - Use with the CCTV monitor.
  - Connect BNC cable between CCTV monitor and **'VIDEO OUT'** of the NVR.

• VGA
  - Use with the computer monitor.
  - Connect VGA cable between computer monitor and **'VGA'** of the NVR
• Spot
  - This function supports one Channel Display on Spot Monitor
  - Connect BNC cable between spot monitor and '**SPOT'** of rear panel.

CAUTION

BLACK SCREEN WILL DISPLAY IF THE MONITOR DOES NOT SUPPORT THE SELECTED RESOLUTION. IN ORDER TO CHANGE THE RESOLUTION PLEASE PRESS "**REW>FF>BACKWARD>FORWARD**" IN SERIES USING FRONT BUTTON THEN THE RESOLUTION WILL BE CHANGED TO '1024 X 768'.

2.1.7 HDMI connections

• Connect HDMI cable to HD out port of rear panel and HDMI port of HD output device.
• Please Click (↵) **SETUP> DEVICE > DISPLAY > General** and the following screen will display.

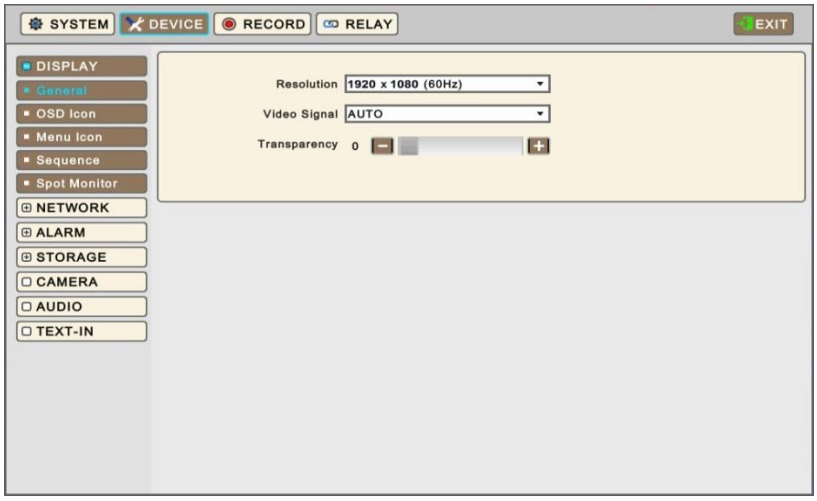

• Click the box below to select resolution.
  - A user can select the resolution among '1920x1080 (60Hz)', '1920x1080 (50Hz)', '1280x720 (60Hz)', '1280x720 (50Hz)' and '1024x768'.
  - If the resolution is changed then the NVR may restart automatically.
  - The default setting of NVR is '1920 x 1080 (60Hz)'.
• Click Video Signal box to select signal format.
  - A user can select the signal output among 'NTSC', 'PAL' and 'AUTO'.
  - The default setting of NVR is 'AUTO'

CAUTION

HDMI CONNECTION MAY NOT BE COMPATIBLE WITH CERTAIN OUTPUT DEVICE.
VIDEO NOISE MAY OCCUR DEPENDING ON THE TYPE OF HDMI CABLE USED. MAKE SURE TO USE AN HDMI-CERTIFIED CABLE.

CAUTION

BLACK SCREEN WILL DISPLAY IF THE MONITOR DOES NOT SUPPORT THE SELECTED RESOLUTION. IN ORDER TO CHANGE THE RESOLUTION PLEASE PRESS "**REW>FF>BACKWARD>FORWARD**" IN SERIES USING FRONT BUTTON THEN THE RESOLUTION WILL BE CHANGED TO '1024 X 768'.

2.1.8 Audio Connections

• Connect an audio device to '**AUDIO IN**' and a speaker system to '**AUDIO OUT**'. Please use a speaker system with volume adjustable.

2.1.9 TCP/IP (Ethernet) Connections

• Connect to '**Router**' connector with the LAN cable for Client S/W.

• Connect to '**Camera**' connector with the LAN cable for IP Cameras.

2.1.10 Alarm Connections (TTL)

• Connect Alarm Input (Sensor) to 'AI 1~AI 4' connectors and connect Sensor Common to 'G' connector.
• Connect Alarm Output (buzzer, siren, etc.) to 'AO 1~AO 4' connectors and connect Common to 'G' connector.

2.1.11 Master Alarm (B Type)

• Alarm In sensor will be deactivated if Master Alarm is on.
• Connect Master Alarm In to 'M' connectors.

2.1.12 Alarm Connections (Relay)

• Connect Alarm Output (buzzer, siren, etc.) to **'NO and/or NC'** connectors, Power to **'COM'** connector and Ground to **'GND'** connector. **(Dry Contact)**

2.1.13 RS-485/422 Connections

• Keyboard controller connector.
• Please use TX+, TX-, RX+ and RX- terminals accordingly.

2.1.14 USB Connections

• There are up to four identical USB ports in front and in rear. It is possible to connect a USB memory stick to archive data or a mouse to control the device.

2.1.15 Grounding (Earthing)

• Connection of ground wire is highly recommended to protect the NVR from external electric shock, such as lightening, electrical surge.

2.1.16 Factory Reset Switch

• Reset the switch to restore all setup values to factory default. It also deletes System Log File.
• The switch is located in a pin hole of the back panel.
• Using a paper clip, press and hold the reset switch for 2-3 seconds and release until popup message will display.

2.1.17 Power Supply connections

• **A Type**: Plug the power supply adapter **(DC 12V, 3A, included)** to '**DC12V**' connector and plug another side to power source. Adapter input voltage is a free volt (100 VAC ~ 240 VAC). Please do not use any different power supply adapter because it may cause the NVR to malfunction.
B Type: Plug the power supply adapter **(DC 12V, 6A, included)** to '**DC12V**' connector and plug another side to power source. Adapter input voltage is a free volt (100 VAC ~ 240 VAC). Please do not use any different power supply adapter because it may cause the NVR to malfunction.

2.1.18 Connections Guideline

• **Video out Connector:** If only the monitor is connected to VIDEO OUT connector, please set the impedance switch on the rear side of the monitor to 75 ohms to prevent abnormally bright or collapsed images. If wish to connect another device (e.g., a recorder) to the back of the monitor, please set the impedance switch on the rear side of the monitor to HIGH Z (High Impedance) and set the last device to 75 ohms.
• **Alarm Input Connector:** Do not input any type of voltage to the AI 1~AI4 connectors.

3. Input Device and Screen Icons

3.1 LEDs

A and B Type

NAME	Operating mode
Power LED (Red)	• Light off: NVR off • Light on: NVR on
HDD LED (Green)	• Light off: Standby Reading/Writing • Blink : DATA Reading/Writing
Network LED (Yellow)	• Light off: No Devices are connecting to NVR through network (No User access) • Light On: Devices are Connecting to NVR through network (User access)

3.2 Front Panel

A Type

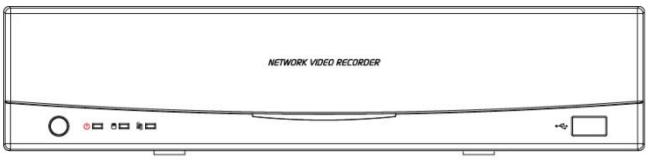

8 / 16 Channel NVR

B Type

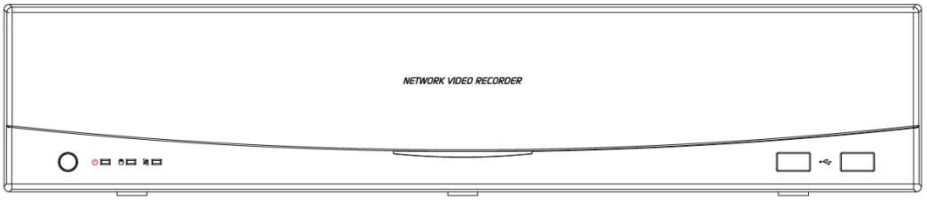

8 / 16 Channel NVR

3.3 Using a Mouse

- Mouse provides an easier access to adjustment. Refer to below for proper use.
- Left mouse button functions the same as **Enter** (↵) key on the front panel of NVR.
- Right mouse button displays the channel function key such as Audio, PTZ, Connection or Disconnection and Information on selected channel.

A and B Type

Name of Key	Function
Audio	Enable/Disable Audio
PTZ	Enable/Disable PTZ control (When supported)
Connection Disconnection	Connect to Camera or Disconnect to Camera
Information	Information of Camera

3.4 Screen Icon

Icon	Description	Icon	Description
	Continuous recording schedule		Alarm recording schedule
	Continuous + Alarm recording schedule		No Recording schedule
	Continuous recording mode		Alarm recording mode
	Emergency recording mode		Audio recording (When connected)
2	Remote access indication/ No. of connected users (up to 2)		Recording in progress
	Audio channel		In channel sequencing
	Date / Time		Master Alarm Overwritten
	HDD Overwriting Disabled (Recording)		HDD Overwriting Enabled
	Keyboard controller mode		Estimated HDD usage
	Spot out Enabled		Spot out sequencing
	Key Locked		

4. Setup

4.1 Login

• For security purpose, a user has to input the password to enter the setup menu.

• Please press from Display Menu Bar to enter the setup menu and the following screen will display.

• In order to use all functions and privileges, log in as ID: admin.

• Default Password is “1111”.

• After login successfully, following screen will display.

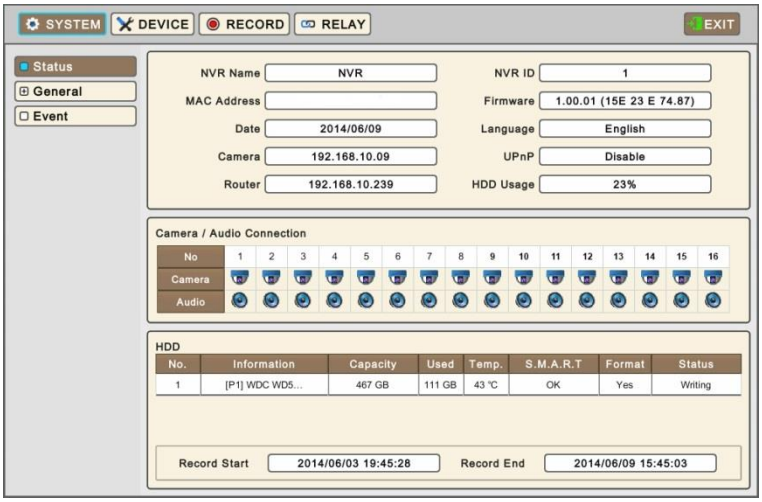

• Main menu consists of 4 sub menu.

- **SYSTEM / DEVICES / RECORD / RELAY**

• To escape from the setup menu and save settings of NVRs, please Click Exit button on the screen.

• A user may use ◀, ▶ direction keys or mouse Click to exit from Setup. Please Click (↵) the EXIT button on the screen.

NOTE

Press AUDIO/ESC in the setup screen. It operates like CANCEL (ESC). During live mode, AUDIO/ESC button operates as on/off of audio focused channel) and playback mode, it operates like EXIT form playback mode or CLOSE (if any popup existing.)

NOTE

Recording does NOT stop by menu accesses.

4.2 SYSTEM

4.2.1 Status

• Entering Setup Menu following screen will display.

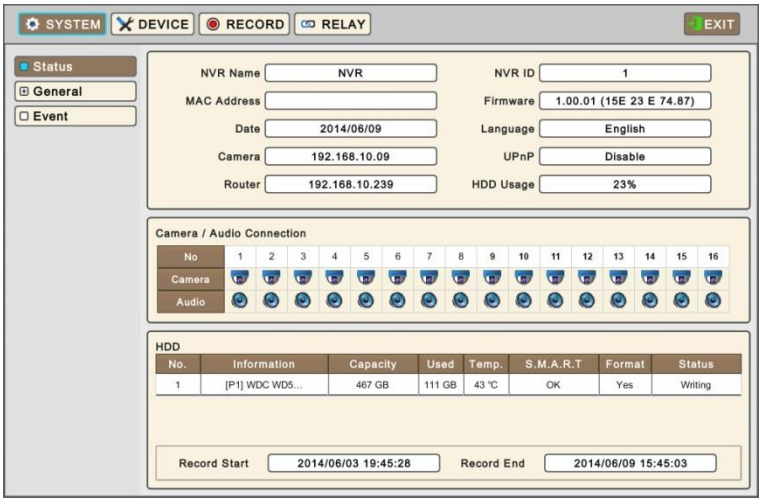

• System Status show information of the NVR like followings

- NVR name
- NVR ID
- MAC Address
- Firmware
- Date
- Language
- LAN
- UPnP
- WAN
- HDD Usage
- Camera / Audio Connection
- HDD information
- Record Start & End time

NOTE

Values cannot be changed at **'Status'**. Please see **'General'** to change the value.

4.2.2 General

• Please Click (↵) **SYSTEM>General** and the following screen will display.

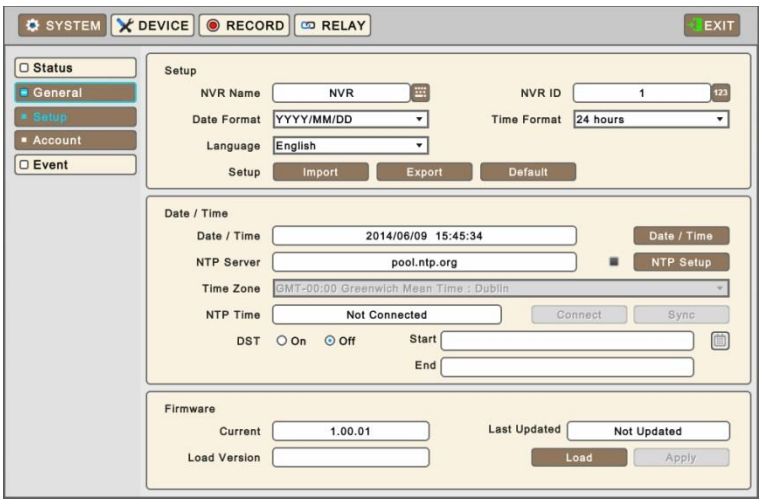

Setup

NVR Name

- Name your NVR on your own.
- Please Click (↵) keyboard icon on NVR Name box and the following virtual keyboard will display.

- Please Click (↵) desired letters (characters) on the virtual keyboard to input.

① Use to erase one character every time.

② Use to erase the whole line.

③ Use to move the cursor (Also you can use a mouse to move the cursor between characters)

- Please choose 'OK' to confirm the input and choose 'Cancel' to cancel.

NVR ID

- Assign a unique ID for each NVR when you have multiple NVRs in a location.
- The unique ID is necessary with Keyboard operations.
- Please Click (↵) on NVR ID box and the following virtual Numpad will display

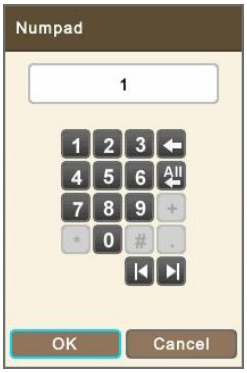

- Take any whole number **between 1 and 255**.
- Please Click (↵) desired numbers on the virtual Numpad to input.

① Use to erase one number every time.

② Use to erase the whole numbers.

③ Use to move the cursor (Also you can use a mouse to move the cursor between numbers)

- Please choose 'OK' to confirm the input and choose 'Cancel' to cancel.

Date Format

- Set date display format. Please Click (↵) Drop-down list of Date Format to select a format.

Time Format

- Set time display format. Please Click (↵) Drop-down list of Time Format to select a format.

Language

- Set menu display Language. Please Click (↵) Drop-down list of Language to select a language.

Setup

- **Import:** Copy a NVR configuration file stored in USB memory stick to NVR. Please plug in the memory stick and then Click (↵)

  Import

  - Please choose 'OK' to confirm and choose 'Cancel' to cancel.
- **Export:** Store the Menu setup of NVR to USB memory stick. Please plug in the memory stick and then Click (↵)

  Export
- **Default:** Click (↵) Default to restore all setup values to default settings

  - Please choose 'OK' to confirm and choose 'Cancel' to cancel.

> **NOTE**
> Import or Default process may restart the NVR.

Date / Time

- Adjust the current Date and Time of the NVR.
- Click Date/Time Button on the right hand side and following virtual calendar will display.

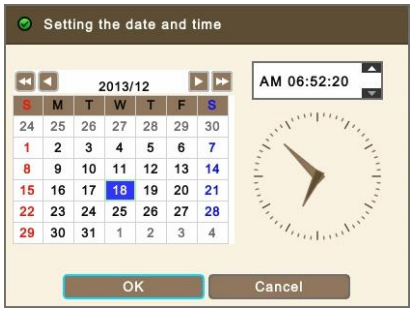

- Please follow the procedure below for date adjustment.
  ① Use arrow buttons in the Month Calendar to select Year, Month and Day.
  - ▶▶: Move to next 'Year'
  - ◀◀: Move to previous 'Year'
  - ▶: Move to next 'Month'
  - ◀: Move to previous 'Month'

  ② Click (↵) a date. The date will be displayed in blue color.
- Please follow the procedure below for time adjustment.
  ① Click (↵) items (AM/PM, H, M, S) to change. A selected item will be highlighted in a box
  ② Adjust the number by Clicking (↵) ▲, ▼ buttons on the right-hand side.
  ③ Repeat the same procedure to change AM/PM, H, M and S.
- Please choose 'OK' to confirm the adjusted date and time, choose 'Cancel' to cancel.

> **CAUTION**
> IF ADJUSTED DATE/TIME IS PRIOR TO RECORDED DATA, DATA AFTER NEW DATE/TIME MAY BE ERASED.

> **NOTE**
> It is strongly recommended to do '**Clear All Data'** (**SETUP>DEVICE>Storage>HDD Format**)

NTP Server

- Adjust the NTP (Network Time Protocol, automatic time sync.) Server address and Check Interval when NTP is being used.
- Click (↵) NTP Setup on the right hand side and following window will display.

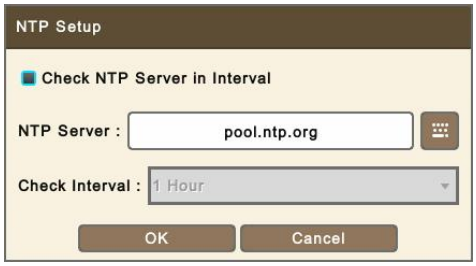

• Please Click (↵) Select box next to Check NTP Server in Interval to sync the time regularly by selected interval.

• **NTP Server:** Click (↵) or address in NTP Server box and the virtual keyboard will display. Input IP address of NTP server

• **Check Interval:** Set clock-update-interval from NTP Server. A user can adjust time every 1 to 24 hours.

• Please choose 'OK' to confirm the NTP setup, choose 'Cancel' to cancel.

NOTE

Check the box next to NTP Setup to connect Time Zone setting with NTP Server. A user should set the Time zone correctly to operate the NTP function properly.

NOTE

Currently used NTP is administered by **pool.ntp.org**. However, users are allowed to use IP address of any NTP site. (If they have their own, otherwise leave the default Serve name.)

Time Zone

• Please Click (↵) Drop-down list of Time Zone to select correct time zone.

NTP Time

• Display NTP Server time, if Internet is connected to Time Server. If not displaying, please Click (↵) Connect.

• When NTP Time's Clock is displayed, please Click (↵) Sync to synchronize NTP Server's clock with NVR clock.

NOTE

The displayed Server Time could be 30 minutes or 1 hour off from actual local time when the region is on Daylight Saving Time period. Just disregard it and sync the time. When you proceed to 'EXIT'. The very correct time should have been applied and displayed on NVR's screen.

DST

• Please Click (↵) Select box of DST to use Daylight Saving Time or not.

• If DST is (if different DST rule is) observed, please Click (↵) and the following screen will display.

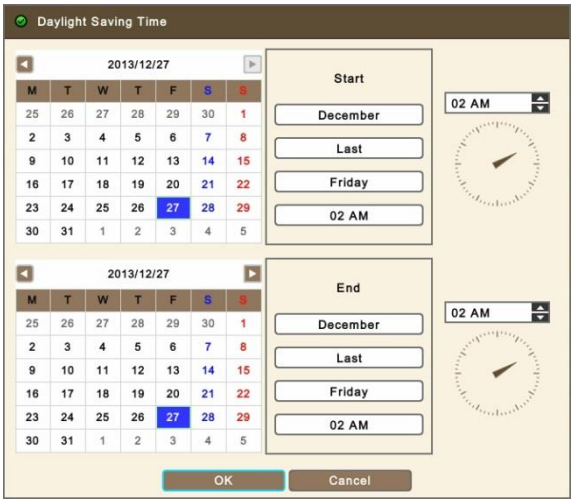

• Adjust the dates of Start and End for DST

• Please follow the procedure below for date adjustment. (Start & End)

① Use arrow buttons in the Month Calendar to select date.

- ▶: Move to next 'Month'
- ◀: Move to previous 'Month'

② Click (↵) a date. The date will be displayed in blue color

• Please follow the procedure below for time adjustment. (Start & End)

① Adjust the number by Clicking (↵) ▲, ▼ buttons on the right-hand side.

• Please choose 'OK' to confirm the adjusted date and time, choose 'Cancel' to cancel.

Firmware

- Users may upgrade NVR when it is required.
- Please follow the Upgrade process below.
  ① Plug USB memory stick which has a proper firmware file.
  ② Click (↵) Load New Then, software version stored in the USB will display on the left-hand side.
  ③ Click (↵) Apply to start the upgrade.
  ④ Popup message box will display and ask to proceed. Click 'OK' to proceed.
  ⑤ When the upgrade is completed, a message box will display. Please Click 'OK' button and NVR will auto-reboot.

NOTE
Upgrade file must be placed inside USB without folder. Otherwise SYSTEM will not be able to recognize the file.

CAUTION
DO NOT UPGRADE UNTIL A HARD DISK DRIVE IS INSTALLED. MAKE SURE TO UPGRADE WHEN HDD IS IN PROPER OPERATION.

CAUTION
PLUGGING OUT USB DEVICE OR FORCED POWER-OFF DURING VERSION UPGRADE MAY CAUSE PERMANENT DAMAGE.

Account

Group

- Please Click (↵) New Group and the following screen will display.

- Click (↵) on the right-hand side of Group Name box or Group Name box. Then, the virtual keyboard will display.
- Please Click (↵) desired characters (up to 60 letters) on the virtual keyboard.
- Select access rights for the Group by checking ☑ some of the following items (All, Setup, Archiving, Shutdown, Search, Network, and Reboot). If Click (↵) 'All', all items are checked/unchecked at once.
- Please choose 'OK' to confirm the settings, choose 'Cancel' to cancel.
- To Edit the Group, Select a Group from the list and Click (↵) Edit
- To Delete the Group, Select a Group from the list and Click (↵) Delete

USER

- Please Click (↵) New User and the following screen will display.

- Click (↵) Drop-down list of Group Name to select a group
- Click (↵) on the right-hand side of User ID frame or User ID box then virtual keyboard will display.
- Please Click (↵) desired characteristics (up to 60 letters) on the virtual keyboard.
- Input Password, Confirm and E-mail.
- Please choose 'OK' to confirm the settings, choose 'Cancel' to cancel.

• Then, lists of User will show as follows.

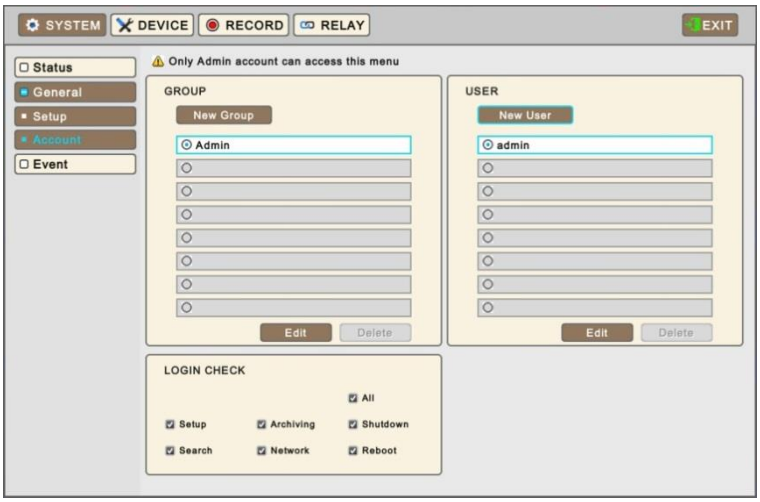

• To Edit the User, Select a User from the list and Click (↵) Edit

• To Delete the User, Select a User from the list and Click (↵) Delete

NOTE

Only 'Admin user' can access Account menu.

NOTE

E-mail address is not mandatory to create New User but it is necessary to send email notification.

NOTE

A user may create up to 8 Groups and 8 Users per Group.

Login Check

• Selectively enable password protection for important operations.

• Please check ☑ the operations that wish to enable password protection.

CAUTION

USERS WILL NOT BE ASKED TO ENTER THE PASSWORD FOR OPERATION(S) WHEN PASSWORD PROTECTION IS NOT ACTIVATED.

4.2.3 Event

• Please Click (↵) **SYSTEM>Event** and the following screen will display.

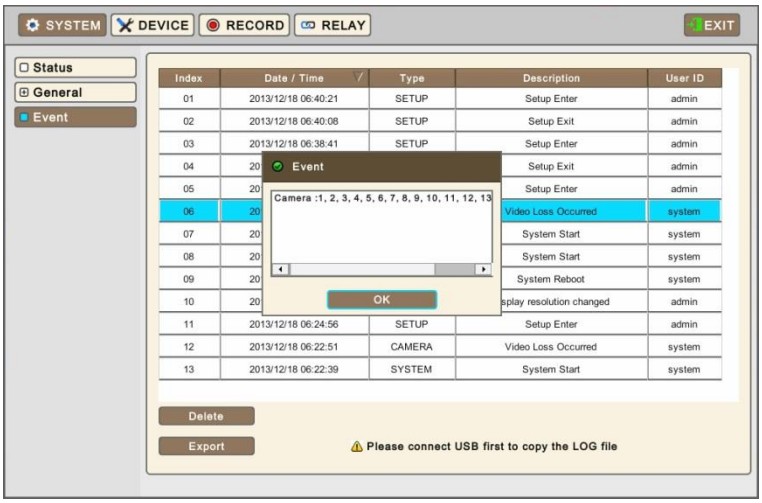

- System Log shows various event logs by User ID(s) like below
  - System Start
  - System Reboot
  - Setup Default/Import/Export
  - Resolution Change
  - Video out Change
  - Time Adjust Before/After
  - NTP Sync Success/Fail
  - Firmware Upgrade Success/Failure
  - Log Delete/Export
  - Setup Enter/Exit
  - Playback Start/Exit
  - Archive Success/Failure/Cancel
  - Video Loss Occur
  - Network Connect/Disconnect
  - Setup Change from Remote
  - E-mail Send Success/Failure
  - HDD Add/Remove/Relocate
  - HDD Format Success/Failure
  - Data Clear Success/Failure
  - S.M.A.R.T check Bad
  - HDD Rec Day On/Off
  - HDD Overwrite On/Off
  - DST On/Off
  - Lock On/Off
- Click (↵) Delete box to delete the log contents
- Click (↵) Export box to Export the log contents to USB memory stick.

NOTE

Maximum of 2,000 Event Log can be saved. After 2000 logs; older log will be deleted automatically.

NOTE

Users are able to sort the Event Log by Date/Time, Type, Description and User.

NOTE

Only Admin access right can delete the Log.

4.3 DEVICE

4.3.1 Display

• Please Click (↵) **DEVICE>Display** and the following screen will display.

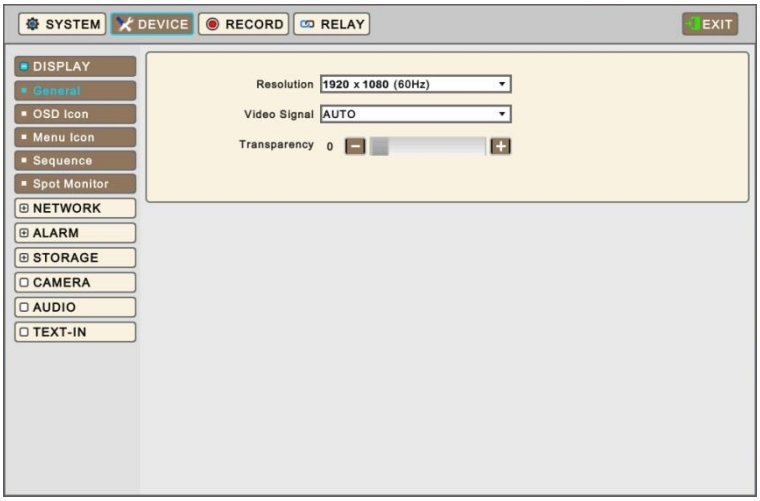

General

• Users are able to set its video output resolution between 1024 x 768 ~ 1920 x 1080.

• Video In / Out will help users to select its video input and output between NTSC, PAL and AUTO.

• The default value is 'AUTO'.

• Once the setting is changed, it will ask to reboot for the new recognition of video out.

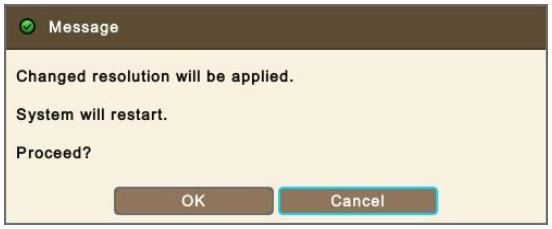

• Transparency option allows a user to adjust a level of transparency of menu display. Press (+) or (-) button to adjust the transparency

OSD Icon

• Please Click (↵) **OSD Icon** and the following screen will display.

• The OSD Icon menu allows a user to select what to display on the screen.

• Click (↵) Default to restore default value. (display all)

Position (OSD)

- Position (OSD) menu allows a user to adjust the position of Channel OSD on the monitor. Use it when some letters are dropped/invisible/blocked on the monitor.
- Adjust Horizontal to change margin between both ends of the monitor on horizontal side and OSD. Margin range is between **0 and 50**, with a larger number representing greater margin.
  - Use ▲, ▼ to adjust position of OSD
- Adjust Vertical to change margin between both ends of the monitor on vertical side and OSD. Margin range is between **0 and 50**, with a larger number representing greater margin.
  - Use ▲, ▼ to adjust position of OSD

Menu Icon

- Please Click (↵) **Menu Icon** and the following screen will display.

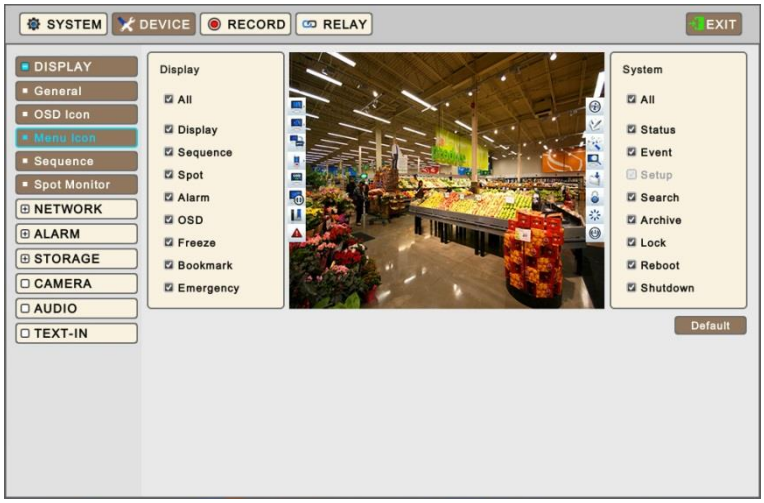

- The Menu Icon menu allows a user to customize the Left and Right side popup menu which is displayed on the screen by moving a mouse pointer on each side.
- Left side popup menu is for 'Display' options and Right side popup is for 'System' options. Click (↵) 'All' selects/deselects all sub options.
- Click (↵) Default to restore default value.

Sequence

- Please Click (↵) **Sequence** and the following screen will display.

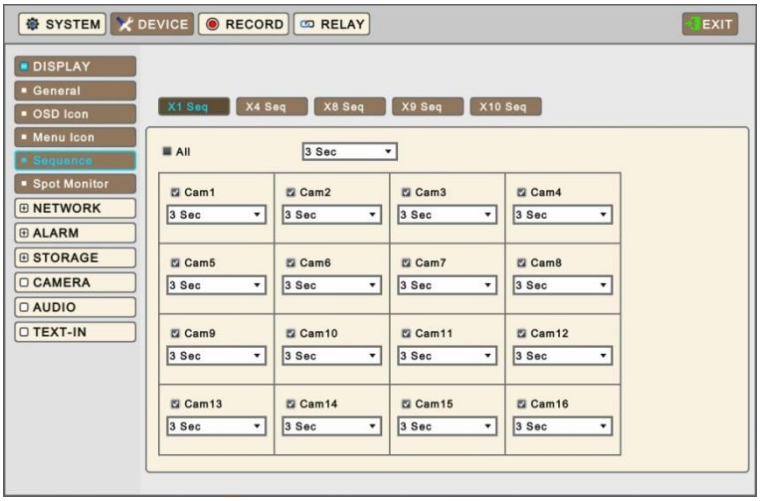

- The Sequence menu allows a user to adjust channel sequencing interval of Main monitor.
  - X1 Seq: Adjust interval for 'Full screen sequencing'.
  - X4 Seq: Adjust interval for '4 split screen sequencing'.
  - X8 Seq: Adjust interval for '8 split screen sequencing'.
  - X9 Seq: Adjust interval for '9 split screen sequencing'.
  - X10 Seq: Adjust interval for '10 split screen sequencing'.
- Check ☑ check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.

- To adjust the location of the cameras for each sequence, Click (↵) each Drop-down list and able to select the channel.
- To adjust the rotation interval of cameras, Click (↵) each Drop-down list and select from **3, 5, 10, 15, 30 and 60 seconds**.
  If Click (↵) at the top Drop-down list in X1 Seq, Users can adjust all items of interval at once.
- To activate Sequence mode during live monitoring, click to select the multi-channel split display mode on Display Menu Bar on the left margin of the main monitor.

> **NOTE**
> X8, X9, X10 Seq use only with 8/16 channel NVRs and x10 seq use only with 16 channel NVRs

Spot Monitor

- Spot or Spot is only available in **A and B Type**.
- This connection supports multi-channel display (1/4/8/9/10/16) on spot monitor depending on its channels (4/8/16).
- Please Click (↵) **DEVICE>Display>Spot Monitor** and the following screen will display.

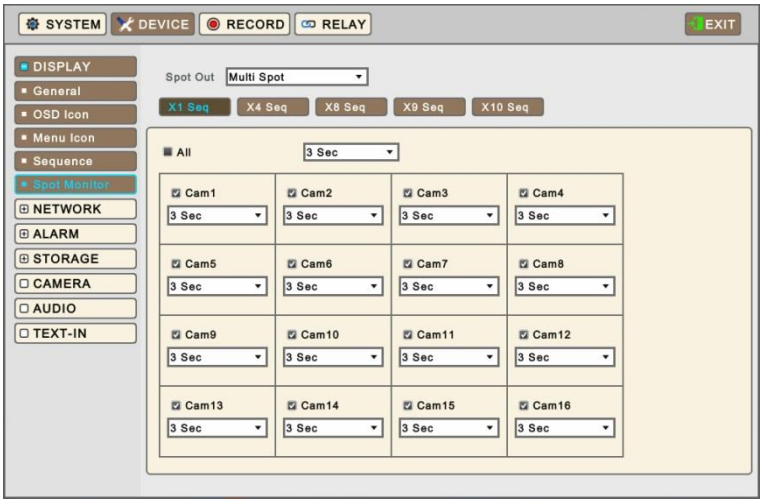

- To Select the type of spot out, Click (↵) combo box (Users can select Spot or Spot).
- The Sequence menu allows a user to adjust channel sequencing interval of Spot Monitor.
  - X1 Seq: Adjust interval for 'Full screen sequencing'.
  - X4 Seq: Adjust interval for '4 split screen sequencing'.
  - X8 Seq: Adjust interval for 'Quad screen sequencing'.
  - X9 Seq: Adjust interval for '9 split screen sequencing'.
  - X10 Seq: Adjust interval for '10 split screen sequencing'.
- Check ☑ check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- To adjust the location of the cameras during the sequence, Click (↵) each Drop-down list and able to select the channel.
- To adjust the rotation interval of cameras, Click (↵) each Drop-down list (Users can select **3, 5, 10, 15, 30 and 60 seconds**).
  If Click (↵) at the top Drop-down list in X1 Seq, Users can adjust all items of interval at once.

> **NOTE**
> X8, X9, X10 seq use only with 8/16 channel NVRs and x10 seq use only with 16 channel NVRs

4.3.2 Network

• Please Click (↵) **DEVICES>Network** and the following screen will show.

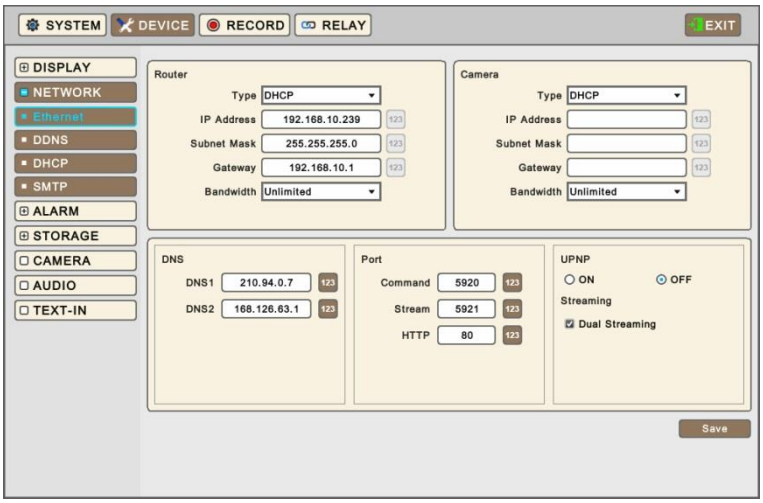

Ethernet

Router

• This function is for Client S/W.

• Please Click (↵) Network Type. When you click the Drop-down list, users can select to Static (fixed IP) or DHCP (floating IP).

• In Static, a user must manually set the static IP address for use.

- Set IP Address, Subnet Mask, Gateway DNS Server 1 & 2. Please ask your network administrator for more details.
- To input address, please Click (↵) Numpad icon on the right-hand side of each box.

• In DHCP, IP Address, Subnet Mask, Gateway and DNS Server will be assigned automatically from a Router.

• Register UPnP: Click (↵) 'On' for automatic port forwarding and Click (↵) 'Off' on radio box to do manual port forwarding.

• Bandwidth is to setup an average transfer speed.

• There are total of 14 different networks Bandwidth users may choose. (bps: bit per second) 26 kbps, 128 kbps, 256 kbps, 512 kbps, 1 Mbps, 2 Mbps, 4 Mbps, 8 Mbps, 10 Mbps, 20 Mbps, 40 Mbps, 80 Mbps, 100 Mbps and unlimited(default).

- Ethernet support Max. 1000Mbps.

CAUTION

THE CONNECTED LOCAL ROUTER SHOULD SUPPORT AND ACTIVATE **UPnP** FEATURE ACCORDINGLY.

Camera

• This function is for IP Cameras

• Please Click (↵) Network Type. When you click the Drop-down list, users can select to Static (fixed IP) or DHCP (floating IP).

• In Static, a user must manually set the static IP address for use.

- Set IP Address, Subnet Mask, Gateway. Please ask your network administrator for more details.
- To input address, please Click (↵) Numpad icon on the right-hand side of each box.

• In DHCP, IP Address, Subnet Mask and Gateway will be assigned automatically from a Router.

• There are total of 14 different networks Bandwidth users may choose. (bps: bit per second) 26 kbps, 128 kbps, 256 kbps, 512 kbps, 1 Mbps, 2 Mbps, 4 Mbps, 8 Mbps, 10 Mbps, 20 Mbps, 40 Mbps, 80 Mbps, 100 Mbps and unlimited(default).

- Ethernet support Max. 1000Mbps.

Port

• The Port Number Setup menu allows a user to configure Command, Stream and web port, when connecting to network users.

• Port number

- **Command:** 5000~65535 (Default: 5920)
- **Stream:** 5000~65535 (Default: 5921)
- **Web:** 1~65535 (Default: 80)

CAUTION

IT IS NOT POSSIBLE TO CHANGE PORT NUMBER, WHEN A USER IS CONNECTED TO THE NVR VIA NETWORK.
ONCE PORT NUMBERS ARE CHANGED, IT MUST BE ALSO CHANGED THE PORT NUMBERS ON REMOTE SOFTWARE SUCH AS CMS Pro, mViewer Pro, iCMS

Dual Streaming

• To activate Dual streaming mode, please click the check box.

NOTE

Dual Streaming mode reduces network traffic and then show display more smooth at the low speed network environment.

DDNS

• Please Click (↵) **DDNS** and the following screen will display.

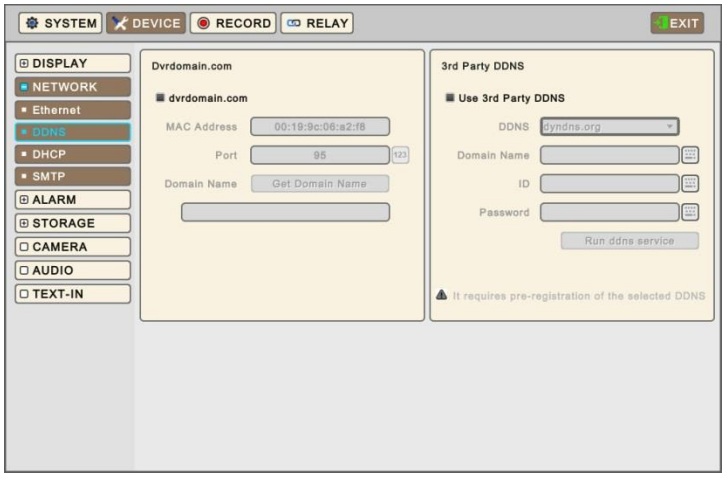

• DDNS (Dynamic Domain Name System) service registers its unique Domain name to a provided server and allows a user to use the same address name to access the NVR. A user may use 3rd Party DDNS service if they have an account instead of dvrdomain.com.

dvrdomain.com

- Check ☑ a checkbox of dvrdomain.com to use dvrdomain.com.
- As for DDNS Server, dvrdomain.com will be showing as default.
- Port number 95 will be shown as default. (It's possible to use 80 alternatively)

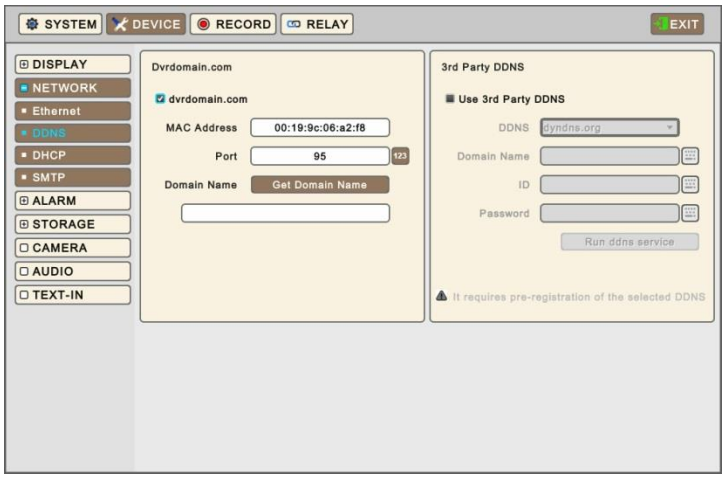

- By pressing the 'Get Domain Name', the NVR activates DDNS services and brings a registered DDNS name. A user may use this name as an IP address when they add a NVR on software.

NOTE

DDNS service port number 95 is NOT required to be port forwarded at all.

CAUTION

WHEN A USER'S CONNECTIONG DEVICES (PC, Mac, SMART PHONES, etc.) ARE UNDER THE SAME ROUTHER WITH A NVR, THE USER CANNOT USE THE DDNS NAME TO CONNECT. USE THE NVR'S PRIVATE IP ADDRESS FOR THIS CASE.

3rd Party DDNS

- Check ☑ a checkbox of 3rd Party to use dyndns.org or no-ip.com Server.
- As for DDNS Server, dyndns.org will be showing as default. To change server, Click (↵) Drop-down list of DDNS Server.

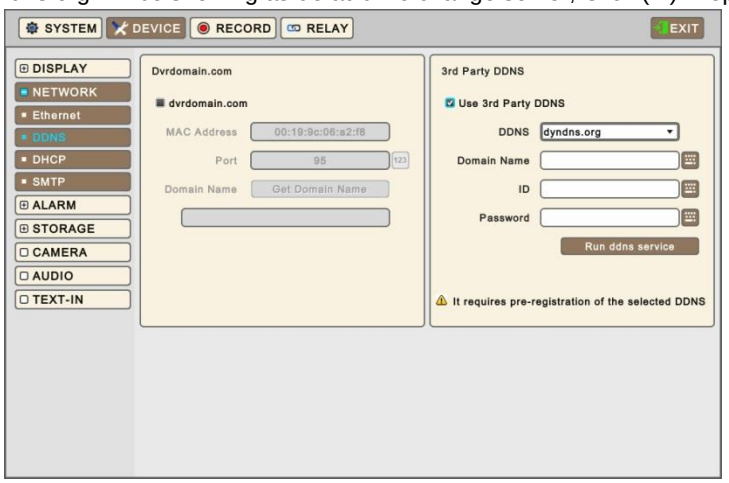

- As for Domain Name, users have to input the Domain Name given from the selected DDNS Server.
- As for ID and Password, use the user ID and Password to log in to the selected DDNS Server.
- Click "Run DDNS service" to start mapping from NVR to DDNS Server.

NOTE

Users must join 'dyndns.org' or' no-ip.com' prior to using it as DDNS server. Please check corresponding website for more information.

NOTE

If system doesn't get domain name, please check network status.

NOTE

For the security reason, please change the admin's password other than the default

DHCP

• Please Click (↵) **DHCP** and the following screen will display.

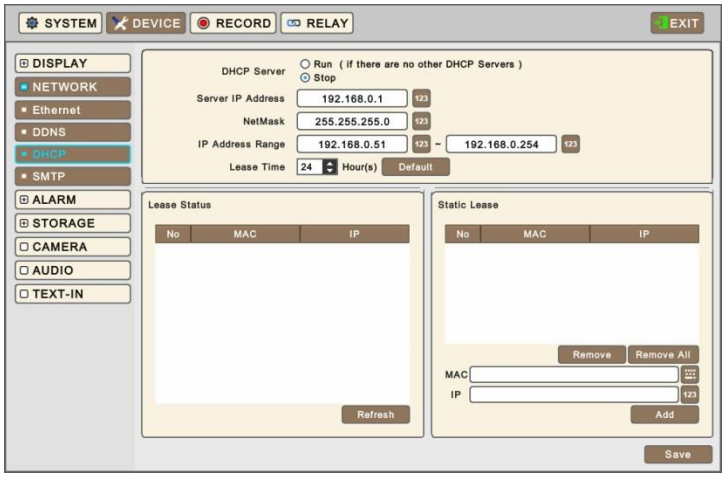

- If the camera network is not set by DHCP, users can sue NVR DHCP service on this menu, please select "Run".
- When users activate this menu, camera setting in 'Ethernet' will be deactivated.
- Click (↵) the keyboard icon on the right-hand side of Server IP Address box and the virtual keyboard will display. Please register the Server IP Address.
- Click (↵) the keyboard icon on the right-hand side of NetMask box and the virtual keyboard will display. Please register the NetMask.

- Click (↵) the keyboard icon on the right-hand side of Dynamic IP Address Range and the virtual keyboard will display. Please register the Range
- The Camera which is connected NVR, will get IP address from this range

SMTP

- Please Click (↵) **SMTP** and the following screen will display.

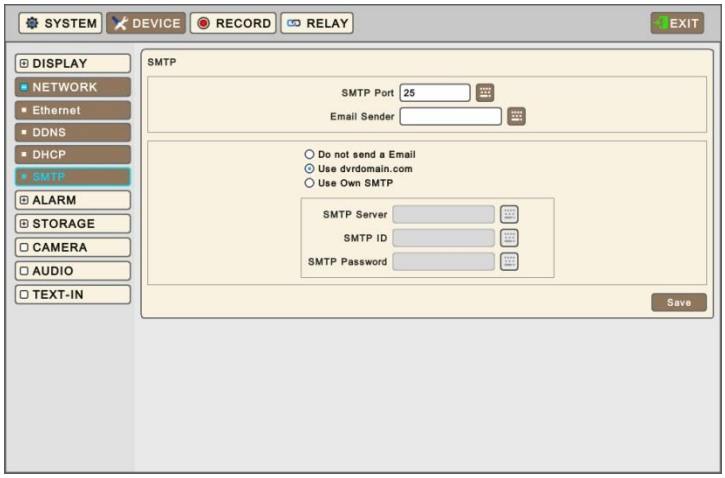

- If users want to use “dvrdomain.com” which is offered by manufacturer instead of own SMTP server, please click on the check box (dvrdomain.com).
- To use own SMTP, Click (↵) the check box on the left-hand side of Own SMTP box
- Click (↵) the keyboard icon on the right-hand side of SMTP Server box and the virtual keyboard will display. Please register the SMTP Server. SMTP server can be set up by the users to have own SMTP server on their site.
- Click (↵) the keyboard icon on the right-hand side of Sender ID box, Password and Email Sender then the virtual keyboard will display. Please register an ID to the sender mail server (e.g., ryu99).
- Default number of SMTP port is 25. Please note that any Internet Service Provider may have restrictions on the default port. If so, port number 2525 and 587 can be used alternatively.

CAUTION

DUE TO THE VARIOUS LOCAL JUNK MAIL POLICIES, EMAILING MAY NOT WORK PROPERLY. SSL EMAIL SERVERS MAY ALSO NOT WORK CORRECTLY. IF SO PLEASE DEACTIVATE THE SSL FEATURE IN THE (YOUR) SERVER SETUP. NOTE THAT SOME SERVER CANNOT DEACTIVATE THIS FEATURE

4.3.3 Alarm

Please Click (↵) **DEVICES>Alarm** and the following screen will display.

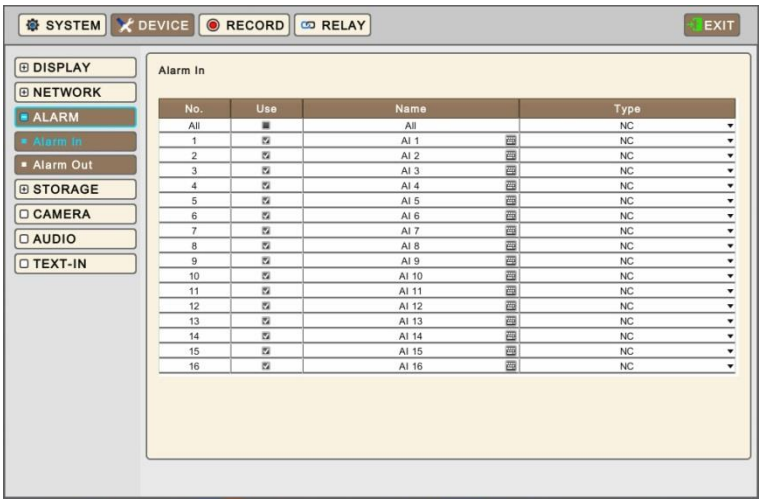

Alarm In

- The Alarm In menu will allow users to give title and to select the type of Alarm input.
- Click (↵) the keyboard icon on the right-hand side of each box on name column or name column and the virtual keyboard will display. Then, please register the title of Alarm input.
- When a check box is marked ☑ on Use, a corresponding Alarm starts operating. However, if a user does not check the check box, the operation stops. If Click (↵) 'All' of use box, all items are check/uncheck at once.
- Click (↵) each box on Type column to select type of a corresponding Alarm input. If Click (↵) 'NC/NO' of Type column, all items can be changed NC/NO at once.
  - **NO:** contact is normally open
  - **NC:** contact is normally closed

Alarm Out

- Please Click (↵) **Alarm Out** and the following screen will display.

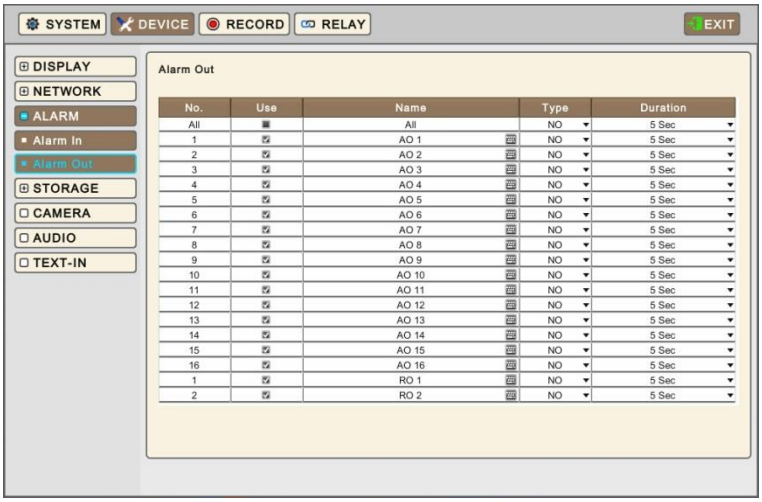

- The Alarm Out menu will allow a user to give title and to select the type of Alarm output.
- Click (↵) the keyboard icon on the right-hand side of each box on name column or name column and the virtual keyboard will display. Then, please register the title of Alarm output.
- When a check box is marked ☑ on Use, a corresponding Alarm output starts operating. However, if a user does not check the check box, the operation stops. If Click (↵) 'All' of use box, all items are check/uncheck at once.
- Click (↵) each box on Type column to select type of a corresponding Alarm output. If Click (↵) 'NC/NO' of Type column, all items can be changed NC/NO at once.
  - **NO:** contact is normally open
  - **NC:** contact is normally closed
- Users may change duration of all Alarm output.

4.3.4 Storage

- Please Click (↵) **DEVICE>STORAGE** and the following screen will display.

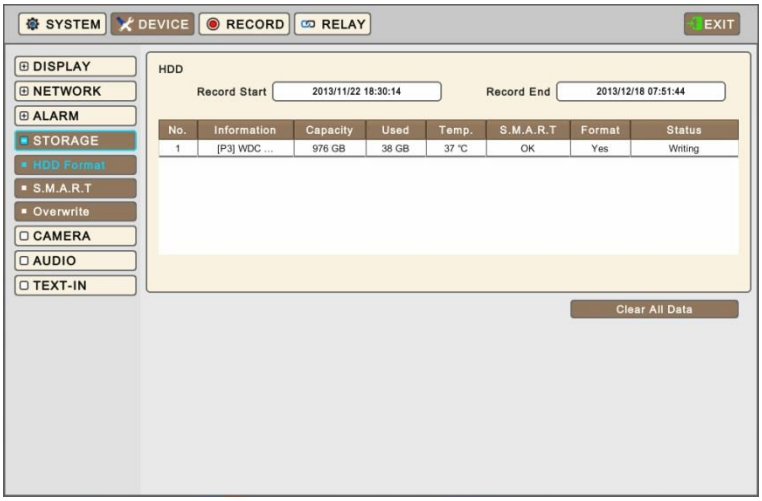

HDD Format

- This page shows information of HDDs installed in the NVR.
- When users install full storage device including one e-SATA storage(**B Type**), then following procedures will be listed as below:
  - 1. Internal SATA 1~4 Ports
  - 2. External SATA 1~4 Ports
- Under “Information”, it is possible to find the port number where each HDD is connected.
  - For Internal SATA, [P1], [P2], [P3] and [P4] each represents internal Port 1, Port 2, Port 3 and Port 4.
  - For External SATA, [E1], [E2], [E3] and [E4] each represents external Port 1, Port 2, Port 3 and Port 4.
- Users must format when:
  - install new HDD
  - add another HDD
  - replace HDD
  - move HDD (change installation port)
  - remove HDD
- Use to delete or purge all normal recorded data from database. Please follow the procedure below.
  ① Click (↵) Clear All Data box.
  ② When a Message box asking “All the data will be deleted and cannot be restored. Proceed?” shows, choose ‘OK’ to confirm.
  ③ Then, Progress window will display and the process starts.
  ④ When all data are deleted, a message box “HDD format has been completed.” will pop up.

NOTE

When users add used HDDs from the same type of NVR, users can access data in NVRs as Read-Only or keep

CAUTION

DELETED DATA CANNOT BE RESTORED.

S.M.A.R.T

- Please Click (↵) **S.M.A.R.T** and the following screen will display.

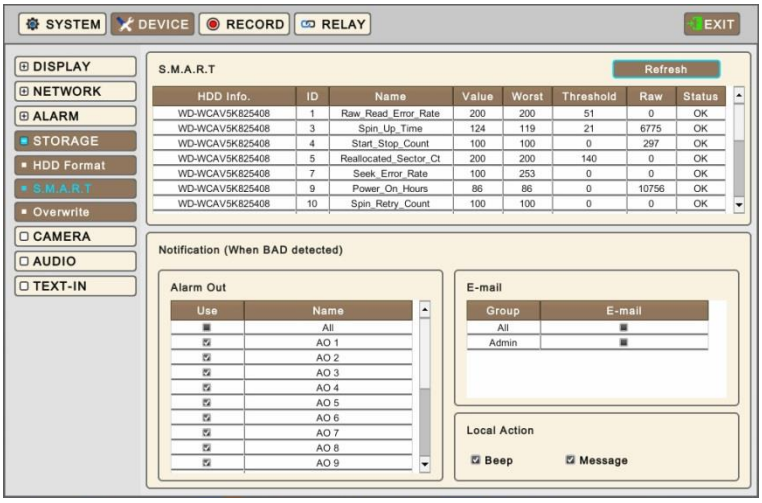

S.M.A.R.T

- S.M.A.R.T shows the status of HDD connected to the NVR.
- Click (↵) Refresh box to refresh status of HDDs as the S.M.A.R.T setup.

Notification

- A user can set Notification when BAD are detected by S.M.A.R.T.
- Check ☑ Alarm out: users can set the alarm out, when “Bad” detects from HDDs. If Click (↵) ‘All’, all items are check/uncheck at once.
- Check ☑ Email: users can receive the email notification to registered email address, when Bad detects from HDDs. If Click (↵) ‘All’, all items are check/uncheck at once.
- Check ☑ Beep: When Bad detects from HDDs, it will give the alarm sound.

• Check ☑ Message: When Bad detects from HDDs, the alarm message will pop up on the OSD.

NOTE

When “Attention or Warning” is detected by S.M.A.R.T, notification (Alarm out, Email, Beep and Message) will not activate.

Overwrite

• Click (↵) Overwrite and the following screen will display.

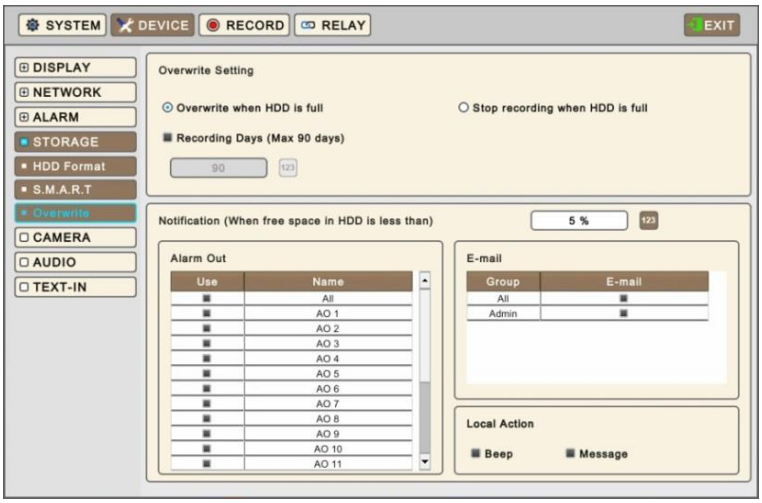

Overwrite Setting

• Click (↵) Overwrite box and users may activate the overwrite function. (Overwriting mode is default)

- This function makes restart the recording from the beginning when the HDD is full. The previous recorded data will be erased from the first one. Following icon will display in bottom of live mode.

• A user shall designate the total recording days from 1 day to 90 days and unlimited.

• Click (↵) Stop recording box and users may deactivate the overwrite function.

- Recording will stop automatically when the HDD is full.
- At no Overwrite mode, will display while the recording is going on.

Notification

• Users may set the certain value of HDD usage for notification. It will notify, when free space in HDD is less than the specified value. The values are from 0 ~ 100%

• Check ☑ Alarm out: users can set the alarm out, when free space in HDD is less than the specified value. If Click (↵) ‘All’, all items are check/uncheck at once.

• Check ☑ E-mail: users can receive the email notification to registered email address, when free space in HDD is less than the specified value. If Click (↵) ‘All’, all items are check/uncheck at once.

• Check ☑ Beep: a NVR makes beeping sound when free space in HDD is less than the specified value.

• Check ☑ Message: the warning message “Free space in HDD is less than (xx%)!” will display on the OSD

CAUTION

IF USERS USE “Recording Days” FUNCTION, NVR WILL STORE ONLY THE DAYS THAT SPECIFIED BY USERS AND STOPS RECORDING. PLEASE BEWARE OF DATA LOSS DUE TO “Rec Days” FUNCTION.

NOTE

Notify setting does not affect saving the recorded data. It only gives notification and keep recording until hard disk is full.

NOTE

For more specific setting about Alarm-out, use **Setup>DEVICE>ALARM>Alarm Out**.

4.3.5 Camera

- Please Click (↵) **DEVICE>CAMERA** and the following screen will display.
- Click (↵) the keyboard icon on the right-hand side of Server IP Address box and the virtual keyboard will display. Please register the Server IP Address.

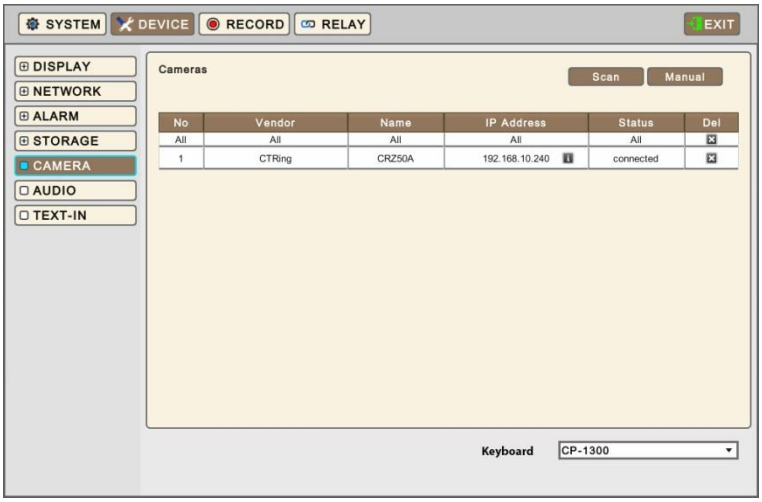

- If the camera which users would like to add is not in the list, users can add the camera in manual. (The camera needs to support RTSP)
- When users click the “Scan” button, the discovered cameras in the network will display.

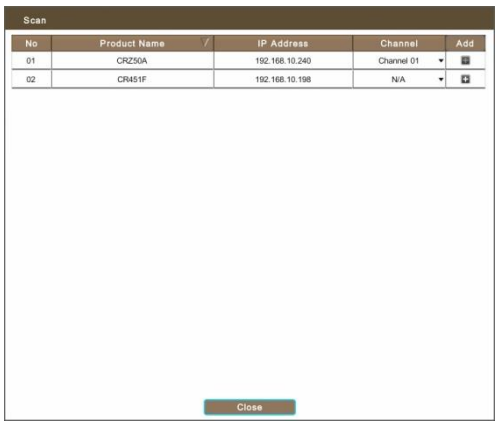

- Choose the channel of each camera which users would like to add.
- If users click the “Add” column, then the camera in the network will be automatically added in sequence.
- Some of cameras may ask the password to connect. Please check the camera information.
- When users would like to remove the camera which is added, please click the “Del” icon
- If the camera which users would like to use will not be on the scan list, please click the manual.

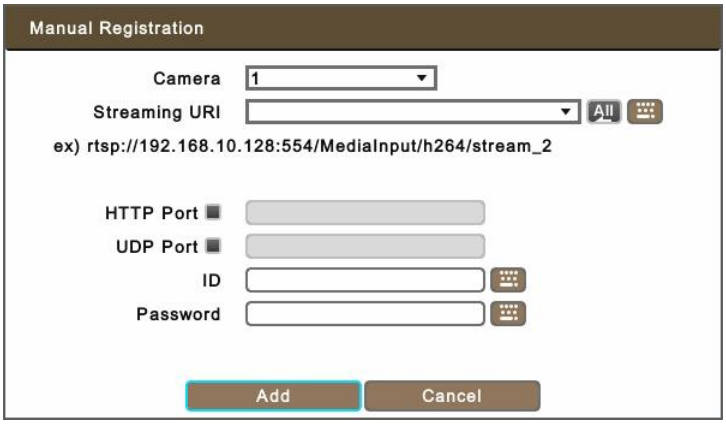

- Please fill up the Streaming URL, RTSP Port, HTTP Port, UDP Port, ID, Password and Vendor for registration

NOTE

Some cameras could not work with NVR properly, after Manual Registration

4.3.6 Audio

• Please Click (↵) **DEVICES>Audio** and the following screen will display.

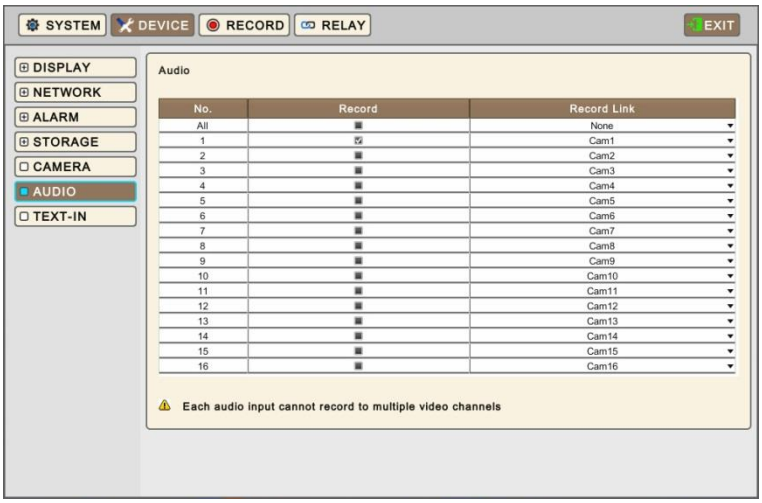

• The Audio menu allows a user to choose whether to record Audio, if connected

• When a check box is marked ☑ on Record column, corresponding audio and video from Linked Camera will be recorded. However, if the check box is not marked, audio will not record. And If Click (↵) 'All', all items are check/uncheck at once.

• Click (↵) Drop-down list of Record Link to select Linked cameras

CAUTION

AN AUDIO INPUT CANNOT BE LINKED TO 2 OR MORE VIDEO CHANNELS.

4.3.7 Text-In

NOTE

Please refer to "**11. TEXT-IN**".

4.4 RECORD

4.4.1 Record

• A NVR has 3 different types of recording mode as followings. A user may combine those 3 and apply by hour basis.

- **Continuous:** record continuously.
- **Alarm:** record only when Alarm In is detected.
- **Emergency:** record when a user presses **Panic** key. (Front panel, Mouse selection)

Profile

• Please Click (↵) **Profile** and the following screen will display.

• The menu allows a user to check Encoder, Resolution, Frame and Bitrate.
• Users can change those settings from Camera.

4.4.2 Schedule

• Please Click (↵) **RECORD>Schedule** and the following will display.

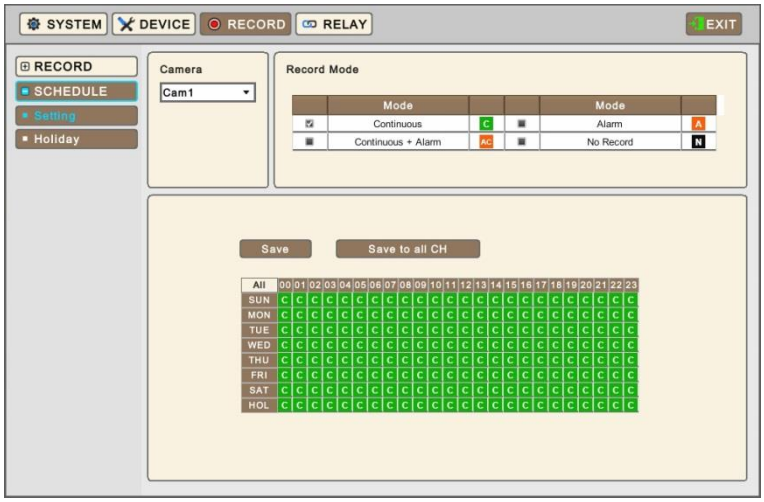

Setting

• The Schedule table displays one week divided by hour and date. Each cell represents one hour. A user may choose appropriate recording conditions by hour. Holidays could be defined by a user separately.
• Click (↵) Drop-down list of Camera box to select Camera.
• Please set the recording mode as follows:
  ① Mark a check box to select record mode in record mode table.
  ② Click block, row, column to register desired recording mode.
    - Click (↵) a cell and only the cell will be registered.
    - Click (↵) a row (SUN~HOL) and the entire row will be registered.
    - Click (↵) a column (00~23) and the entire column will be registered.
  ③ Click (↵) Save button to save setting
• Click and hold mouse cursor on the Schedule table and then brush as you want. The brushed cells will be registered as your record mode selection.
• Repeat the procedure for Camera No. 2 to 16. If a user wants all other cameras to have the same mode, please Click (↵) Save to all CH button.

Holiday

• Please Click (↵) Schedule>Holiday and the following screen will display.

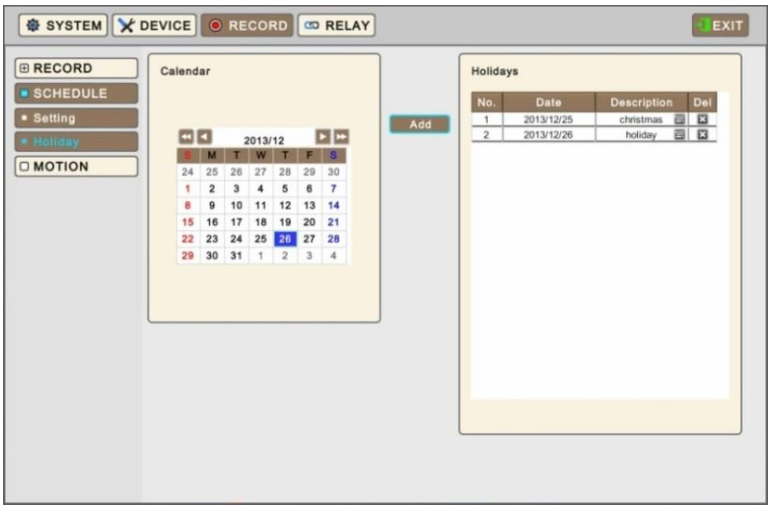

• The Holiday menu allows a user to register holidays. Please follow the registration procedure below.
  ① Use arrow buttons in the Month Calendar to select Year and Month of holiday to be registered.
    - ▶▶: Move to next 'Year'

- ◀◀: Move to previous ‘Year’
- ▶: Move to next ‘Month’
- ◀: Move to previous ‘Month’

② Click (↵) on date needed to be registered as holiday.
③ Click (↵) ADD button and Virtual keyboard will display to input description of holiday
④ Please choose ‘OK’ to confirm the input and the date will be copied to the Holidays table.
⑤ If wish to delete the registration of a certain holiday, please Click ☒ button next to the Holiday table.

• Since holidays may vary every year, we recommend user to update on a regular basis.

4.5 RELAY

• Please Click (↵) **RELAY** and the following screen will display.

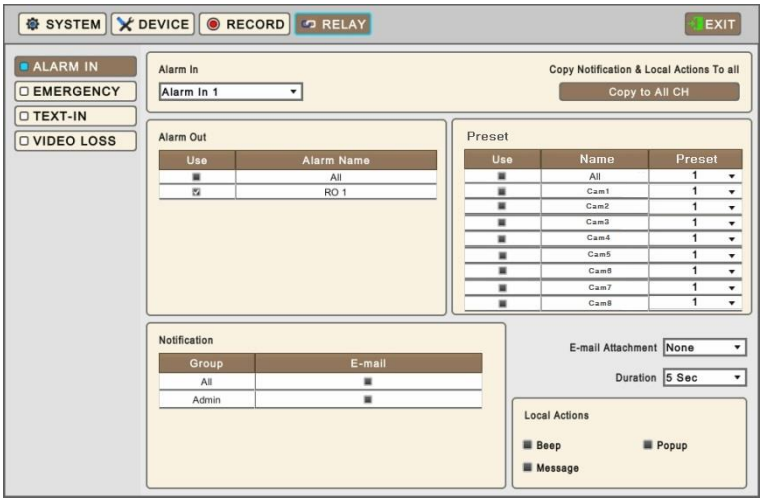

• The Relay menu allows a user to setup action plans when events (Alarm In, Emergency, Text-In, and Video Loss) happen. A user may activate Alarm Out, PTZ Preset, Email Notification, Beeping, OSD popup and Message by those.

4.5.1 ALARM IN

• Select Alarm out, Preset and Notification to use when Alarm In sensor goes off.
• Link Notification displays E-mail addresses registered in **System>General>Account>User>Email**
• Please follow the setup procedures below.

① Click (↵) Drop-down list of Alarm In box and select Alarm In.
② Select Alarm out to be worked when selected Alarm In is on. Please check ☑ a check box of use column on Alarm Out box. More than one alarm outputs can be set. If Click (↵) ‘All’ of use box, all items are checked/unchecked at once.
③ Select cameras for preset when Alarm In is on. Please check ☑ a check box of use column on Preset box. More than two cameras can be set. If Click (↵) ‘All’ of use box, all items are checked/unchecked at once
④ Click (↵) Drop-down list of Preset to change Cameras preset. If Click (↵) Drop-down list of all preset box, all items are changed at once
⑤ Select group for notification when Alarm In is on. Please check ☑ a check box of E-Mail box. More than two Groups can be set.
⑥ Click (↵) Drop-down list of E-mail Attachment box to attach None, JPGE or EXE
⑦ Click (↵) Drop-down list of Duration column to set the duration of recorded data for attached EXE
⑧ Select Local Actions
-Beep: When Alarm In is on, it will give the alarm sound
-Popup: When Alarm In is on, it will make the popup screen on the main monitor
-Message: When Alarm In is on, the alarm message will pop up on the OSD
⑨ Repeat the above procedure for Alarm In 2~ Alarm In 4 (Up to 2 for **A Type** / Up to 4 for **B Type**.

• Click (↵) Copy to All CH button to copy Notification & Local Actions to all channels.

4.5.2 EMERGENCY

• Please Click (↵) **RELAY>EMERGENCY** and the following screen will display.

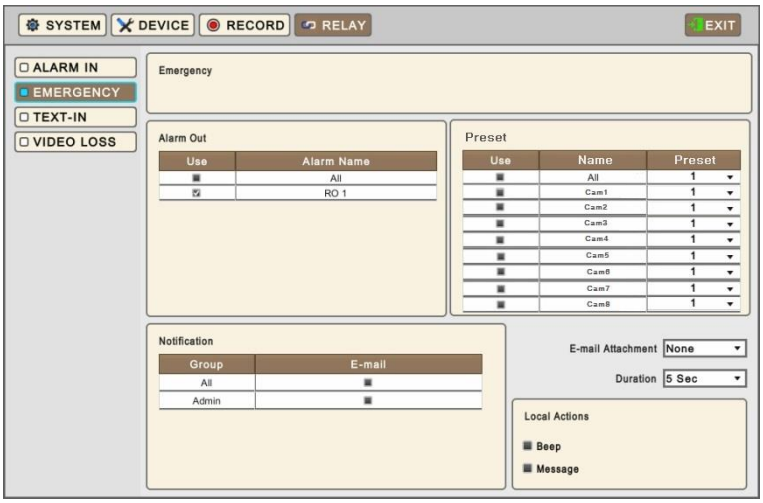

• Select Alarm out, Preset and Notification to use when Emergency button pressed.

• Link Notification displays E-mail addresses registered in **System>General>Account>User>Email**

• Please follow the setup procedures below.

① Select alarm outputs to be worked when Emergency button is pressed. Please check ☑ a check box of use column on Alarm Out box. More than two alarm outputs can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once

② Please check ☑ a check box of use column on Preset box. More than two cameras can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once

③ Click (↵) Drop-down list of Preset to use Cameras preset. If Click (↵) Drop-down list of all preset box, all items are changed at once

④ Select group for notification when video loss is occurred. Please check ☑ a check box of E-Mail box. More than two Groups can be set.

⑤ Click (↵) Drop-down list of E-mail Attachment box to attach None, JPEG or EXE.

⑥ Click (↵) Drop-down list of Duration column to set the duration of recorded data for attached EXE

⑦ Select Local Actions

-Beep: When Emergency is occurred, it will give the alarm sound

-Message: When Emergency is occurred, the Emergency message will pop up on the OSD

4.5.3 TEXT-IN

• Please Click (↵) **RELAY>TEXT-IN** and the following screen will display.

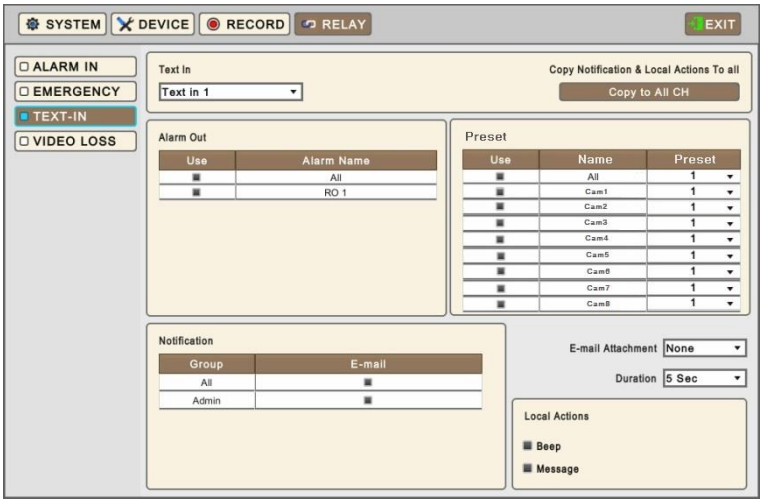

• Select cameras for Preset, Alarm Out and Notification to use when Text In comes to NVR. (PTZ Preset is frequently used for this case).

• Link Notification displays E-mail addresses registered in **System>General>Account>User>Email**

• Please follow the setup procedures below.

① Click (↵) Drop-down list of Text In box and select Text 1.

② Select alarm outputs to be worked when Text In 1 is on. Please check ☑ a check box of use column on Alarm Out box. More than two alarm outputs can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once.

③ Select cameras for preset when Text In 1 is on. Please check ☑ a check box of use column on Preset frame. More than two cameras can be set. If Click (↵) 'All' of use column, all items are checked/unchecked at once

④ Click (↵) Drop-down list of Preset to change Cameras preset. If Click (↵) Drop-down list of all preset box, all items are changed at once

⑤ Select group for notification when Text In 1 is on. Please check ☑ a check box of E-Mail box. More than two Groups can be set.

⑥ Click (↵) Drop-down list of E-mail Attachment box to attach None, JPEG or EXE.

⑦ Click (↵) Drop-down list of Duration box to set the duration of recorded data for attached EXE.

⑧ Select Local Actions

-Beep: When Text In 1 is on, it will give the alarm sound

-Message: When Text In 1 is on, the alarm message will pop up on the OSD

• Repeat the above procedure for Text In 2~ Text In 4

• Click (↵) Copy to All CH button to copy Notification & Local Actions to all channels.

4.5.4 VIDEO LOSS

• Please Click (↵) **RELAY>VIDEO LOSS** and the following screen will display.

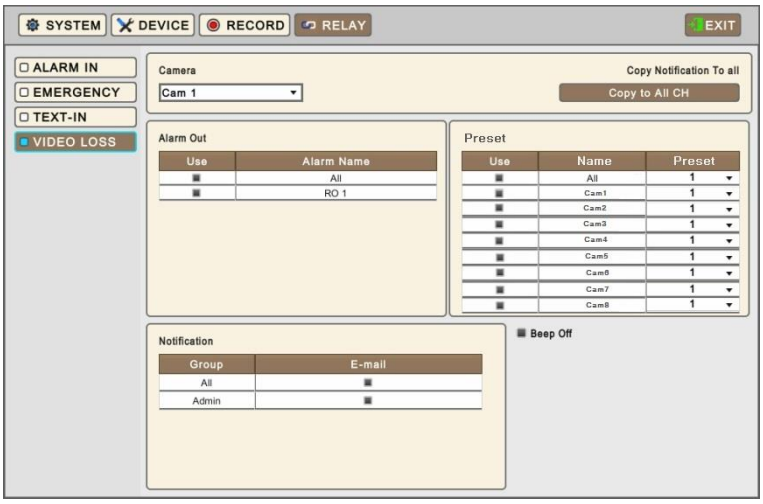

• Select Alarm out, Preset and Notification to use when Video Loss occurs on each channel.

• Link Notification displays E-mail addresses registered in **System>General>Account>User>Email**

• Please follow the setup procedures below.

① Click (↵) Drop-down list of camera box and select Cam 1.

② Select alarm outputs to be worked when video loss is occurred to cam 1. Please check ☑ a check box of use column on Alarm Out box. More than two alarm outputs can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once

③ Select cameras for preset when video loss is occurred to cam 1. Please check ☑ a check box of use column on Preset box. More than two cameras can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once

④ Click (↵) Drop-down list of Preset to change Cameras preset. If Click (↵) Drop-down list of all preset box, all items are changed at once

⑤ Select group for notification when video loss is occurred to cam 1. Please check ☑ a check box of E-Mail box. More than two Groups can be set.

• Repeat the above procedure for Cam 2 ~ Cam 16.

• Click (↵) Copy to All CH button to copy Notification to all channels.

• Click ☑Beep Off to deactivate alert sounds from video loss. Apply to all channels.

5. OPERATION INSTRUCTION

5.1 Viewing

5.1.1 First Image

• Power on NVR and the attached cameras (if any) will display.

• The screen will display date/time and icons below.

Icon	Description	Icon	Description
C	Continuous recording schedule	A	Alarm recording schedule
AC	Continuous + Alarm recording schedule	N	No Recording schedule
	Continuous recording mode		Alarm recording mode
	Emergency recording mode		Audio recording (When connected)
2	Remote access indication/ No. of connected users (up to 2)		Recording in progress
Audio 1	Audio channel		In channel sequencing
2013/12/16 PM 12:00:00	Date / Time		Master Alarm Overwritten
	HDD Overwriting Disabled (Recording)		HDD Overwriting Enabled
KBD1	Keyboard controller mode	XX%	Estimated HDD usage
	Spot out Enabled		Spot out sequencing
	Key Locked		

• On the right bottom side of the screen, disk usage will show by %.

• On the left top side of each channel screen C, A, AC, N, , , , , icon will show as its operation.

• At the normal state, HDD Overwrite mode is on and icon shows.

- When Overwrite mode is off at **DEVICE>STORAGE>Overwrite**, will show.
- Click Emergency recording button, icon will show.
- Click Audio button, icon will show. And Click Audio button again to reactivate the Audio.

NOTE
Note that the audio on/off is NOT for RECORDING. This button selection is for Audio out to NVR's 'Line/Speaker Out'.

5.1.2 View Format

- The available view formats when the Main Monitor is in viewing mode include Full Screen (Single channel View), Split Screen, Channel Sequencing Screen and PIP screen.
  - **Full Screen:** Please press camera select key (**1~16**) to view the corresponding camera image in full view format.

NOTE
Using a mouse: Double Click to view the corresponding camera image in full view format and Double Click again to back to Split Screen.

  - **Split Screen:** Please press **DISPLAY** key and the available split screens (or multi-window view formats) will display alternately (i.e., 1, 4, 8, 9, 10, 16).
  - **Channel Sequencing:** Please press **SEQUENCE** key to display images in sequencing view format periodically. This automatic sequence function is not limited to the full screen format, but can be used in any view mode. In 8 channels NVR, 1 or 4-camera sequencing view mode is possible and in 16 channels NVR, 1, 4, 8, 9 or 10-camera sequencing view modes are possible.

5.1.3 Digital Zoom

- Select a Channel into Full Screen.
- Drag a portion to zoom by mouse.
- Double Click mouse to exit zoomed screen.
- This function works only in the full screen. A user cannot use the digital zoom function in split screen format, channel sequencing or PIP mode.

5.1.4 Freeze Live Image

- Press **FREEZE** key while viewing live image to pause the image.
- The Freeze function works only in the full screen or split screen formats. Please do not use this function in channel sequencing mode or in PIP mode.

5.1.5 Pan / Tilt / Zoom Control

• Press **PTZ** key to operate a PTZ camera connected to NVR. PTZ operations are only available in the full screen format.

• In Pan/Tilt/Zoom mode, the number of channel is displayed on the bottom of the screen.

• Please refer the below for PTZ OSD menu.

Key	Function
SPEED	Set the camera moving speed
	Up/Down/Left/Right rotation
	Zoom out
	Zoom in
	Focus Far
	Focus Near
	Iris Close
	Iris Open
Set	Save Preset
Goto	Go to the Preset
Menu	Go to OSD main menu
Tour	Run Group Tour 1~9
Pattern	Run Pattern 1~9

• To use a mouse in Pan/Tilt mode, select and double click a channel first. Right Click on selected channel to open Channel menu then Click “PTZ” to activate PTZ control OSD menu. A key pad control will show as follows:

• To add new preset, select Preset No and Set button Click.

• To move to preset, select preset No and Goto button Click.

• Available 1 ~ 255 Preset numbers can be saved it depends on camera specification.

• Press Menu button to pop-up PTZ camera OSD setup screen and set up Tour and Pattern items.

- Since these functions make use of a memory function of the camera itself, a user should set them in Camera OSD.
- Once a user completes the setup, close the Camera OSD menu.
- A user can conveniently use Tour and Pattern functions simply by Clicking Tour and Pattern buttons.
- Please refer the PTZ camera manual for instruction of Tour and Pattern.

NOTE

Suppose a command for using Tour function is 71 ~ 79 + Preset and if you had set Tour to 70, use Preset No: 1 ~ 9 + Tour button to activate the Tour function (70 + 1~9).

NOTE

It is required to set Menu as Preset number 95 from camera in order to call camera menu display by Clicking 'menu' button or using 95+Goto button. Please refer the PTZ camera manual for details.

5.1.6 System Log

• Pleas Press key and the System Log screen will display.

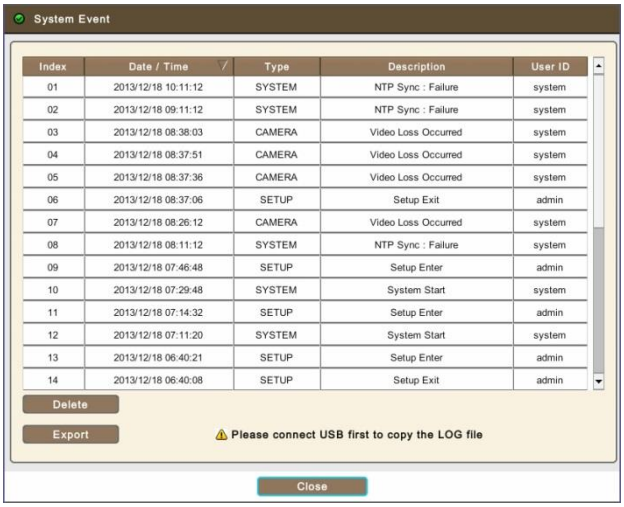
System Event
Index
Date / Time
Type
Description
User ID
01 2013/12/18 10:11:12 SYSTEM NTP Sync : Failure system
02 2013/12/18 09:11:12 SYSTEM NTP Sync : Failure system
03 2013/12/18 08:38:03 CAMERA Video Loss Occurred system
04 2013/12/18 08:37:51 CAMERA Video Loss Occurred system
05 2013/12/18 08:37:36 CAMERA Video Loss Occurred system
06 2013/12/18 08:37:06 SETUP Setup Exit admin
07 2013/12/18 08:26:12 CAMERA Video Loss Occurred system
08 2013/12/18 08:11:12 SYSTEM NTP Sync : Failure system
09 2013/12/18 07:46:48 SETUP Setup Enter admin
10 2013/12/18 07:29:48 SYSTEM System Start system
11 2013/12/18 07:14:32 SETUP Setup Enter admin
12 2013/12/18 07:11:20 SYSTEM System Start system
13 2013/12/18 06:40:21 SETUP Setup Enter admin
14 2013/12/18 06:40:08 SETUP Setup Exit admin
Delete
Export
Please connect USB first to copy the LOG file
Close

• System Event shows all logs of actions taken by users.

5.1.7 Key Lock

• Press to operate the key lock function. This function is indicated by icon in the center of the screen.
• Once the Key Lock function is activated, a user cannot use any key. If wish to use a key, please enter the correct password to release the key lock function.

5.1.8 Emergency Recording

• When a user presses **Panic** key or , recording starts right away regardless of the recording mode. A user can modify the Emergency recording conditions. **SETUP> RECORD > EMERGENCY**

5.1.9 Alarm Out Control and Acknowledge

• Press and will be able to activate Acknowledge or Open Alarm out Control.
• Press to instantly disable Alarm out signal.
• Press to open alarm out control window to manually activate Alarm out.

5.2 Playback

5.2.1 Search

- Press key on the System Menu Bar, or Press Search button on the front of the NVR and the following Search menu will display.

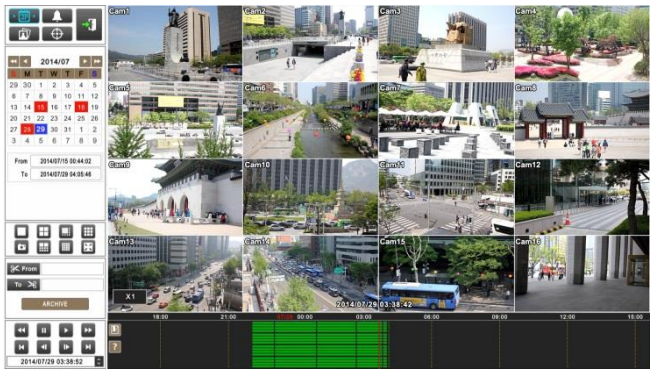

- There are four ways to search video; calendar, event, thumbnail and smart search.
  - **Calendar Search:** search by calendar.
  - **Event Search:** search by event.
  - **Thumbnail Search:** search by snapshot of the recorded data.
  - **Smart Search**: search by smart option.
- There are two other functions in playback mode;
  - : Able to access the saved Bookmarks and play the data from the marked time. Refer to **5.4 Bookmark** for more information.
  - : Able to show the color coding of the time bar. Each color represents diffenrent recording mode.
- Playback mode runs in the available maximum number of split screen format. To change the viewing mode, please press **DISPLAY** key or **Camera Select** key (1~16).

NOTE

Using a mouse: Double Click to view the full screen and double Click one more time to back to Split Screen.

NOTE

Pushing a wheel of mouse: Enter Playback mode.

- Following is the key usage found in playback mode. A user may also use the keypad provided on the screen.

Go to Start		• Go to start of recorded data
REW		• Fast backward playback (changes up to x128 with each press)
BACKWARD		• Frame-by-frame reverse still image playback
PLAY		• Playback mode: 1X PLAY
PAUSE		• PAUSE
FORWARD		• Frame-by-frame forward still image playback
FF		• Fast forward playback (changes up to x128 with each press)
Go to End		• Go to end of the recorded data

- Press key to leave the playback mode.

NOTE

Time period on the time indication bar can be adjusted by mouse **scroll**. It can be adjusted by 1 min to 3 hour time duration blocks.

NOTE

If you don't use mouse or front button while the NVR is playing recorded data, the NVR would stop playback in 10 minutes automatically.

Calendar Search

• As enter Search mode following will display.

• Please Click (↵) to do Calendar Search. (Default display)

• Dates and Time with recorded data available will be high-lighted in Red color.

• Follow the procedure below to search video by calendar.

① Select Year and Month by using the arrow buttons in the calendar.

- ▶▶: Move to next 'Year'
- ◀◀: Move to previous 'Year'
- ▶: Move to next 'Month'
- ◀: Move to previous 'Month'

② Click (↵) on a certain date wish to playback. The date will be displayed in Blue color.

③ Click (↵) on the time bar and Red line will move to the selected time and playback will begin instantly.

• There are three other functions in this mode;

- : This function allows a user to take screenshot and save to USB in jpeg format.
- : This function allows a user to choose split mode among 1, 4, 8, 9, 10 and 16.
- : This function allows a user to use full screen mode.
-

: The Archive function allows a user to copy the recorded video in EXE or AVI format to a storage device (USB memory stick or DVD-RW). Refer to **5.5 Archive** for more information.

Event Search

• This Event Search is useful when users set up event recording like Motion, Alarm In (if any), Text In (if any), and Emergency.

• Please Click (↵) to do Event Search and the following Search menu will display.

• Press on the side and the following Date / Time Setup menu will display.

• Follow the procedure below to search video by event.

① Select Event Search start date and time.
② Select Event Search end date and time.
③ Select cameras (video) to be included. One or more cameras can be selected.
④ Choose ‘Event Search’ and select specific event(s) to be included. Or choose ‘POS/ATM Search’ then virtual keypad is display. Type a keyword to search by.
⑤ Click “OK” to search the recorded data for selected event and key word transactions.
⑥ Searched data will be listed on the side.

• There are three other functions in this mode;

- : This function allows a user to take screenshot and save to USB in jpeg format.
- : This function allows a user to choose split mode among 1, 4, 8, 9, 10 and 16.
- : This function allows a user to use full screen mode.

NOTE
When selecting camera, more the one camera can be selected.

Thumbnail Search

• This Thumbnail Search is useful when users search by snapshot of certain period. This is also called as ‘Panorama Search’.

• Please Click (↵) to do Thumbnail Search and the following Search menu will display.

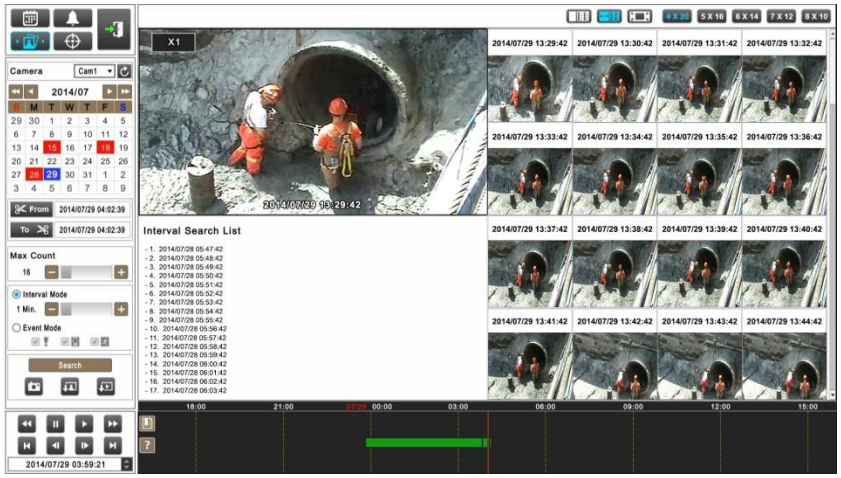

• Follow the procedure below to search video by Thumbnail.

① Select Camera number and click the refresh button.

② Select certain period. (“From” and “To”)

③ Select the number of “Max Count”. (16 ~ 80)

④ Select the interval of the playback. (1min ~ 60min)

⑤ Click “ Search” to search the recorded data

⑥ Searched data will be listed on the side

• There are five other functions in this mode;

– : This function allows a user to take screenshot and save to USB in jpeg format.

– : Able to save the listed images.

– : The Archive function allows a user to copy the recorded video in EXE or AVI format to a storage device (USB memory stick or DVD-RW). Refer to **5.5 Archive** for more information.

– : This function allows a user to change viewer size.

– :: This function allows a user to choose split of listed snapshot among 4x20, 5x16, 6x14, 7x12 and 8x10.

NOTE

Users can select Interval mode or Event mode on thumbnail search.

Smart Search

- This Smart Search is useful when users search by designating the certain area. If there is any movement in the area, Smart Search will show the video automatically.
- Please Click (↵) to do Smart Search and the following Search menu will display.

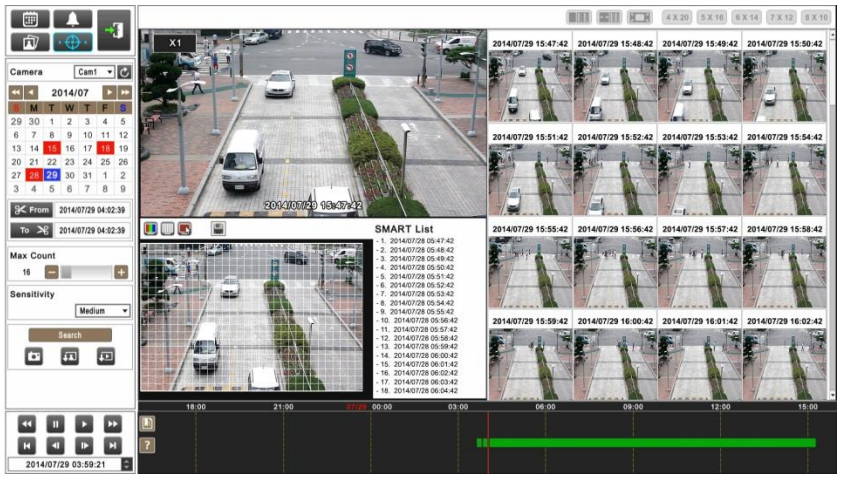

- Follow the procedure below to search video by Smart.

① Select Camera number and click the refresh button.
② Select certain period. (“From” and “To”)
③ Select the number of “Max Count”. (16~80)
④ Select Sensitivity. (Lowest, Low, Medium, High and Highest)
⑤ Select the area in an individual channel by dragging the certain area. (More than 2 areas can be designated in the setting pane.)

- : This function allows a user to change grid color (Black and White).
- / : This function allows a user to select and deselcet the all area once.
- / : This function allows a user to select or deselect the area by drag the mouse.
- : This function allows a user to save the area.

⑥ Click “ Search” to search the recorded data
⑦ Searched data will be listed on the side

- There are three other functions in this mode;

- : This function allows a user to take screenshot and save to USB in jpeg format.
- : Able to save the listed images.
- : The Archive function allows a user to copy the recorded video in EXE or AVI format to a storage device (USB memory stick or DVD-RW). Refer to **5.5 Archive** for more information.

5.2.2 Digital Zoom in Playback

- Users are able to use Digital Zoon function in full screen playback.
- Drag a partition on to the screen, then the partition will enlarge as a full screen.
- Double Click the left button of mouse to exit the zoom-in screen.

5.2.3 One-touch Playback

- Press the **PLAY/PAUSE** key or Click the mouse wheel (central button) in the viewing mode. Then, a user will be able to view the recorded video right away without going through the search procedure. The video plays back the recorded video from the

last three minutes. To stop playing back the video, please press key.

5.3 Menu Bar

• Menu bar enables users to control all features as front button.

• Move mouse cursor to Left and Right margin of the screen to access Menu Bar during live monitoring.

Display Menu Bar (Left Side)		System Menu Bar (Right Side)	
Icon	**Description**	**Icon**	**Description**
	Main monitor Display (1/4/8/9/10/16)		General Status
	Activate Sequencing mode (1/4/8/9/10)		Open Event Log
	Multi Spot (1/4/8/9/10/16/None) or Spot		Enter Setup mode
	Disable Alarm out / Alarm Out control		Enter Search Mode
	OSD On / Off		Enter Archive mode
	Freeze Live Image		Activate Key Lock
	Bookmark		System Restart
	Activate Emergency recording		System Shutdown

5.4 Bookmark

• Bookmark allows a user to save certain time during both live monitoring and playback mode. And able to go back to the bookmarked time during playback.

• Press in both Live and Playback mode and the following popup window will display.

- In Live, it is only possible to add the current time to the list. Please enter Name for each of the Bookmark time. A user can check the list in playback.
- In Playback, it is possible to add, delete and play from the Bookmark List. Press Add to add the current (in playing) time to the list. Press Delete to delete added bookmark from the Bookmark List. To do playback double Click on the bookmarked time from the list.

5.5 Archive

- The Archive function allows a user to copy the recorded video from NVR to a storage device (USB memory stick).
- Please execute Archive at both Live and Playback.
- Follow the procedure.

① Press **ARCHIVE** key during live monitoring or ARCHIVE during Playback. Then, the following screen will display.

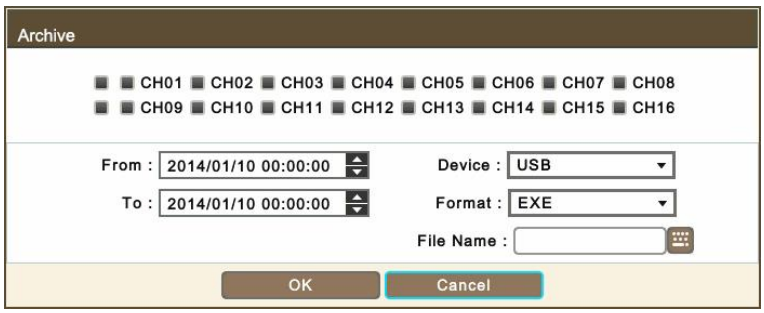

② Check ☑ a check box next to a camera with the video that want to store. A user can archive multi-channel at the same time. (only EXE format, one channel only for AVI format)

③ Click (↵) the ▼ ▲ on the right-hand side of FROM box to set the storage start time.

④ Click (↵) the ▼ ▲ on the right-hand side of TO box to set the storage end time.

⑤ Click (↵) Format box to select EXE or AVI.

⑥ Click (↵) Device box to select a storage device out of USB.

⑦ Click (↵) the keyboard display on the right-hand side of File Name box to input a file name. A user does not need to input extension (exe, avi). Please note that the file is not going to be stored unless user inputs a name.

⑧ To set a Password to the file that users want to save, mark the check box of “use Password”. Then, Click the keyboard button and set a password.

⑨ Click (↵) OK button. Then, Progress bar will display and the storage process proceeds. The progress bar may not show actual progress time. Depending on the file size, it may restart even after it shows 100%. It is important not to detach storage device until NVR displays “Archive Success” or “Failure” message.

⑩ If the archiving is done properly, Archive Success message will pop up. Please choose ‘OK’ to confirm. If the storage fails, Archive Fail message will pop up. In this case, a user may try again.

NOTE

To archive in jpeg format please use snapshot in Playback mode.

NOTE

Please do not change the settings by NVR or CMS, while archiving.

NOTE

Please enter all the necessary information before Click ‘OK’.

NOTE

If the total archiving file size exceeds 2GB then the new archived file will be produced every 2GB. From the second file it will have Date and time stamp of the starting time after the original file name given by the user.

If the total archiving file exceeds the capacity of the media then the popup message will display once the maximum capacity of the media is reached. Please change the media and press “**OK**” to proceed.

CAUTION

PLEASE DO NOT USE THE SPACE WHEN ENTER BACKUP FILE NAME.

CAUTION

DURING ARCHIVE PROCEDURE, PLEASE DO NOT DETACH STORAGE DEVICE OR POWER OFF THE NVR. OTHERWISE, IT MAY CAUSE PERMANENT DAMAGE TO THE NVR OR THE STORAGE DEVICE. IN SUCH CASE, A USER MUST REBOOT THE NVR. IF THE NVR DOES NOT OPERATE PROPERLY, A USER MIGHT NEED TO CONTACT SERVICE CENTER.

CAUTION

WHEN ARCHIVING IN AVI FORMAT, IT ONLY SUPPORTS 1CH AND DOES NOT SUPPORT PASSWORD FEATURES.

CMS Pro

Full-featured Enterprise Class Surveillance Solution

User`s Manual

This document contains preliminary information and is subject to change without notice.

6. CMS Pro

6.1 CMS Pro Features

6.1.1 Introduction

- The CMS Pro is a central surveillance system solution that monitors multiple sites with video, audio and event signals from NVRs over networks.
- The software supports different windows of live viewer, playback player, interactive map viewer, various search panes and event signal monitoring panes.

6.1.2 Features

- This program does not limit the number of units to register and monitor. The program displays up to 512 live videos; up to 256 channels on one screen and 256 channels on the other screen. The program supports as many monitors as a PC supports. Users may open windows or panes of live video displaying, data playing, event signal monitoring, map displaying, etc. Users can compose the central management system by choosing required widows or panes.
- The software supports different windows of live viewer, interactive map viewer, and event signal monitoring panes.
- The program displays event signals in real-time by connecting to devices over the network.
- On the program, users may control PTZ cameras and relay outputs on the server or NVR. By attaching microphone and speaker system to devices on site, users may make bi-directional audio communication over the network.
- The map supports multi-layer structure, so that each map on different layers can respond interactively. On the map, users may lay out icons of each device. Event signal triggers the icons on the map to blink, so that users may monitor event signals on the map. And Users can check the live view of individual camera on the map by clicking the video icon.
- With 5 different types of search function, users can search the recorded data according to user's needs.

WARNING
DUE TO A LIMITATION OF A PC, CONNECTING MORE THAN 16 HD-SDI (FULL HD) CAMERAS MAY RESULT IN MALFUNCTIONING OF THE SOFTWARE. TO CONNECT MORE THAN 16 HD-SDI (FULL HD) CAMERAS, PLEASE ENABLE DUAL STREAMING OPTION ON THE NVR.

6.1.3 System Requirements

- CMS Pro may not run properly if the PC does not meet minimum requirements. Other programs should not run on the same PC where this is running. Otherwise, CMS Pro software may not perform as designed.

	Minimum	Recommended
CPU	Intel Core i5	Intel Core i7
Main Memory	2GB	4GB or higher
Video Memory	1GB	2GB or higher
Display Resolution	1024 x 768 (with 32bit color) or higher	
HDD Storage Space	160GB or higher	
Network	100~1000 Mbps Fast Ethernet	
Operating System	Windows XP Professional SP3 / Windows 7 (32/64) / Windows 8 (32/64)	
Others	DirectX 9.0 C or higher	

6.2 Installation

6.2.1 Software Installation

• Please follow the program installation procedures below.

① If an old version of CMS Pro program was installed, it is recommended to completely uninstall or delete the old version.

② Insert the provided CD in a PC.

③ Run the CMS Pro Setup.exe file.

④ When the following screen appears, click “Next.”

Setup - CMS Pro
Welcome to the CMS Pro Setup Wizard
This will install CMS Pro on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

⑤ When the following screen appears, select folder and click “Next.”

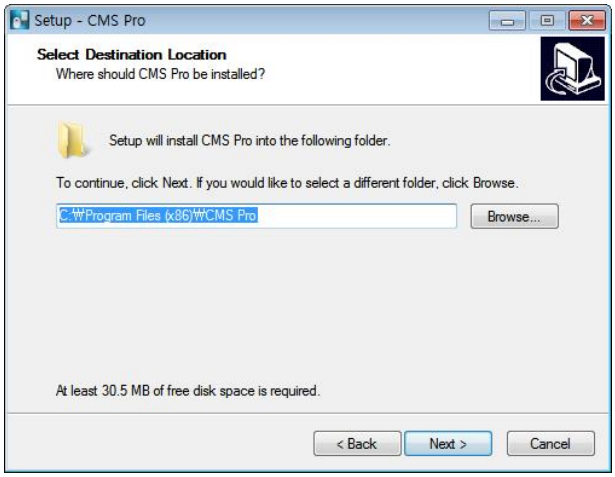
Setup - CMS Pro
Select Destination Location
Where should CMS Pro be installed?
Setup will install CMS Pro into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:₩Program Files (x86)₩CMS Pro
Browse...
At least 30.5 MB of free disk space is required.
< Back
Next >
Cancel

⑥ When the following screen appears, select the check box according to user’s preference and click “Next.”

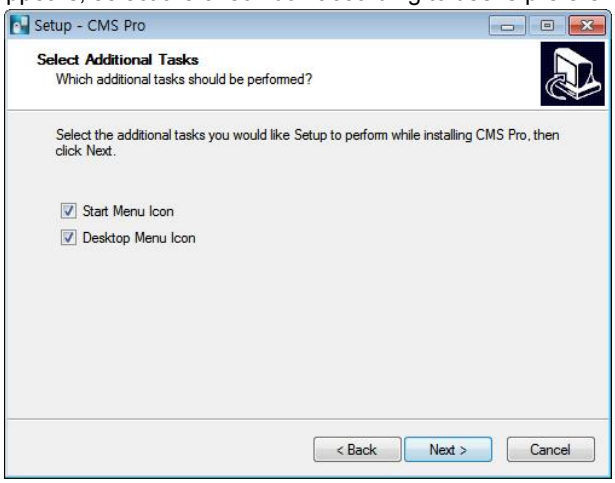
Setup - CMS Pro
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing CMS Pro, then click Next.
Start Menu Icon
Desktop Menu Icon
< Back
Next >
Cancel

⑦ When the following screen appears, click “Install.”

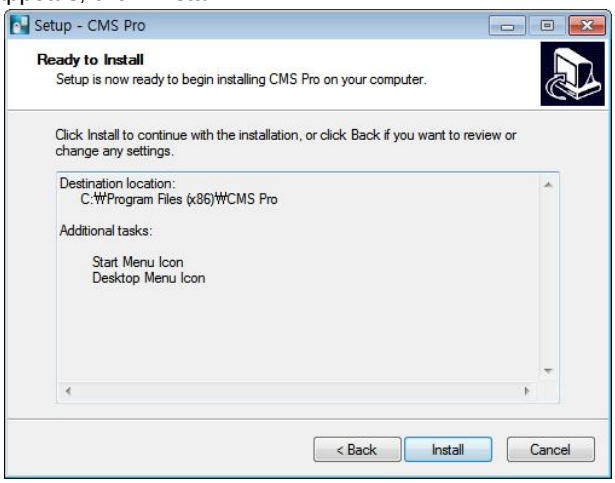
Setup - CMS Pro
Ready to Install
Setup is now ready to begin installing CMS Pro on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:₩Program Files (x86)₩CMS Pro
Additional tasks:
Start Menu Icon
Desktop Menu Icon
< Back
Install
Cancel

⑧ When the following screen appears, click “Finish” to complete the installation.

Setup - CMS Pro
Completing the CMS Pro Setup Wizard
Setup has finished installing CMS Pro on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Run CMS Pro
Finish

NOTE

If the PC has a previously installed CMS Pro, the installer may ask whether to overwrite the existing DB or not. The DB contains setting values on the program. If desired to maintain the existing values, click ‘No’ button.

6.2.2 Login

6.2.2.1 Login Process

- Open the CMS Pro. Users may open it by selecting the execution file through ‘Start’ menu [Start] – [CMS Pro] or by double-clicking the execution icon on the desktop.
- Select a user ID in the ‘Login’ window. Users may see the entire list of IDs that are registered into the program by clicking on the drop-down menu in the right-side. Initially, only the Administrator is registered as default.

- Enter the corresponding password with the selected ID. The default password of the ‘**Admin**’ ID is ‘**1111**’. Administrator may change the password in the program.

NOTE

Users may change the password in [Setup] – [Change Password] menu. For the detailed information, please refer to the 'Chapter **6.4.7 Change Password'** page.

The CMS Pro saves settings and layouts on the program of the current user when the program is closed.

6.3 Menu

• Below shows the brief explanation of each part on the screen.

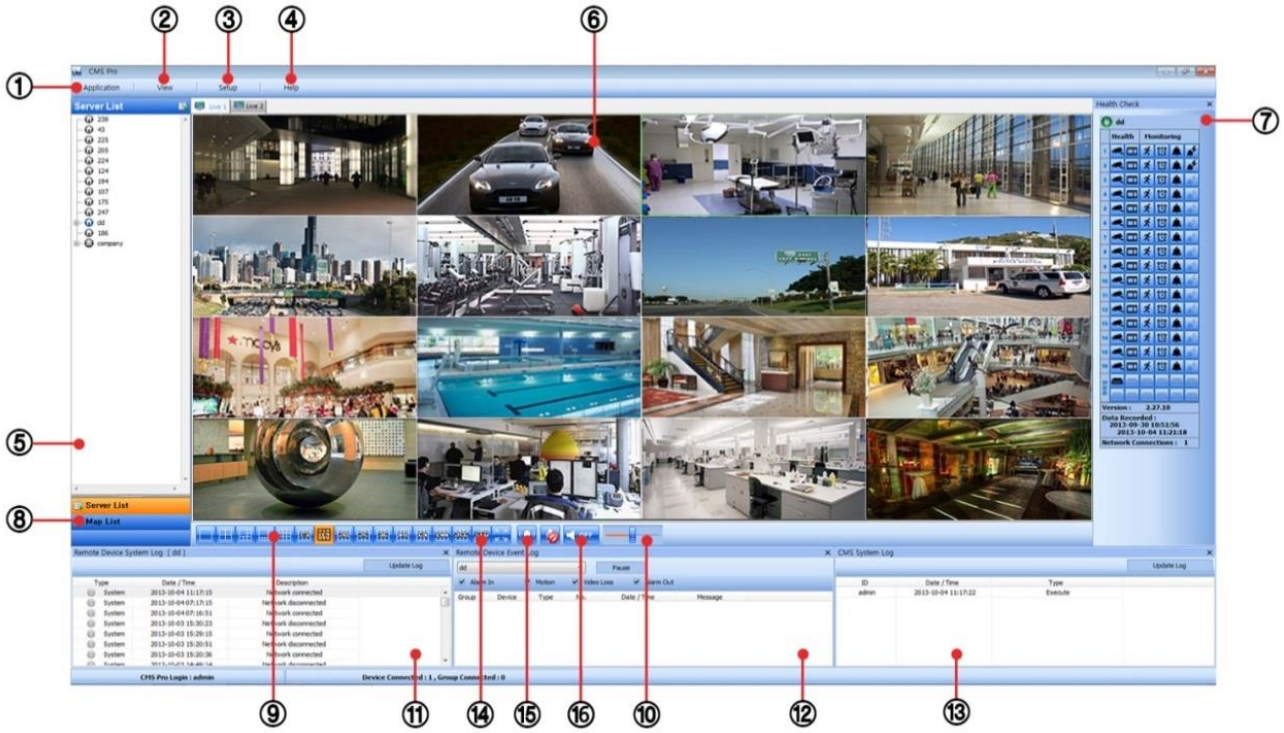

1	Application
2	View set
3	Setup menu
4	Help menu
5	Server list pane
6	Display windows
7	Health check pane
8	Map list pane
9	Screen split selection icons
10	Audio control bar
11	Remote device system log pane
12	Remote device event log pane
13	CMS system log pane
14	Sequencing
15	Event Beep On / Off
16	Audio Status icon

6.4 Setup

6.4.1 Local Setup - Device

• Please make sure the network setting of NVR has been done properly prior to the remote connection setting.

6.4.1.1 Remote Site Connection Setup

• Click Setup – Local Setup – Device to enter the setup and a dialog will pop up as below picture.

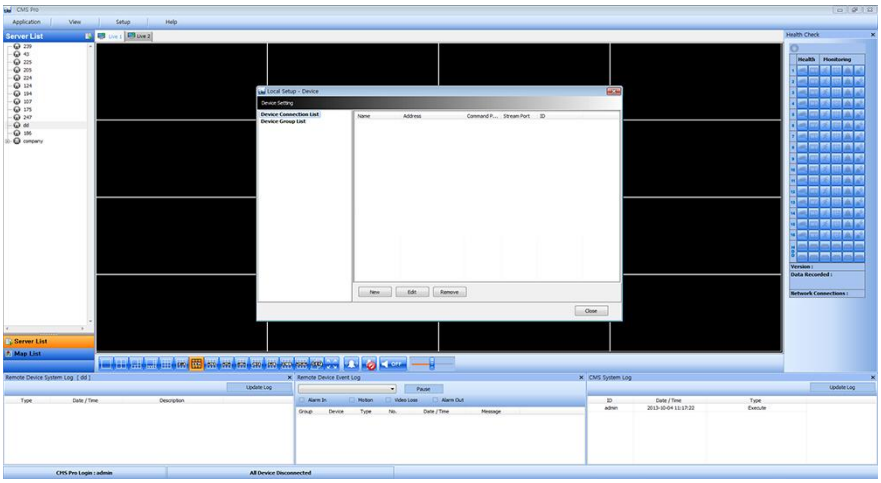

6.4.1.2 New Device Register

Device

• Select “Device Connection List” on left-hand side and click [New] to register new devices.

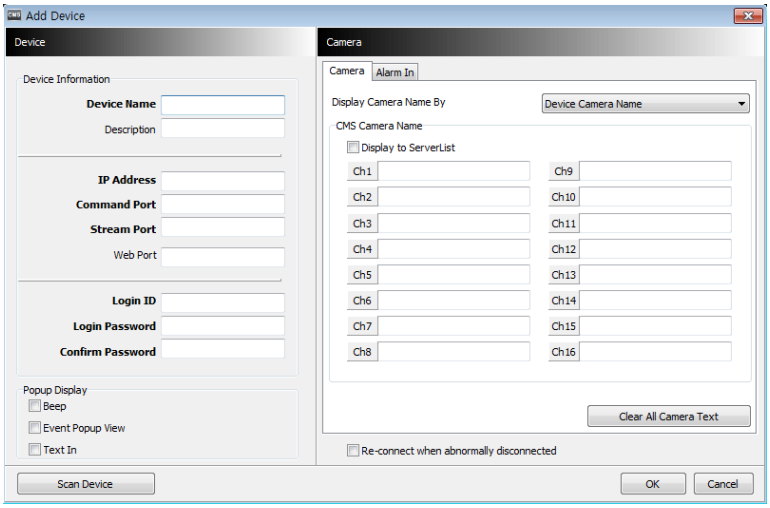

• Describe the connection information as below. A user must fill in where information requested in **bold**.

- **Device Name**: Type the NVR name to be displayed in the server list pane. Please note that this name has no relation to the ID registered in NVR. Users may create a name to be easily distinguished.
- **Description**: Type brief description of the site
- **IP Address**: Input IP address or Domain Name of NVR (check from the **SETUP>DEVICES>Network** in NVR)
- **Command Port**: Input Administrator’s number among port numbers set in NVR (check from the **SETUP>DEVICES>Network** in NVR). Default port number is **5920**
- **Stream Port**: Input Video/Audio number among port numbers set in NVR (check from the **SETUP>DEVICES>Network** in NVR). Default port number is **5921**
- **Web Port:** Input Web number among port numbers set in NVR (check from the **SETUP>DEVICES>Network** in NVR). Default port number is **80**.
- **Login ID**: Type authorized ID of the NVR. Default ID is **admin**.
- **Login Password**: Type correspond password of the ID. Default Password is **1111**
- **Confirm Password**: Retype the password to confirm
- **Pop up Display:** A user can set both video and text-in pop up or beep on corresponding channel when event occurs.

Camera

- Choose a camera name between NVR and CMS setting or both.
  - Device Camera Name: Display camera name of NVR.
  - CMS Camera Name: Display Camera name of CMS.
  - Both (Device-CMS) Camera Name: Display both as [NVR name]-[CMS name].
- If users mark the “Display to Server List”, camera name is displayed in the server list.
- Type the name of each camera in “Camera Name” item.
- Users will be able to type not only in English but also in their own languages.
- It is possible to erase all names by clicking “Clear all names”.
- Save and close the setting panel by clicking “OK”.
- If users wish to exit without saving, then click “Cancel”.
- If users mark the “Re-connect when abnormal disconnected”, CMS Pro will automatically verifies the network condition, then tries reconnecting to the site.

Alarm In

- Alarm In name setting on CMS, when Alarm In event occurs.
  - If users check “Display to Event Log” registered name shows on event log.
  - “Clear all Text” : remove all registered name

Scan Device

- This function automatically detects and NVRs/Servers which are connected under the same local router as the PC.
- Click “Scan Device”, then following will pop up. Selected desired NVR and click ‘Add Device’, and then type a password accordingly.

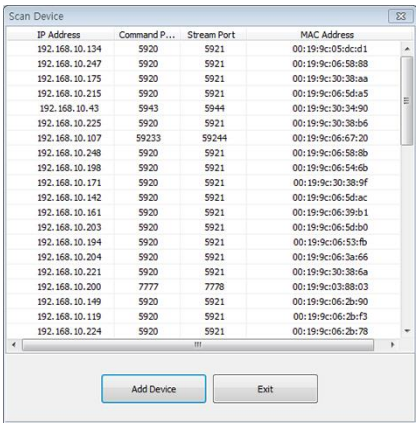

6.4.1.3 Edit Registered Site

- Select a site to adjust on local setup window and click “Edit”
- Change the setting then click “OK” to save and exit.
- Alternately, users can also edit the site by right clicking the mouse on the server name in the Server List.

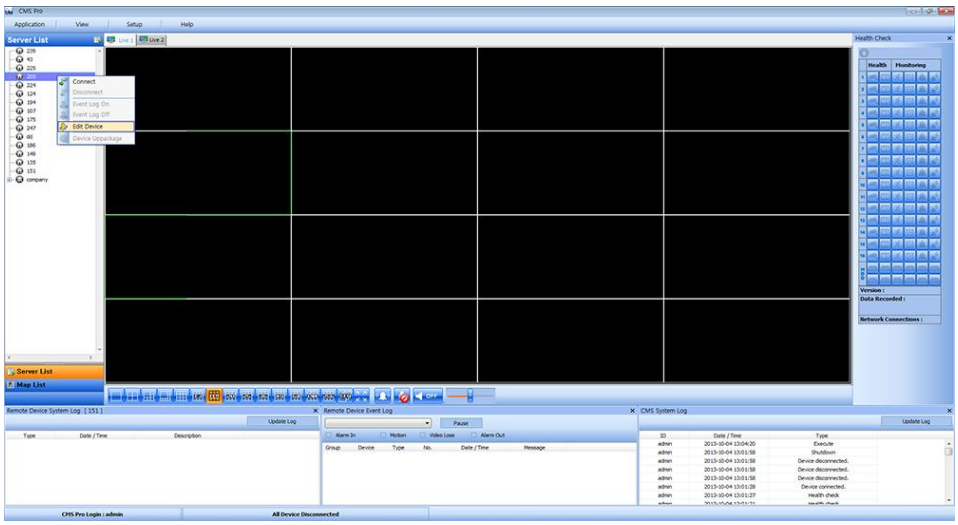

6.4.1.4 Remove Registered Site

- Select a site to delete on local setup window and click “Remove”
- The site will be removed on the local setup window.

6.4.2 Device Group Setup

- It is possible to make a group of multi-devices for user’s convenience.
  - Users are able to combine multiple devices as one group of connection for easy control.
  - Users are able to extract the cameras from registered NVRs to make own group of display.

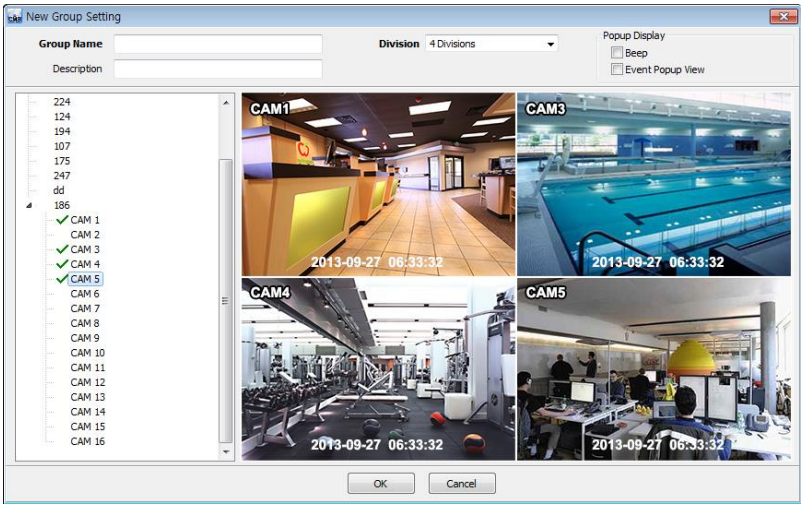

6.4.2.1 New Grouping Setting

- Click Setup – Local Setup Device – Device Group List to add/edit a group
- Click “New” to set up the Group Name, select Division (from 4 to 144), and type the Description.
- Select the site from the server list in the left-hand side of the window.
- Right mouse click and click “connect” on the site or double clicking the device will show the tree of cameras and here users can extract the channel they want.
- To add the channels into new group, drag & drop or double click on the camera.
- Users are able to continue to extract and add the channel by connecting other NVRs.
- Click “OK” to save and exit.
- Users are able to set the pop up display function.
- The newly added group will be displayed under ‘Server List’ when you go back to live screen.

6.4.2.2 Edit Group Setting

- Select a group to adjust on Group Setting window then click “Edit”
- Change the setting then click “OK” to save and exit.
- Right click on server list and select the “Edit Device”, and then following pop up window will show up. Users are able to set the “description” and Popup Display

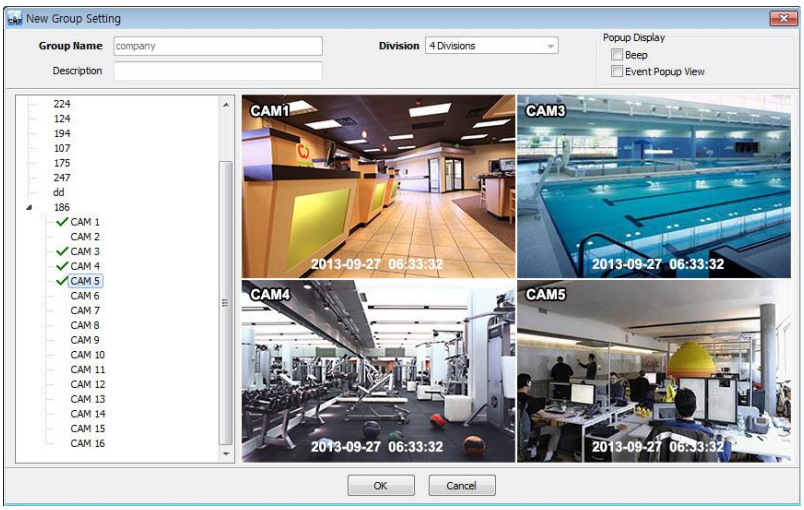

6.4.2.3 Remove Group Setting

- Select a group to delete on Group Setting window then click “remove”
- The group will be removed on the local setup window.

6.4.3 Local Setup - Environment

- This enables users to adjust the default setting of CMS Pro software for user’s convenience.

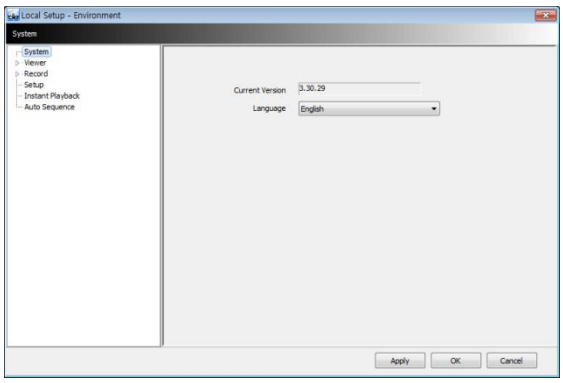

6.4.3.1 System

- Users are able to check the current version of the software.
- Users are able to select the language among English, Korean, Japanese, Russian, Turkish, Finnish, German, French and Thai.

6.4.3.2 Viewer

- **Audio**

  - Users are able to control the Audio volume.

- **Video Display**

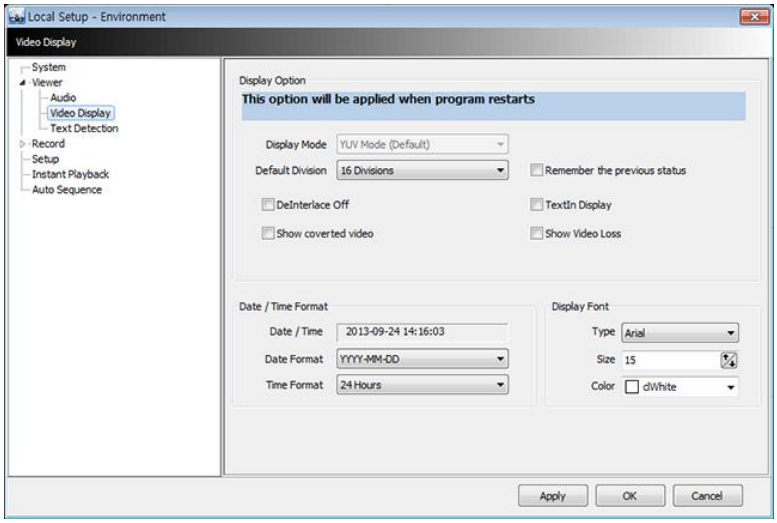

- Users can adjust and set the environment of the Display window.
- The Display option will be applied after program restarts and the contents are as below.
  - Display Mode: It shows the format of display and YUV Mode is the default and it is not adjustable.
  - Default Division: Users can select the number of division of display channels when the program initially displays the screen. (from 1 to 144 division)
  - Users are able to save division of display by marking the “Remember the pervious state” check box.
  - Deinterlace Off: This function changes playback display into Progressive Scan or Interlace Scan. Uncheck ( ) Deinterlace Off, then box will display as the Progressive Scan and shows the better picture quality.
  - Show converted video: if this box is checked, covert cameras from NVR will show up.
  - Text-In display: Text data will be overlaid on live and playback.
  - Show Video Loss: Popup window will display, if video loss occurs on the connected NVR.

NOTE

If users check “Show covert video” box, this setting will be applied to playback as well.

NOTE

All changes made above will be applied after program restarts.

- Date / Time format: Users can adjust and set the mode of date / time display in accordance with the location.
  - Date/Time: show current time.
  - Date Format: select the date format among YYYY-MM-DD/MM-DD-YYYY/DD-MM-YYYY.
  - Time Format: select the time format between 24Hours/ 12 Hours AM/PM.
- Display Font: Users can change the font of the name and display time of each channel.
  - Type: select the type of font between Arial and Courier.
  - Size: select the size of the font from 10 to 20and the default is 15.
  - Color: select the color among 16 different colors.

- **Text Detection**

  When the software can pop-up a notice windows when a certain text is detected from a NVR that has an attached Text/POS device.
  - Device: choose a device
  - Message: add message like ‘VOID’. (When added message – ‘VOID’ – occurs from NVR, window will pop up.)

6.4.3.3 Record

- Backup

  Users can customize the storage path of the image file of Screenshot or Zoom in Screenshot by typing the path or clicking the folder icon.
  - Save Directory (Screenshot): Select the save directory by designating the folder in the PC and save format between bmp and jpg.
  - Save Directory (Zoom in Screenshot): Select the save directory by designating the folder in the PC and save format between bmp and jpg.

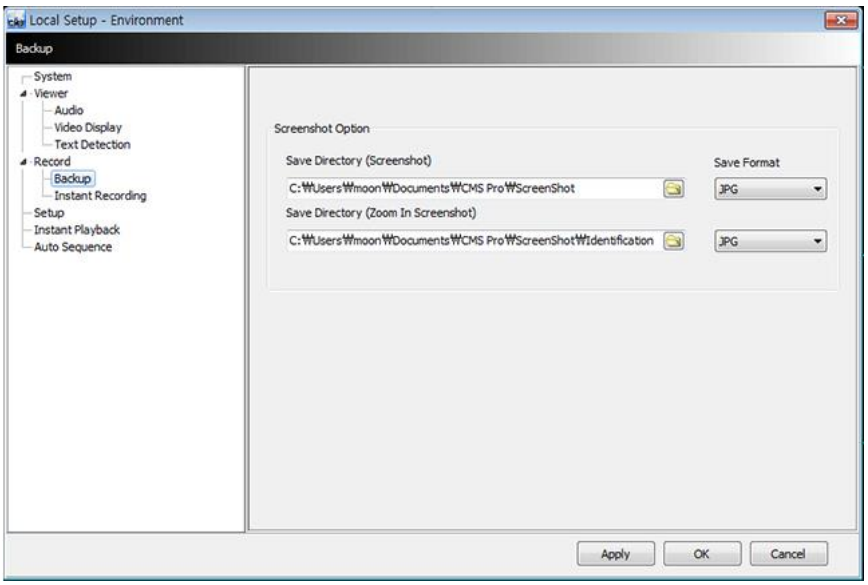

• Instant Recording

Users can customize the storage path of the instant recording file by selecting HDD installed in PC.

- Select Drive: Select PC's HDD where instant recording file should be saved from the drop down menu and click "Add". It will show Drive type, Free Space and Total Space of selected HDD.
- Storage List: Added HDDs can be prioritized or deleted. Use Up and Down arrow to prioritize and "Delete" to remove HDD from the list.

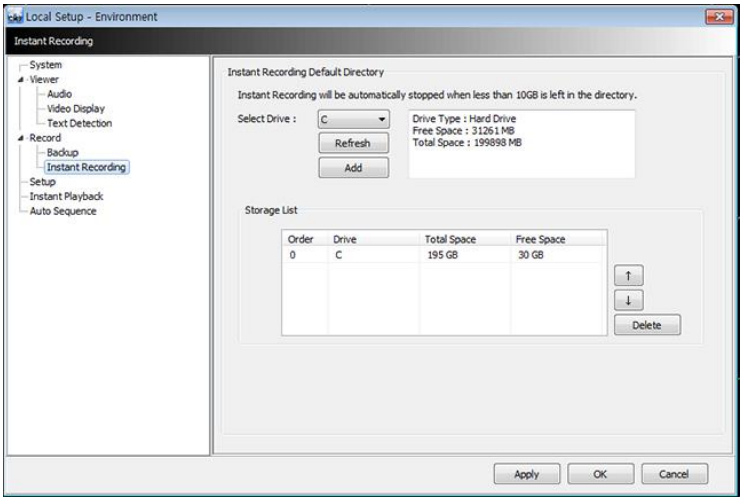

NOTE

Instant Recording will be automatically stopped when less than 10GB is left in the directory.

NOTE

Please refer to Chapter **6.7.2.9 Instant Recording**.

6.4.3.4 Setup

- Users may save the current CMS Pro configuration data as a file and import it later to the same PC or another one.
- Select Save Directory: Users can select the save directory of setup data or log data by designating the folder in the PC or other storage device and the change of the directory will be applied only after clicking "OK" button and exit.
- Select Data: Select data which users would like to save in the storage devices.
- Default setup: Initialize the setup to factory default. Click "OK" to exit the program.

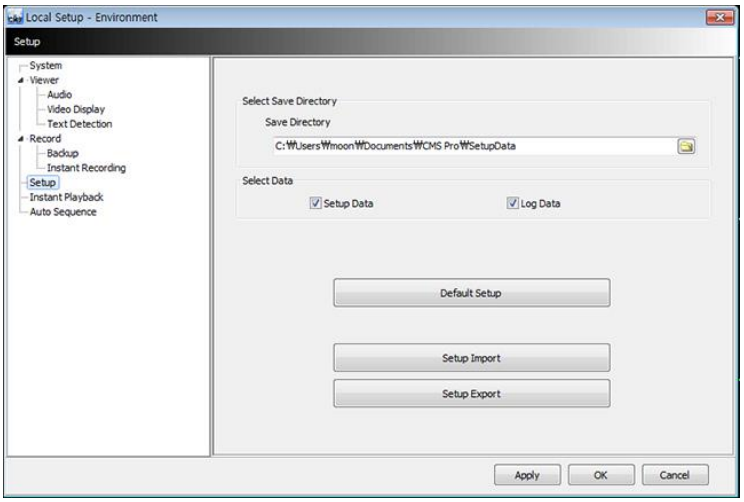

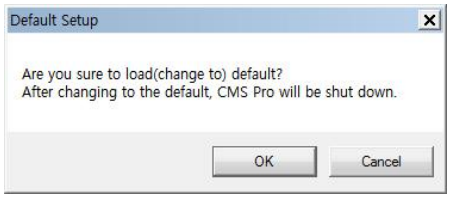

- Setup Import: Copy the Menu setup stored in USB memory stick (or PC HDD) into NVR. Please plug in the memory stick and then click (↵) Import.
- Setup Export: Store the Menu setup of NVR in USB memory stick (or PC HDD). Please plug in the memory stick and then click (↵) Export.
- Apply: Click the “Apply” button to apply the settings.

6.4.3.5 Instant Playback

- Instant Playback: Users are able to see the recorded data easily by using instant playback function.
- Set the time from which the recorded data is displayed.
- Instant Playback starts from the last preset time. (1, 3, 5, 10, 15, 30Min, 1, 3Hour, Default is 3Min)
- For example, if 5 Min is set as a playback period, then users are able to see the last 5 minute’s data from the current time.
- To activate the Instant Playback, just right click on a live screen and select ‘Instant Playback’.

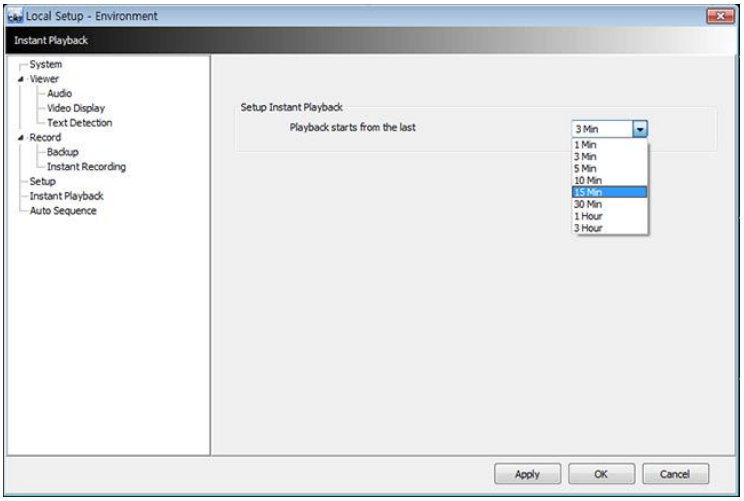

6.4.3.6 Auto Sequence

- Auto Sequence: Users are able to switching the camera view and setup the dwelling time.
- Set the dwelling time by clicking the to increase and decrease duration. (3 to 60 seconds).

6.4.4 Local Setup - Account

- When more than 2 users need to access CMS Pro, multiple User Accounts and its authorization can be set in this menu.
- This setup is only permitted to Admin account holder.

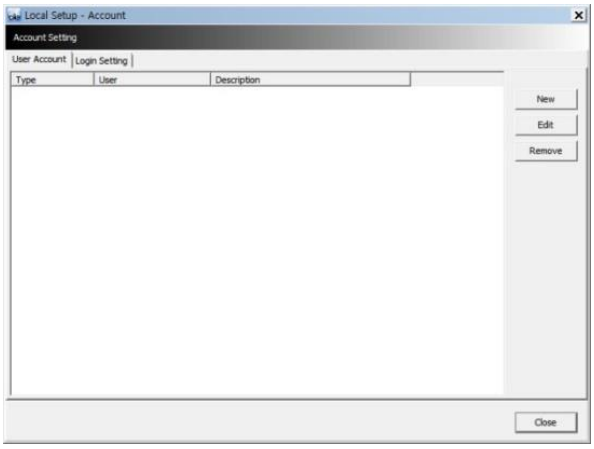

6.4.4.1 Add User Account

• Click “New” button and the following will display.

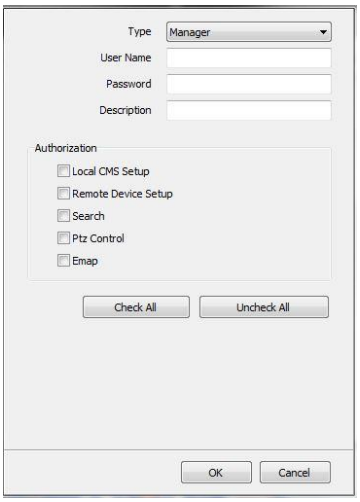

• Type: Select one of the two types of user account, Manager and User from the drop-down menu.
  – While Manager Account allows all of the authorization to be controlled, User Account is permitted to set only Search, PTZ control, and E-map functions.
• Create a User name and Password and then type Description of the account.
• Mark the authorization check boxes (☐) to allow.
  – It is possible to give an authorization selectively to the individual user account.
  – “Check All” grants all the authorizations and “Uncheck All” deprives all the authorizations.
• Click “OK” to save and exit.

6.4.4.2 Edit User Account

• Users are able to adjust its Authorization and Password from EDIT button.
• All the procedures are same as Add User Account.

6.4.4.3 Remove User Account

• Users are able to remove the existing account.
• Select an account to delete then click “REMOVE” button.

6.4.4.4 Login Setting

• This function protects any activities of all Manager/User accounts by asking ID and Password prior to the fulfillments.
• Select the activities from the list (☐) and click “Apply” to save.

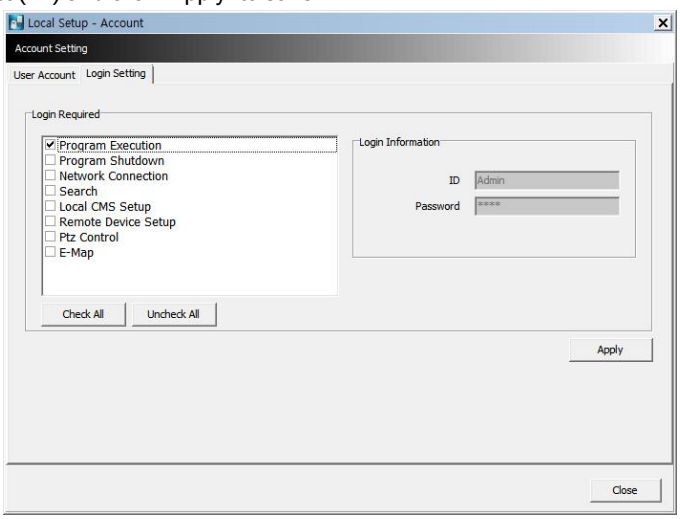

6.4.5 Local Setup – E-map

• Users are able to create various E-maps and it enables monitoring both Live and Playback screen.

6.4.5.1 Registering a New E-map

• Click “New” Tab to set up the E-Map.

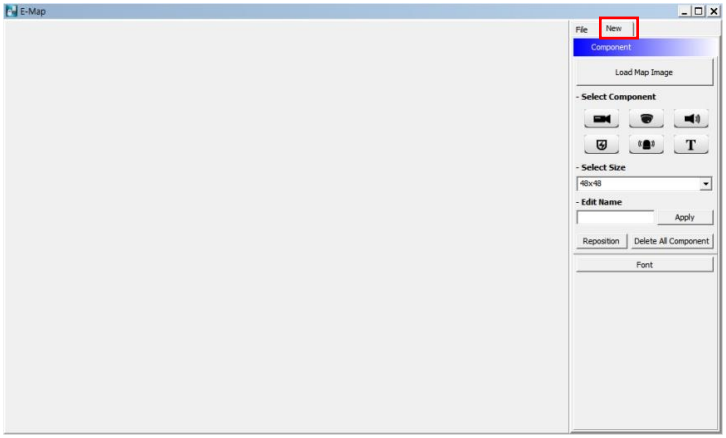

• In order to load an image of the map, click “Load Map Image” that users would like to use as an E-Map.

• Users should select the image format between BMP and JPG.

• Place the icon of cameras, audios and alarms on the map. Each icon’s detail is as below.

- Box Camera: Generally indicates as Outdoor camera.
- Dome Camera: Generally indicates as Indoor camera.
- Alarm/Sensor: The icon is blinking on when the alarm in is activated.
- Audio: Users can hear the audio in the site by clicking the icon after setting the E-map.
- Relay: If users click the icon, the light is on the icon and the attached device on Relay such as siren and buzzer will be activated in the site.
- Insert text box: Users are able to put description in the map using the Text Box.

• Select component

- Click the icon you want (then the icon turns to orange color) and click again on the place you’d like to locate on the loaded image.
- Users can rotate the icon to the direction that they want and move to other places by dragging.

• Select Size: Size of the icon varies from 24*24, 32*32 to 48*48.
• Edit Name: Type the name of the icon and click the “Apply” to change the name.
• Reposition: The icons which are set up on the map can be repositioned into the right place even if the map size is changed (enlarged/reduced).
• Delete All Components: By clicking this button, users can delete all the components in the map at once.
• Font: Change the font of the text of the icon.
  – Click “font”, then submenu will display.
  – Users can select the font style, color, size, and other effects.
  – Check “Apply to All” to apply the change to all the components.

• Click “File” Tab to continue to set up the E-map.
• Type a name of E-map when you finish map setting in “New” menu.
• Click “new” to add a new location in Location list. If the other location is already saved, then select the location from the list.
• Select type among Outdoor, Floor, and Room.
  – Users can set up the hierarchical E-map, if necessary.
  – For example, after setting up the floor map, room maps are added under the floor map.
• NVR Name: Select the specific NVR from the list to connect E-map.
• Users are able to check the E-map and its hierarchical structure from the “Registered E-map list”.
  – Here, users are able to load the map, delete the map and show map viewer by clicking mouse right button on the map list.

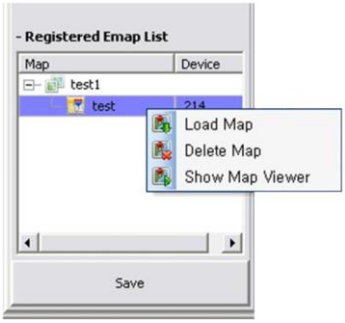

• Click “Save” to save and exit.

6.4.6 Remote Device Setup

• Select a device to enter device’s configuration and Click “OK” then the web browser will pop up as below.

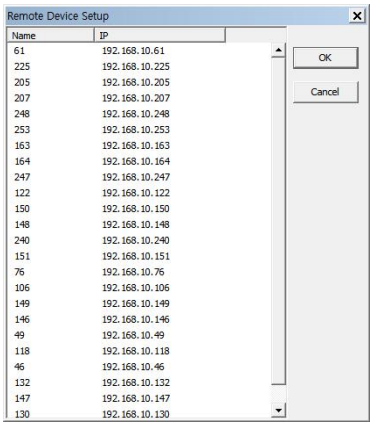

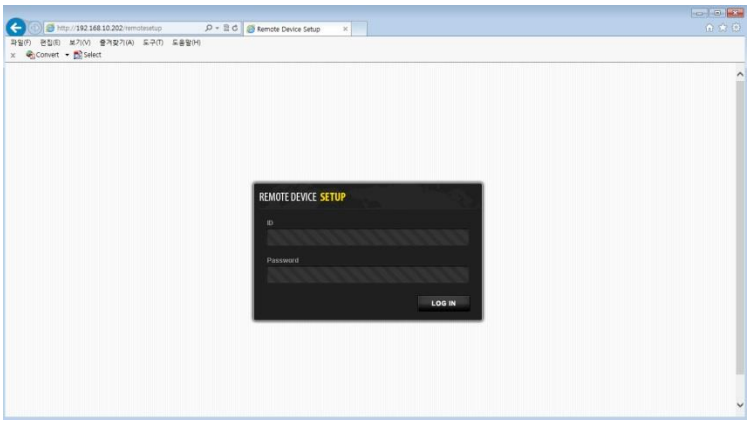

• Enter ID and Password to open Remote Device Setup page and following page will display.

• Web server port (default, 80) should be port forwarded to use remote device configurations.

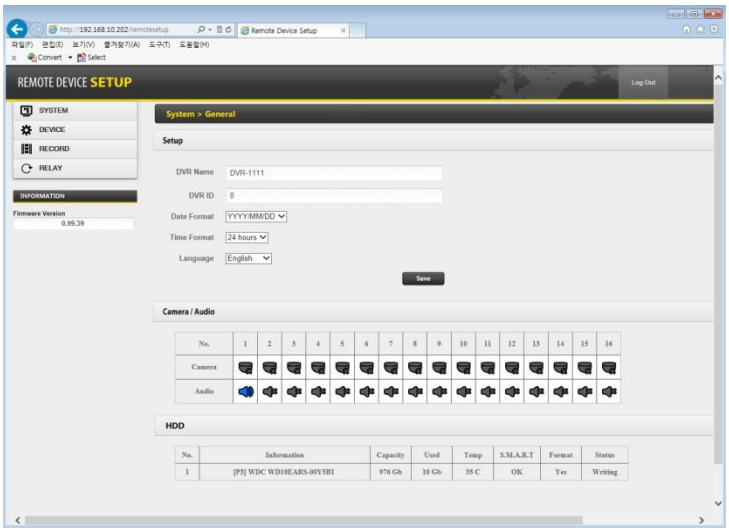

NOTE

Remote Device Setup menu shows the same menu interface as the NVR’s local menu. Please refer to **Chapter 4. Setup** for detailed information.

6.4.6.1 System

- Refer to **4.2 System** for more detail.

6.4.6.2 Device

- Refer to **4.3 Device** for more detail.

6.4.6.3 Record

- Refer to **4.4 Record** for more detail.

6.4.6.4 Relay

- Refer to **4.5 Relay** for more detail.

NOTE

Some settings cannot be modified remotely.

NOTE

The changed password cannot be restored. Please keep and remember not to lose!

6.4.7 Change Password

- Users are able to change the using password of the ID, when they open the software. This is not related to any NVR's login password.
  - Password: input the current password.
  - New Password: input the new password.
  - Confirm Password: confirm the new password.

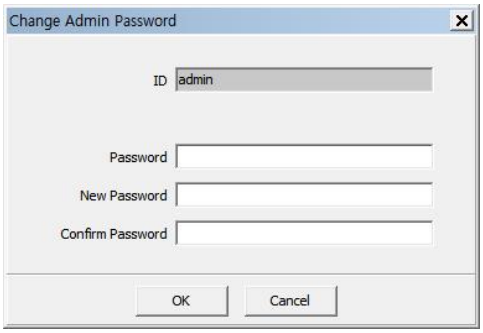

NOTE

User "ID" cannot be modified.

6.4.8 Help

6.4.8.1 About

- The version of CMS Pro can be checked here.

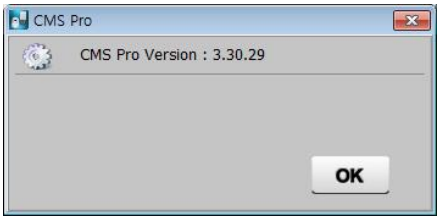

6.5 View

- The viewer of this program is composed with 5 types of different panes.
  - Server List, Remote Device System Log, Remote Device Event Log, CMS System Log and Health Check.

6.5.1 Server List

- When the device is registered, then it is displayed on the Server List.
- If uncheck “Visible” in the server list menu, then the list will not be shown.
- Check “Left” or “Right” to move the list to left or right side of the screen.

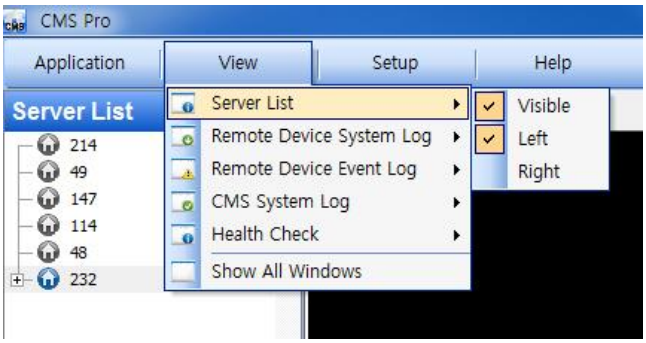

6.5.2 Remote Device System Log

- User can check the system log of the device in this menu.
- Type, Date/Time/Description can be checked.
- The contents in the parenthesis show the name of the device. Ex) [Demo]
- Check “Visible” in the Remote Device System Log menu to see the menu or uncheck “Visible” in order not to see the menu.
- Click the “Update Log” button to update the log.

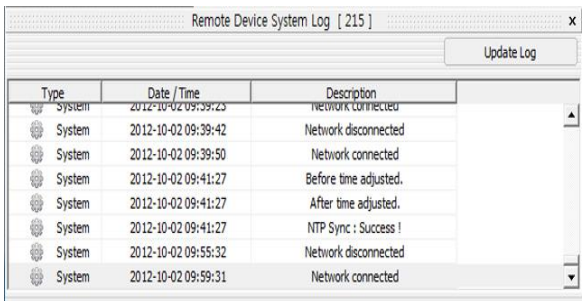
Remote Device System Log [215]
Update Log
Type
Date / Time
Description
System 2012-10-02 09:39:42 Network disconnected
System 2012-10-02 09:39:50 Network connected
System 2012-10-02 09:41:27 Before time adjusted.
System 2012-10-02 09:41:27 After time adjusted.
System 2012-10-02 09:41:27 NTP Sync : Success !
System 2012-10-02 09:55:32 Network disconnected
System 2012-10-02 09:59:31 Network connected

6.5.3 Remote Device Event Log

- User can check the event log of the device in this menu.
- Check “Visible” in the Remote Device Event Log menu to see the menu or uncheck “Visible” in order not to see the menu.

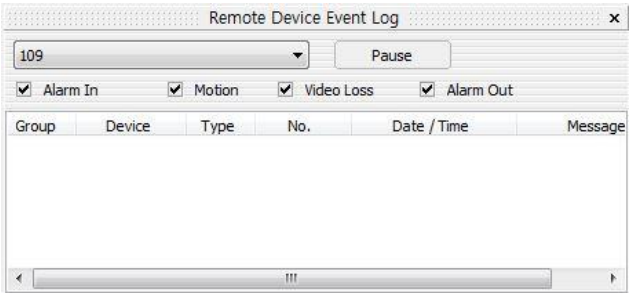

- Users can select the registered device from the drop down box menu.
- Alarm In / Video Loss / Alarm Out can be selected separately as Event. (More than 2 events can be selected at the same time.)
- And by clicking “Event log On/Off” after right mouse click on the device in the server list, users can check/uncheck all the events at once.
- When the event operates, the event log will show the information of the event in the list.
- If click the pause button in the menu, then event log will be stopped.

• Click the resume button to resume the system event log. (The log data will be lost during the pause.\

NOTE

The Remote Device Event Log is on when the “pause” is shown while the log is stopped when the “resume” is shown in the menu.

• Double click the detected “Alarm In” event in the remote device event log to check the video of the event.
• Click the “Refresh” button to refresh the data.
• Click the right mouse button on the registered device to on/off Event Log in the Server List.
• A user selects “Event Log Off”; all event logs will be unchecked on Remote Device Event Log panel.

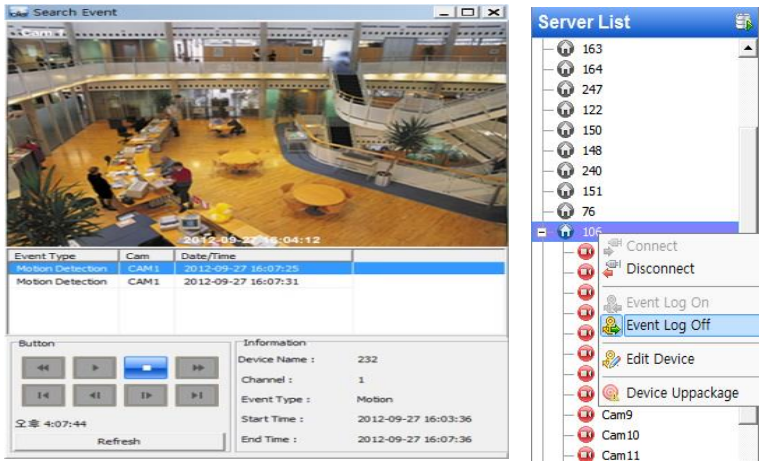

6.5.4 CMS System Log

• This is the log menu where users can check the log information of the CMS program.
• Check “Visible” in the CMS System Log menu to see the menu or uncheck “Visible” in order not to see the menu.
• Click the “Update Log” button to update the log.
• User can classify the Manager and User by checking the ID and get the information of connect/disconnect and shutdown of the user.

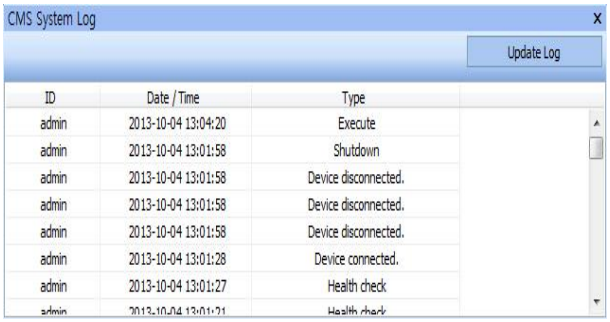

6.5.5 Health Check

• This is the menu where users can easily check the overall status of a device.

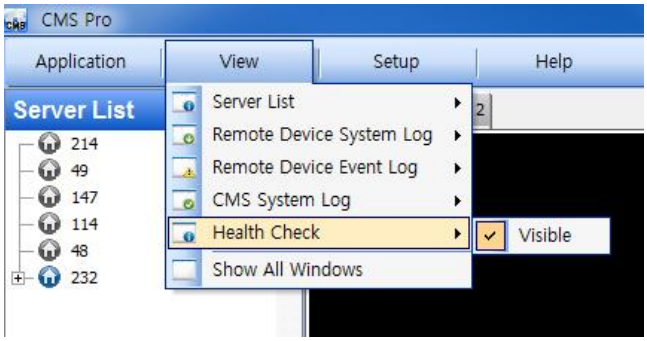

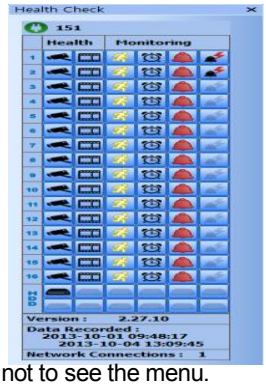

• Check “Visible” in the Health Check to see the menu or uncheck “Visible” in order not to see the menu.

• Left mouse click on the device in the server list to see the information of health check.
• HDD Status
  – HDD is not connected and cannot be added.
  – HDD is connected.
  – HDD is not connected currently but can be added.
  – An error occurred in HDD.
• Camera Status
  – Camera is in covert mode.
  – Camera is connected.
  – Camera is not connected currently but can be added.
  – Camera is not connected and cannot be added.
• Recording Data Status
  – The channel is not being recorded because it’s not supported.
  – The channel is being recorded.
  – The channel is not being recorded currently but can be recorded later.
• Alarm In Status
  – Alarm In is not activated and cannot be added.
  – Alarm In is being activated.
  – Alarm In is not activated currently but can be added later.
• Alarm Out Status
  – Alarm Out is not activated and cannot be added.
  – Alarm Out is being activated.
  – Alarm Out is not being activated but can be added later.
• Relay Out Status
  – Relay Out is not activated and cannot be added.
  – Relay Out is being activated.
  – Relay Out is not being activated but can be added later.

6.5.6 Show All Windows

• This function will make visible all the invisible window panes.

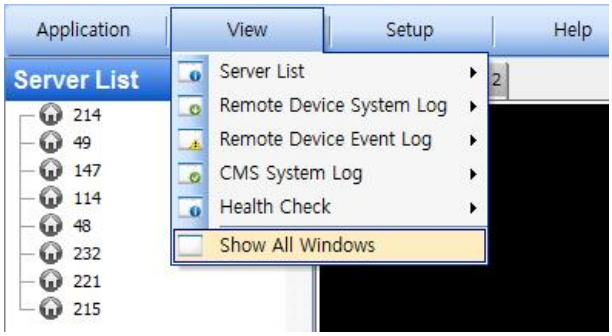

6.6 Application

6.6.1 Search

• There are five different types of search menu; Timebar, Event, POS/ATM, Thumbnail and Smart Search

• The detailed information and directions is described in **chapter 6.8**.

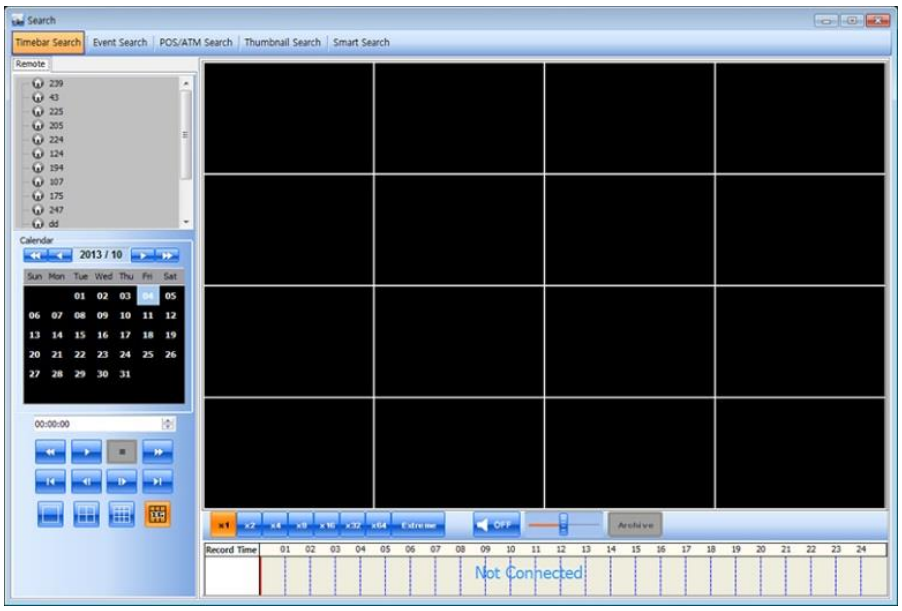

6.6.2 Exit

• If users wish to exit the program, then click the “Exit” in the Application menu.

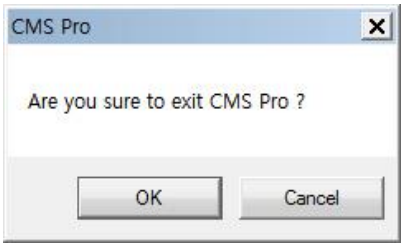

6.7 Live (Live Video Monitoring System)

6.7.1 Overview

- This program is to display live video from multiple channels in customized screen format.
- The program is based on user friendly interface. Users may configure the entire program and open or close the panes and screens in the program.
- The information of the device can be checked and monitored in real time.
- The overall information of recording/live view can be checked.
- 'Login Display' pane is to display the current user ID, authority group, data and time information.
- Dual, Triple monitor can be available and the quadruple monitor can be available by using splitter.
- Two live panes. 256 channels for each pane.

6.7.2 Live Monitor Menu

- The following functions are operated when the right mouse button is clicked on the screen.

6.7.2.1 Full Screen On

- Click "Full Screen On" to make selected channel into a full screen.
- Click "Full Screen Off" to exit the full screen.

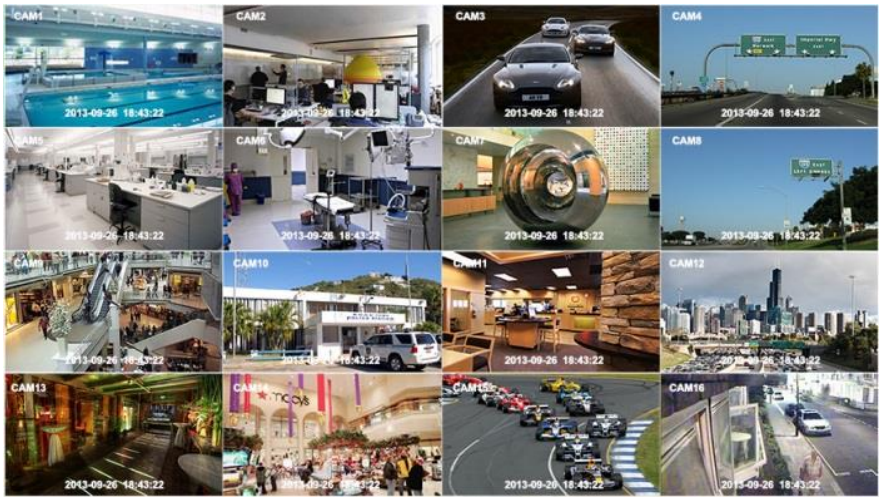

6.7.2.2 Auto Sequence

- Users are able to set the auto sequence.
- When users set the "Auto Sequence" display mode, screen will change to 1 channel display mode and channel will be changed by user's setup. For more information Please refer **chapter 6.4.3.6**.

6.7.2.3 Instant Playback

• Instant playback is available in both Live1 and Live2 pane, but screen capture is available in either live1 or live2.

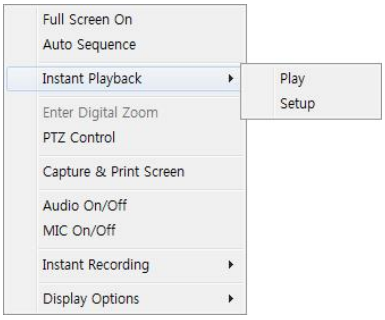

• After right mouse click, move the mouse cursor to “Instant Playback”. Then, play and setup menu will display.

- Play: The recorded video of the pre-setup time will be displayed in the playback viewer.
- Setup: The time of instant playback can be setup in this menu, from 1minute to 3hours. (1Min, 3Min, 5Min, 10Min, 15Min, 30Min, 1Hour, 3Hour. The default time is 3Min.)

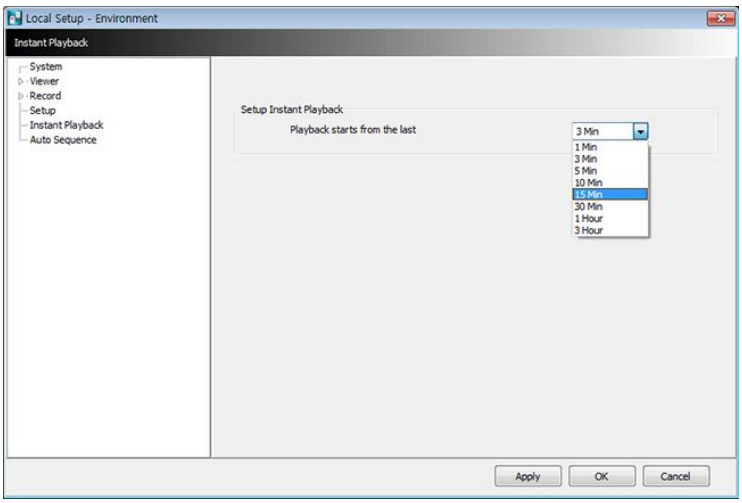

NOTE

Users can also set up the Instant playback in the menu, “Local Setup – Environment”.

• The image capture is supported in the instant playback viewer by clicking right mouse button on “Capture Image.”

NOTE

For more detailed information of captured image, please refer to the Chapter **6.7.2.6** “Screen capture & Image”.

6.7.2.4 Digital Zoom

• To use digital Zoom, please make the display as 1CH.

• Right click on the mouse and select Enter Digital Zoom.

• To zoom in and out, please use the display function at the corner of the channel Display or click and drag the area wish to zoom in.

• Zoom area can be moved by dragging the position from the corner box.

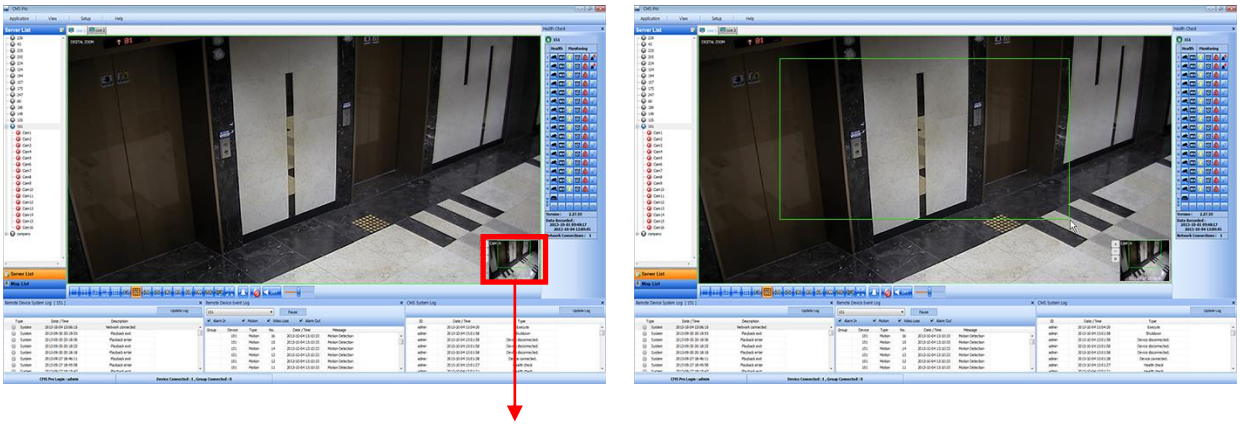

Zoom In

Zoom Out

Zoom Area: The Screen will revert to x4 digital zoom screen.

NOTE

Digital Zoom function can be only used when the display is on 1Ch mode.

The digital zoom function is able to zooming approximately x32.

6.7.2.5 PTZ Control

- After right mouse click on the channel that PTZ camera is connected, select “PTZ control”.
- Users can designate the certain position and set the name by using “Preset” function.
- Up to 255 presets can be designated.

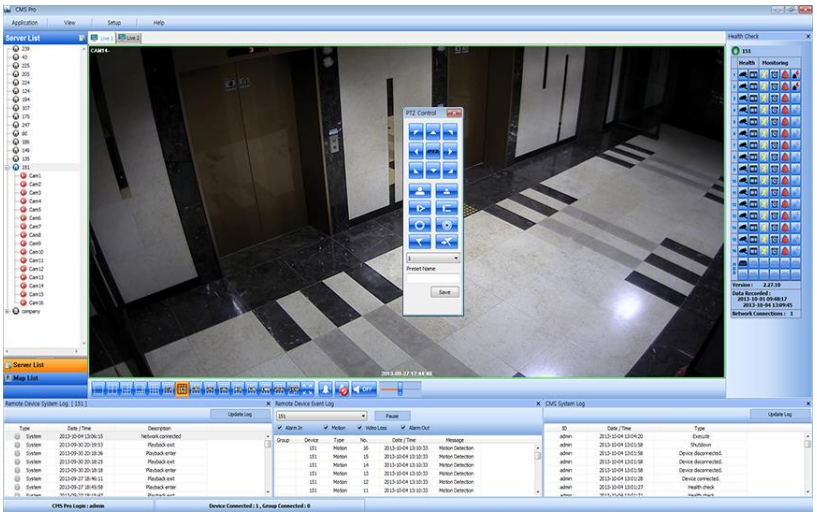

• Zoom

– Zoom in

– Zoom out

• Focus

– Near Focus

– Far Focus

• Iris

– Iris Open

– Iris Close

• Preset

– Set Preset

– Go to Preset

– Drop down menu: Select a preset number which is set in the camera.

– Preset Name: Save the selected preset name.

6.7.2.6 Screen Capture & Print

• After right mouse click, select “Capture & Print Screen”

• The brightness, contrast and saturation can be adjusted to store and can be printed directly.

> **NOTE**
> Image adjustment is only possible on the last captured image.

• Users are able to save the captured image by clicking “Save as Image”.

• Create a name of captured image and select the image type as BMP or JPG

• Users are able to choose the folder where they wish to store the image.

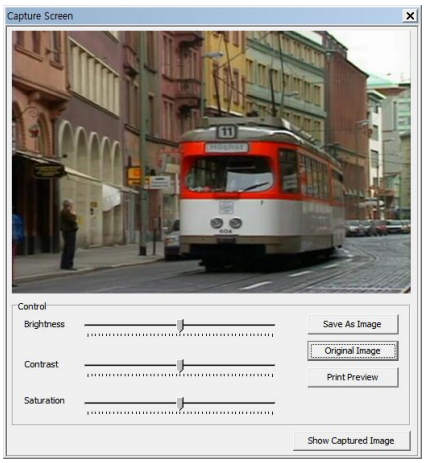

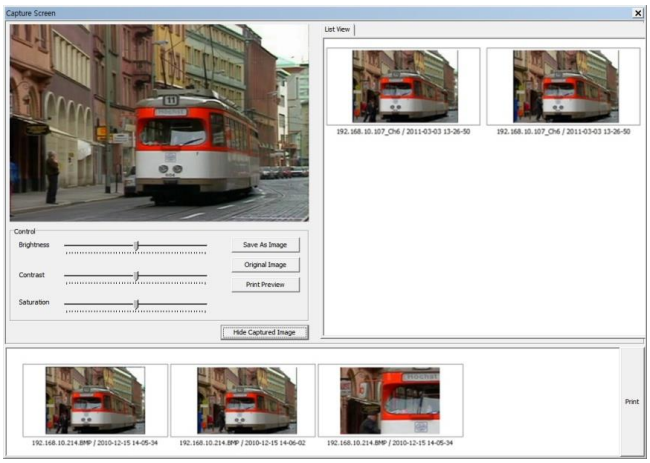

• Click “Show Captured Image” to show the captured images.

• Users can even **recapture** the part of the captured image by dragging the place users want.

• Click “Print” button to print all the captured images at once.

• If users want to print the image one by one, then click the “Print Preview” button.

– Users can type the title in the text box on the top

– Add Text: Users can add the description in the text box on the bottom.

– Delete Text: Delete the last written text at once.

– Delete all: Delete the all the text in the captured image.

• Click “Hide Captured Image” to hide the captured images.

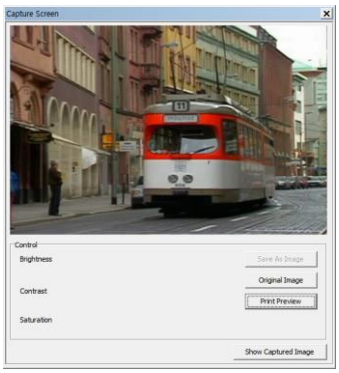

6.7.2.7 Audio On/Off

• Right click and select Audio On/Off to turn on/off audio from the channel.

• Audio On/Off function is applied to only one channel out of all connected channels.

– Once audio is on “

” will be changed to show connected audio channel. “

”

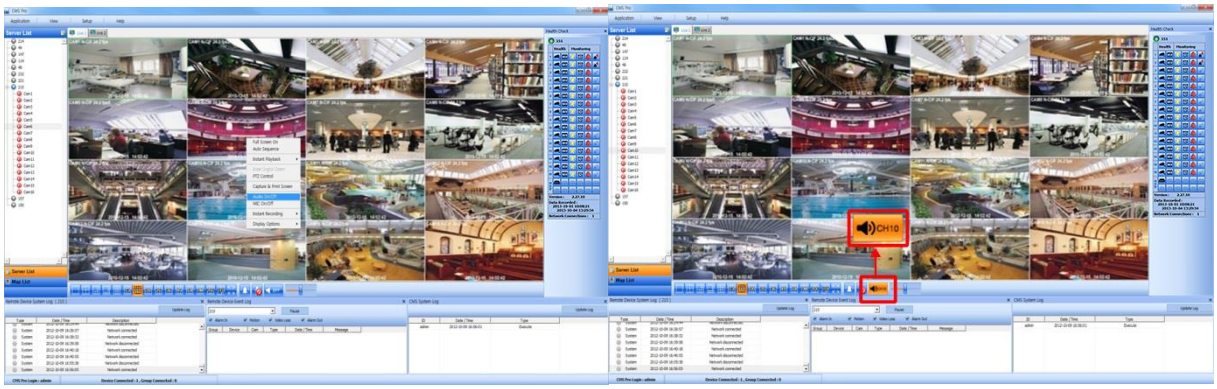

6.7.2.8 MIC On/Off

• Click right mouse button to turn on/off microphone of PC.

• Users can deliver the audio through the speaker connected to NVR by sending the audio from PC where CMS Pro is activated.

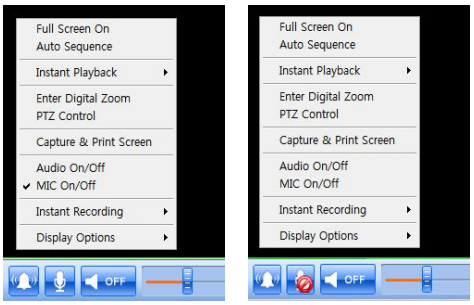

6.7.2.9 Instant Recording

• Click right mouse button to activate the Instant Recording.

• In the Instant Recording, there are three choices of start recording, setup and open folder.

• Click Start Recording to record the particular channel that user wants.

• If a user wants to have password for the archiving file, please click ‘Use Password’ and type the password that users want to use.

• If users click ‘OK’, it will start recording of that specific channel.
• When users want to view the archived file, please choose “Open Folder”

• It will open the saved directory of the file.
• When users double click the created file, password window will pop –up.
• Please type the previous password that users entered in Password setup

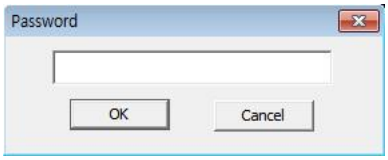

• When Users want to “stop recording”, click right mouse again and select Instant Recording and choose “stop recording”.
• Choose “Setup” in the Instant Recording to set up the recording duration and default directory.

• In the recording duration, users can setup the hours and minutes by clicking the “upside down arrows”

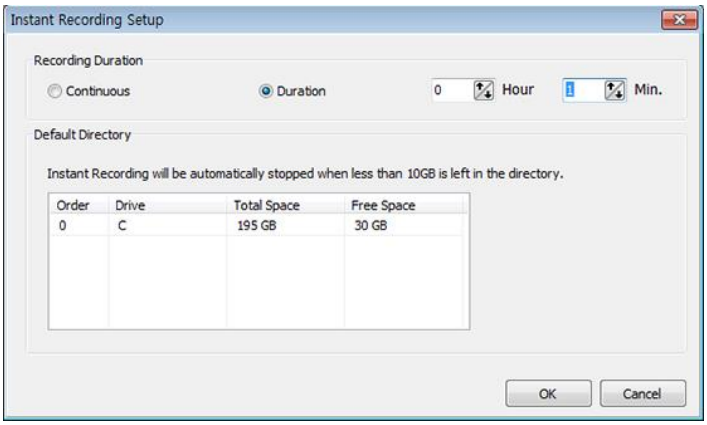

• “Open folder” will allow a user to select the recorded files and play them.

6.7.2.10 Display Option

- Users can set up the display of camera name and time in “Display Option”.
- After right mouse click, check the “Show Camera Name” to display the camera name or uncheck the menu to hide it.
- After right mouse click, check the “Show Time” to display time or uncheck the menu to hide it.

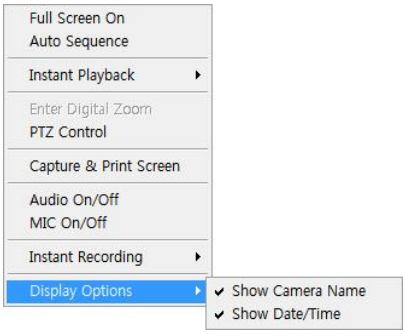

6.7.3 Screen Layout Control

- Every menu pane can be relocated by drag and drop.

6.7.4 Change Division Display

- From a single full screen to 256 channels, various combination of channel display is provided by clicking the icon at the bottom of the screen.

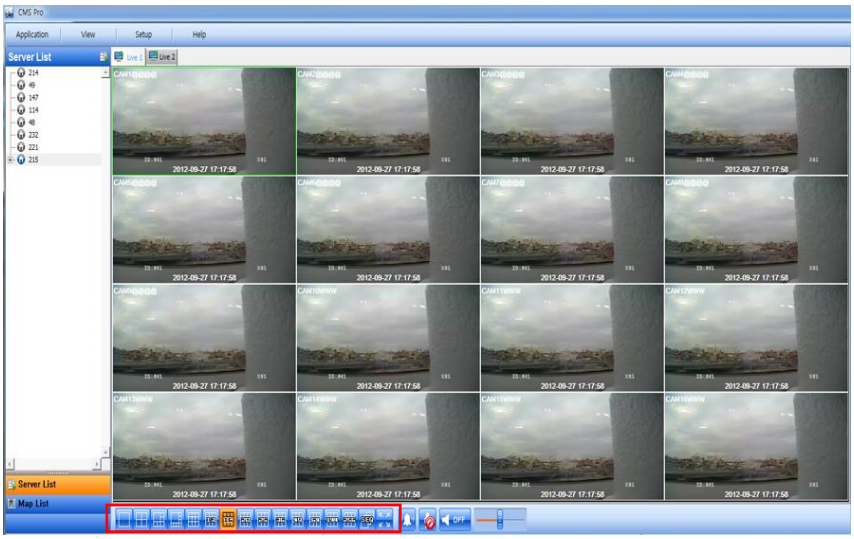

6.7.5 Sequencing

-

Click the icon to switch the channel according to setup made in auto sequence in Local setup – Environment.
- It is only supported one channel.

6.7.6 Audio Volume Control

• Users can control the audio volume using the bar controller at the bottom of the screen.

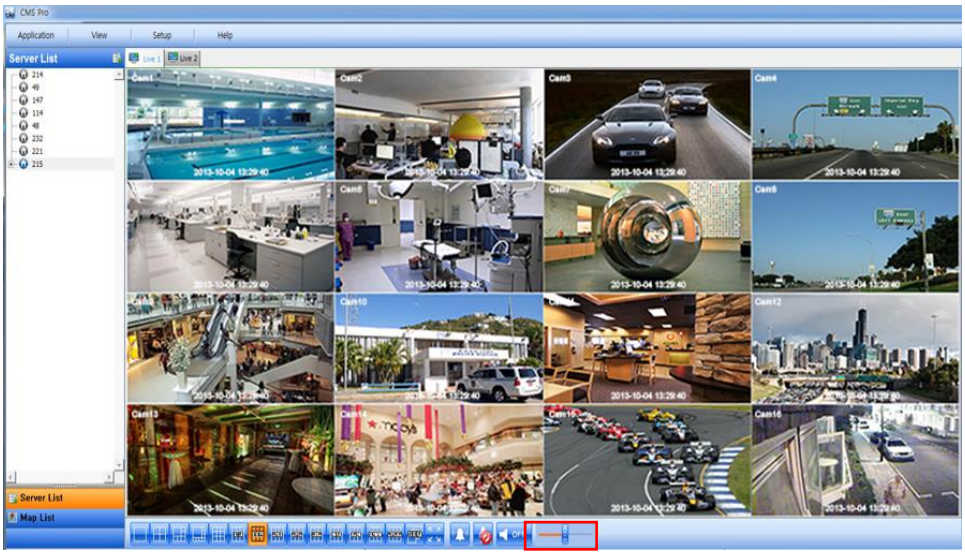

6.8 Search

6.8.1 Overview

• 5 ways of Search are available. (Time Bar Search, Event Search, POS/ATM (keyword) Search, Thumbnail Search, and Smart Search).

NOTE

Search window cannot be closed during playback, also cannot be changed window size. Please close the window after stop. Playback more than 2 channels at the same time is available only in time bar search.

6.8.2 Time Bar Search

• Open a search window by clicking the “search” in the application menu.
• Click the “connect” after right mouse clicking on the device list.
• Once it is connected to the program, date, month and year of the recorded data is highlighted in the calendar.
• The text box in the left-bottom side of the window shows the time of playback video.
• The recorded data of a day is displayed as a colored bar on the time line at the bottom.
• Users can easily search the recorded data by clicking on the time in the time bar.

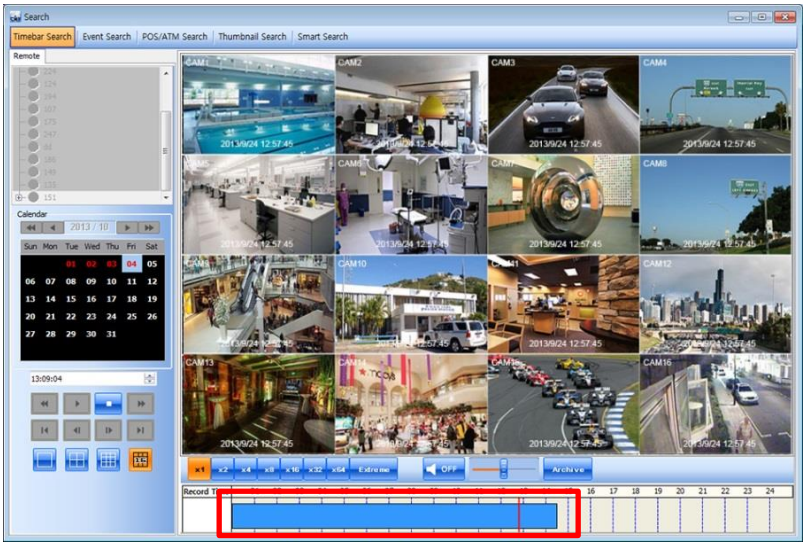

• Users can change the speed of rewind and fast forward from x1 to Extreme. The actual speed may be limited by NVR's network uploading bandwidth.

• Users can use Right click to access Audio On/Off, Digital Zoom and Capture and Print Screen.

- Audio On/Off: A user can enable audio function. If Audio is connected Audio Status will change.
- Enter Digital Zoom: A user can use Digital zoom. Please refer **6.7.2.4 Digital Zoom**.
- Capture and Print Screen: A user can capture image. Please refer **6.7.2.6 Screen Capture and Image**.

NOTE

Audio and Digital Zoom are supported only in 1CH display mode.

• In the playback menu, users are able to search the data from the beginning of the day or from the cursor position.

• Or just simply click on the time line users want, and then click " " button on the left.

• Click "Archive" button to save certain channels as a video file.

• Select a start time, end time, file name, the location of the file, password and the cameras to store.
• Click “Start EXE Backup” to start archiving.

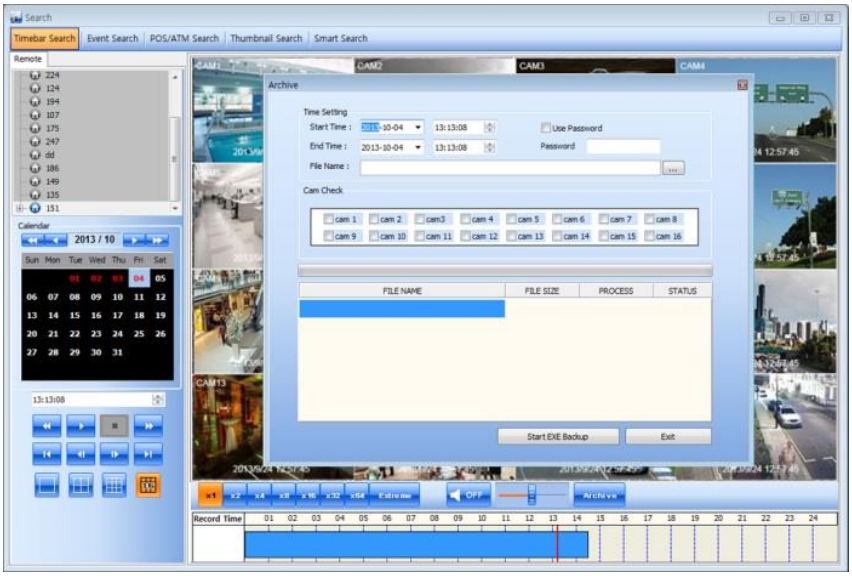

NOTE
Archiving function can be initiated only in time bar search.

6.8.3 Event Search

• Click the “connect” after right mouse clicking on the device and select the “Event Search”.
• Check the event type which users wish to search among “Emergency” and” Alarm”.
(Users can select more than 2 event types at the same time)
• Select a camera to search. (Only 1 camera can be selected in event search.)
• Specify the start time and end time in Date/Time setting and click “Search” button.

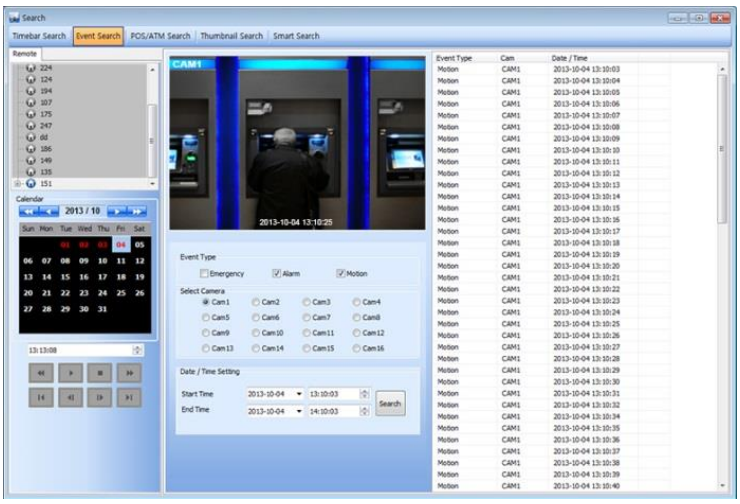

• To check the event that is detected on the right side of the search window, double click the event that users want.

6.8.4 POS/ATM Search

• Click the “connect” after right mouse clicking on the device and select the “POS/ATM Search”.
• Type the actual keyword that users want to find in the “POS / ATM” text box.
• Select a camera to search. (Only 1 camera can be selected in this search.)
• Specify the start time and end time in Date/Time setting and click “Search” button.
• The detected text will be displayed in the right side of the search window.
• Double click or click on the event (Text In) and click the play button “ ” to check the playback.

• Display Position – Users are able to select the text display option of the playback.
  - Text Window: Only text will be displayed in the top right side of the search window during the playback.
  - Overlay: The text will be overlaid on the playback video.
  - Both: The text will be overlaid on the video and the text window as well.
  - Hide All: The text will not be displayed in both video and the text window.
• To check the event that is detected on the right side of the search window, double click the event that users want.

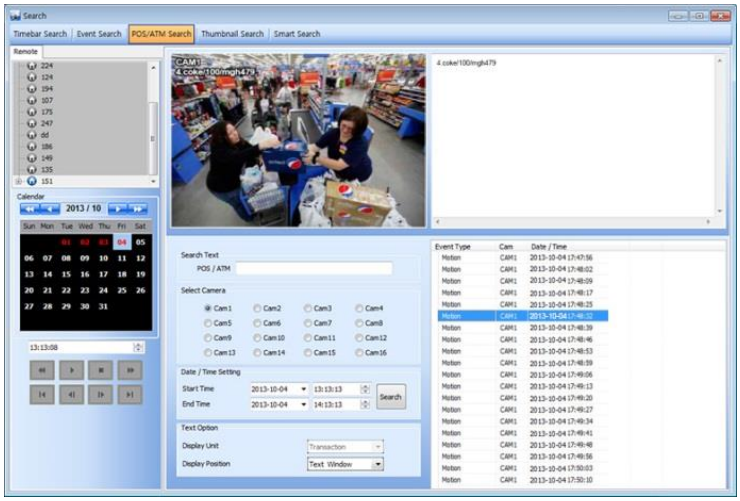

6.8.5 Thumbnail Search

• Click the “connect” after right mouse clicking on the device and select the “Thumbnail Search”.
• This search function provides the users with the snapshots of the recorded video by user’s definition.
• Users are able to choose the duration of the playback in “Thumbnail Duration” from 1Min to 60Min. (1, 3, 5, 10, 20, 30 and 60Min)
• The number of “Max Capture Count” can be setup as 32, 64, 128 and 256.
• Specify the start time and end time in Date/Time setting and click “Search” button.
• Double click the listed snapshot images to check and play the video.
• Click “Stop Search” to stop the search and check the video to the stop time.
• The video will be displayed in the “video display” panel at the bottom of the search window.
• Users can move the panel around the screen and adjust the size of the panel.

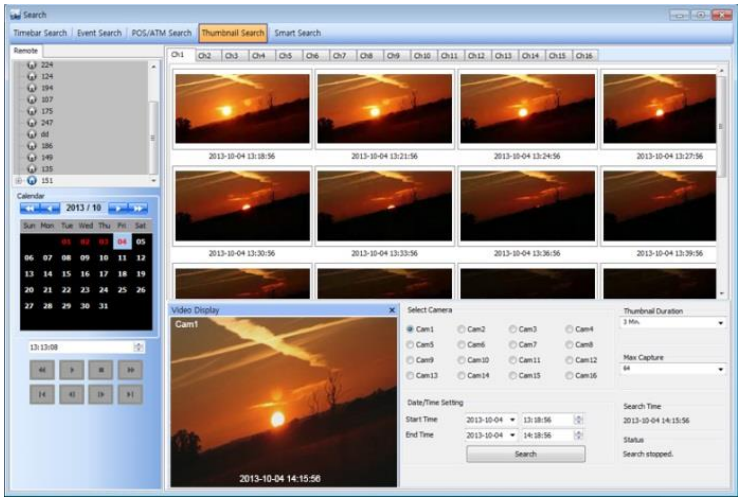

6.8.6 Smart Search

• Click the “connect” after right mouse clicking on the device and select the “Smart Search”.
• Choose a camera to use for Smart Search
• Users can select the area in an individual channel by dragging the certain area in “setting” menu.
  (More than 2 areas can be designated in the setting pane.)
• Specify the start time and end time in Date/Time setting and click “Search” button
• If the movement is detected in the area, it will automatically display the snapshots in the search window.
• Double click the listed snapshot images to check and play the video.

• Users are able to select the one from the 3 types of sensitivity level; Super, High and Standard.

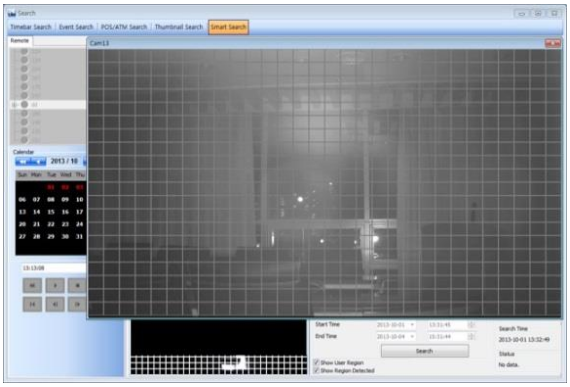

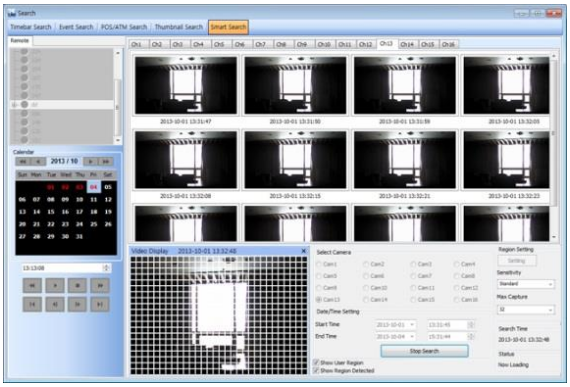

6.9 E-Map

6.9.1 Overview

• The ‘Map Viewer’ program is to display event signals over map images so that users may acknowledge event status more easily.
• Users may recognize event occurrence with visual notifications on icons over the map image and audible notifications on speaker system of a PC. By clicking on the camera icons on the map, users may launch ‘Instant Viewer’ window.
• To utilize ‘Map Viewer’ properly, users should configure map before running ‘Map Viewer’ program.
(Please refer to Local setup – E-map in chapter 6.4.5)

6.9.2 Controls

• Users can load the Map Viewer which was set up “in Local Setup - E-Map” by clicking right mouse button on the map in the map list.
• Users can check the information of the device connected E-map in the right side of the Map viewer such as Device status, name, IP / Domain, the maximum number of Camera, Alarm in / out and Audio.

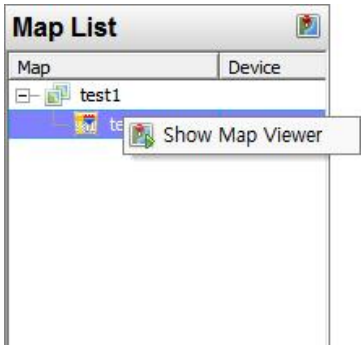

6.9.3 E-map Camera – Instant Playback

• Users are able to load the instant viewer by clicking the camera icon on the map.

• Full screen mode is available by clicking right mouse button and select “Full screen”.
• Click audio icon to listen to the audio of the channel, if audio input connected.
• Click the alarm out icon to release a manual relay signal to the site such as siren or buzzer

6.9.4 Alarm In/Out Control

• The Alarm In icon on the map is blinking when the Alarm In equipment like sensor or detector is activated.
• Click the alarm out icon to release a manual relay signal to the site such as siren or buzzer.

6.9.5 Audio

• Click audio icon to listen to the audio of the channel, if audio input connected.

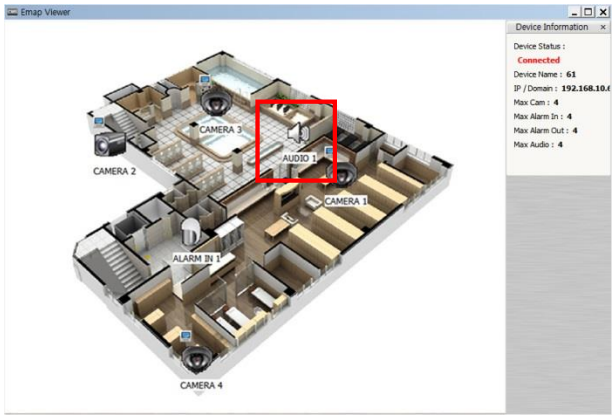

6.10 Uninstalling CMS Pro

• Please click the “Uninstall” file in the CMS Pro folder in the PC.

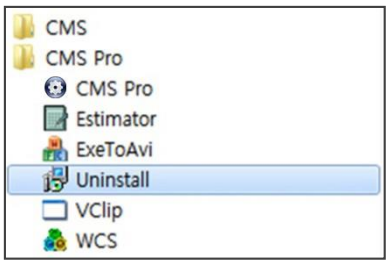

• Click the uninstall file and the following message box will pop up.
• Click “OK” to remove the program and its components.

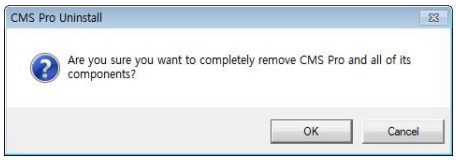

• If uninstall is complete successfully, the following message will pop up.

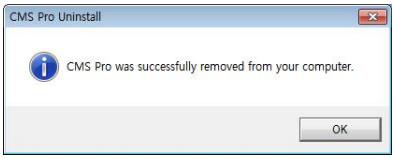

iCMS

User`s Manual

This document contains preliminary information and is subject to change without notice.

7. iCMS VIEWER

7.1 System Recommendations

	Recommended
CPU	Core 2 Duo 2.26GHz or higher
Main Memory	2GB or higher
Video Memory	512MB or higher
Display Resolution	1024 x 768 (with 32bit color) or higher
HDD Storage Space	30GB or higher
Network	100~1000 Mbps Fast Ethernet
Operating System	Mac OS 10.6.0 or higher

NOTE
It is recommended to connect Max. 16 HD-SDI (Full HD) cameras with iCMS.

WARNING
DUE TO A LIMITATION OF A MAC, CONNECTING MORE THAN 16 HD-SDI (FULL HD) CAMERAS MAY RESULT IN MALFUNCTIONING OF THE SOFTWARE. TO CONNECT MORE THAN 16 HD-SDI (FULL HD) CAMERAS, PLEASE ENABLE DUAL STREAMING OPTION ON THE NVR.

7.2 Program Installation

• Please follow the program installation procedures below.

• Open the file '**iCMS.dmg**'.

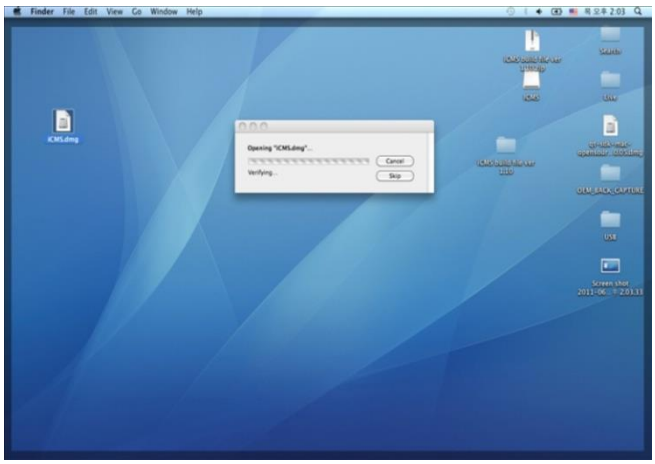

• Virtual driver will be installed (Driver name is "**iCMS**").

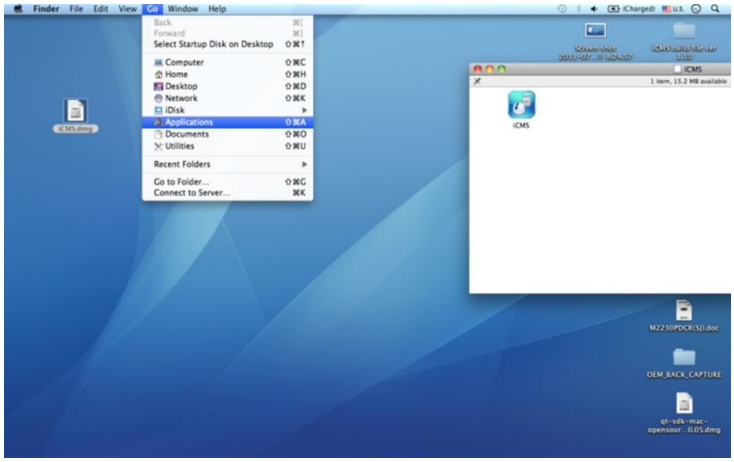

• In the virtual driver, users will find iCMS icon. Please move the iCMS icon to ‘**Application’** folder (**‘Application’** folder is located in the **‘Go’** Menu below).

7.3 Login

• After installation of the software, iCMS icon appears in ‘**Application’** folder.
• Please double Click on the icon to execute the program.
• Select User Name by Clicking upside down arrow and enter corresponding Password to login.

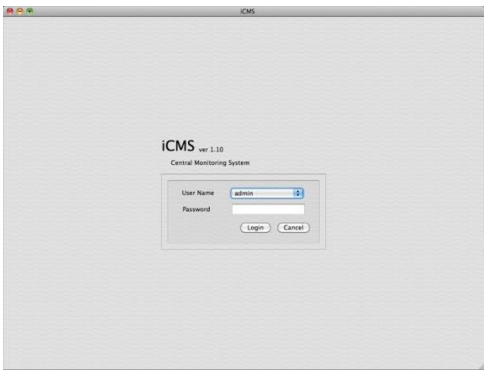

7.4 Watch Mode

7.4.1 Log-in Screen

• Please Click **‘Device manager’** and the following screen will display.

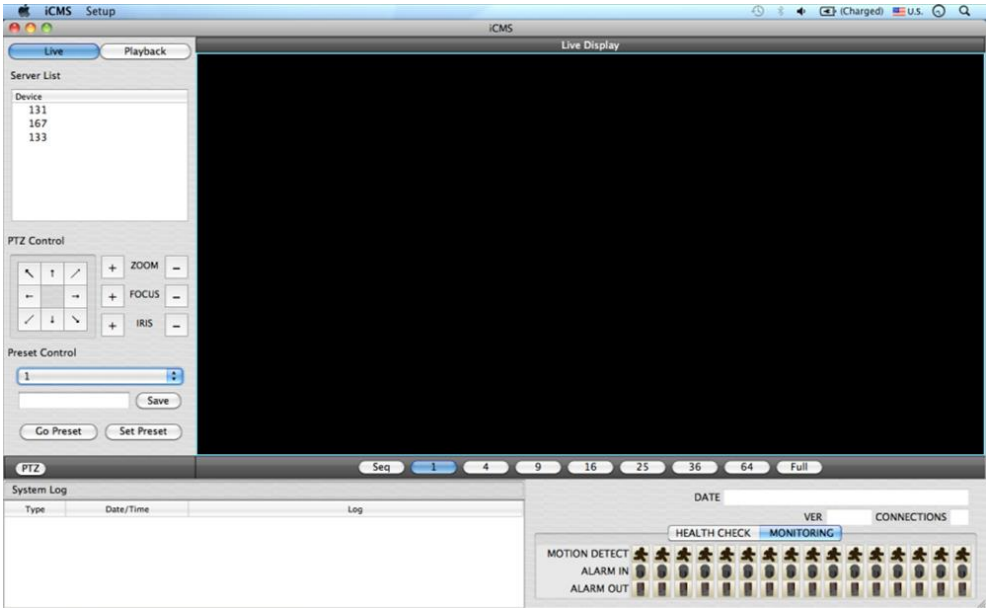

7.4.2 Local Setting

• Please Click **'Setup'** button on the top of the Toolbar and the following screen will display.

• There are three types of setup such as Device Manager, Display Setup and Password Change.

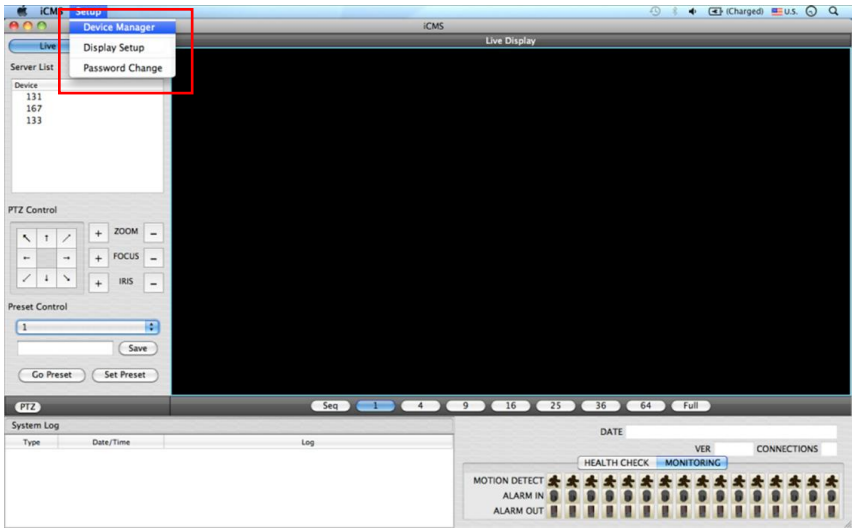

7.4.2.1 Display Manager

• Please Click **'Device manager'** and the following screen will display.

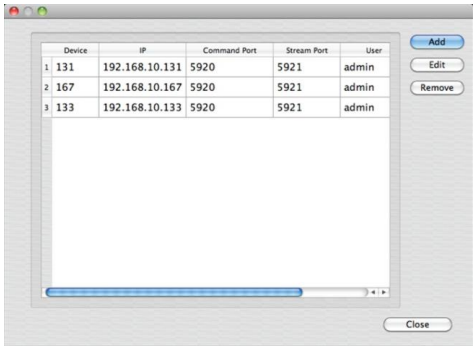

• Users will see the existing NVRs on the list, if there is any added NVR previously.

• Please Click **'Add'** to add new device.

• Please type all the necessary information in the empty space and Click 'OK' to submit the device information

• **Device Info**

- Device Name: input the NVR site name which will be displayed on the Server list. Please note that this name has nothing to do with the ID registered in NVR. Users may create the name that is fairly easy to distinguish.
- Description: type brief description of the site
- IP Address: input IP address or Domain Name of NVR (check with **SETUP>DEVICES>Network** in NVR).
- Command Port: input Administrator's number among port numbers set in NVR (check with **SETUP>DEVICES>Network** in NVR). (Default, 5920)
- Stream Port: INPUT Video/Audio number among port numbers set in NVR (check with **SETUP>DEVICES>Network** in NVR). (Default, 5921)
- User Name: Type authorized ID of the NVR. Default ID is **admin**.
- Password: Type corresponding password of the ID. Default Password is **1111**.
- Confirm Password: Retype the password to confirm.

- If users want to scan the devices instead of typing the information manually, please Click **'Scan device'**. It will automatically detect NVR units currently connected to local networks.
- Click **"Scan Device"**, then following **'Dialog'** will pop up.

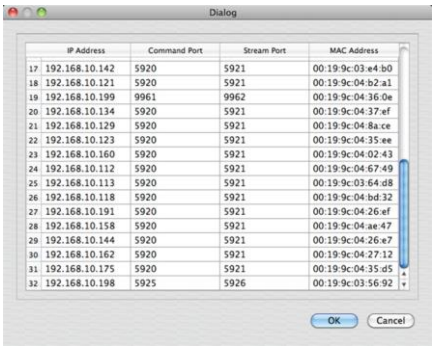

- Including IP address, the information of connected NVRs in the network will be listed.
- Select the one and Click **'OK'.** Then, the following window will pop up.

- Please fill out all the necessary information including Device name, Description (not mandatory), User Name and Password and confirm password. Please note that the User Name and Password have to be same as the NVR setting.
- When users want to edit the existing device information, please choose the device and Click 'Edit.
- When users want to delete the existing device information on the list, please select the device and Click 'Remove'.
- If users click the 'Remove' button, it will show the message below.

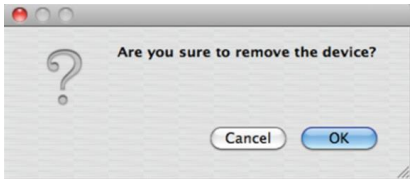

- Please Click the 'OK' button to remove the connected device

7.4.2.2 Display Setup

- Please Click '**Display Setup**' and the following screen will display.

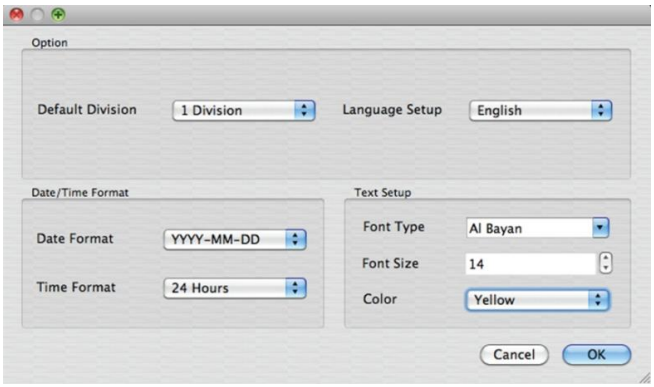

- Users can adjust and set the peripheral values of the display window.
  - Default Division: Users can select the number of division of display channels when the program initially starts the screen. (1, 4, 9, 16, 25, 36 or 64).
  - Users can choose either English or Korean in language setup.

NOTE

This option will be applied after program restarts.

- Date / Time format: Users can adjust and set the mode of date / time display in accordance with the location.
  - Date Format: select the date format among YYYY-MM-DD/MM-DD-YYYY/DD-MM-YYYY.
  - Time Format: select the time format between 24Hours/ 12 Hours AM/PM.
- Display Font: Users can change the font of the name and display time of each channel.
  - Font Type: select the type of font between Arial / Courier.
  - Font Size: select the size of the font from 10 to 20 and the default is 15.
  - Color: select the color among 16 different colors.

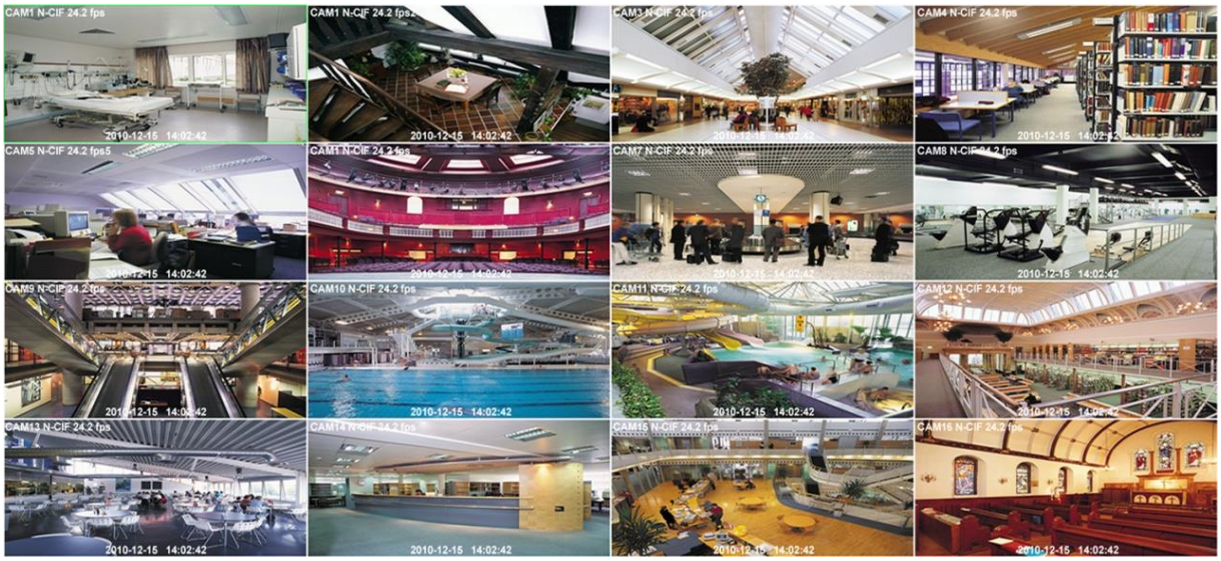

7.4.2.3 Password Change

- Please Click Password Change in setup menu to change the password. This ID and password is for opening the iCMS. This is not related to any NVR's login password

- Please select the ID from the drop down list and type original password.
- Please type new password and confirm the password below.
- If the information is filled out, click 'OK' to finish the Password change.

7.5 Live View

7.5.1 Connection

- Please choose one of the registered sites in Server list on the right hand side of the ‘Live Display’ screen and the right Click on the mouse button will pop up the menu with ‘Connect’.
- Click ‘Connect’ to connect the NVR.

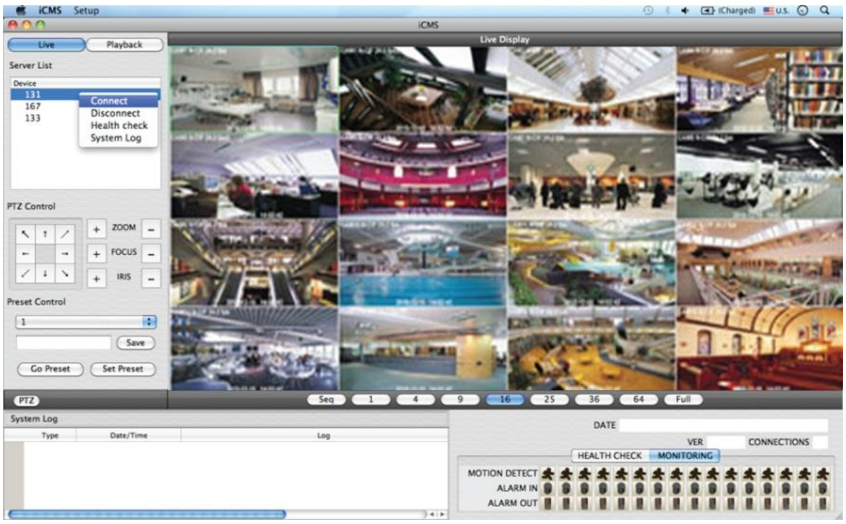

- To have multiple channels, please choose the channel from the bar below the **‘Live Display’** screen (1, 4, 9, 16, 25, 36, 64 and Full).

7.5.2 Display Mode

- Full Screen Mode: Select a channel and Click on number “1” button. Then, the corresponding channel will display in Full Screen.
- Quad Screen Mode: Click on No.4 button and a quad screen will display. The quad screen is in combination of 1~4, 5~8, 9~12 and 13~16. If users select Channel No. 7 and Click the button, 5~8 quad screen will display. Similarly, if users select Channel No. 16, 13~16 quad screen will display.
- 9-Split Screen Mode: Click on No.9 button and 9-split screen will display. The 9-split screen is in combination of 1~9 and 8~16. If users select Channel No. 9 and Click the button, 1~9 split screens will display. Similarly, if users select Channel No. 10, 8~16 split screens will display.
- 16-Split Screen Mode: Click on No.16 button and 16-split screens will display.
- 25-Split Screen Mode: Click on No.25 button and 25-split screens will display.
- 36-Split Screen Mode: Click on No.25 button and 36-split screens will display.
- 64-Split Screen Mode: Click on No.64 button and 64-split screens will display.
- Seq: Click ‘Seq’ and then it will show an ordered list of display which will change the channel of live display to next channels. For example, In 4 channel display CH5 to CH8 on the display screen will change to CH9 to CH12 consequently.

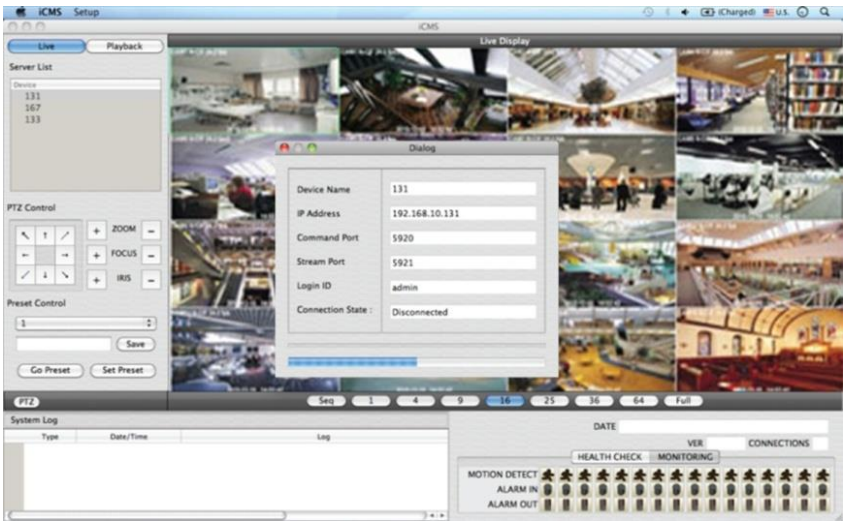

NOTE

The selected channel is outlined in blue

7.5.3 Health Check

- Please choose one of the registered sites in Server list and the right Click on the mouse button will pop up the menu with 'Health Check'.
- Please choose 'Health check' function when users want to check the status of the NVRs.
- Now users can choose either Health Check or Monitoring to see the status of the NVR at the bottom of the right corner.

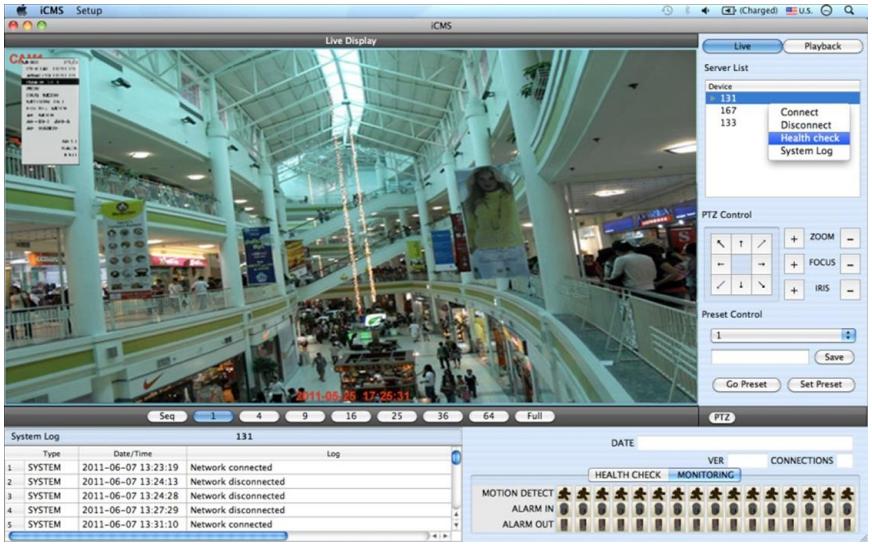

- Health check shows the status of how many cameras are activated, how many HDDs are available, and how many channels are recorded.
- Monitoring shows the status of the number of alarm in and alarm out are activated.

Number	Description
1	NVR name
2	Start and finish recorded date and time
3	The version of the firmware
4	The number of Connected network(ex. CMS, Mobile CMS, etc.) to the NVR

7.5.4 PTZ Control

- Under the server list, PTZ control can be found. This is for the control of Pan/Tilt/Zoom cameras.
- Buttons on the screen have the following functions.
  - Up/Down/Left/Right direction buttons

- Zoom In/Out, Focus Near/Far, Iris Close/Open

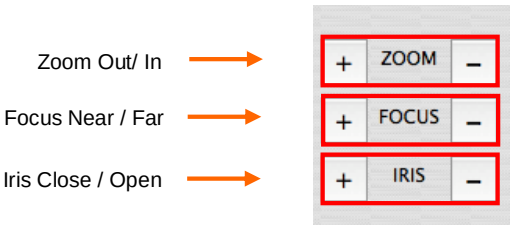

- Preset Control button

- Please choose the number from the drop down list from 1 to 256.
- After selecting the number, please type the description on the empty space below the drop down list and Click “Save”.
- If users think that the certain spot is important or need to have precautions, then they can set up the spot as **‘Preset’**.
- When the preset is setup up, Click **‘Go Preset’** to move to preset spot.
  - PTZ control menu can be hidden by Clicking PTZ ICON below the PTZ menu.

7.5.5 System Log

- In the Live mode, system Log is shown. This will allow users to check System Log of Remote Site (NVR).

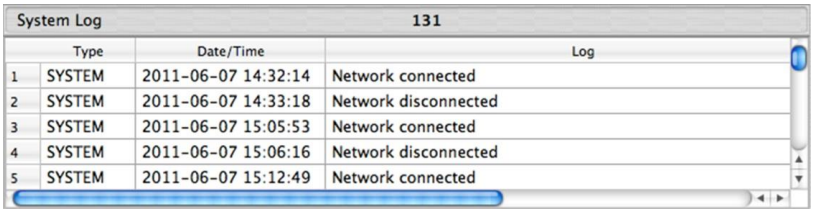

7.6 Search Mode

- This involves searching recorded video to playback the video of a specific date and time.
- Users are able to search the recorded data in the iCMS program by Date/Time, Event, and POS/ATM Search.
  - **Date/Time Search:** search by inputting date/time.
  - **Event Search:** search by event.
  - **POS/ATM Search:** search by POS or ATM text with time.

7.6.1 Date/Time Search

- Click Playback and following screen will display.

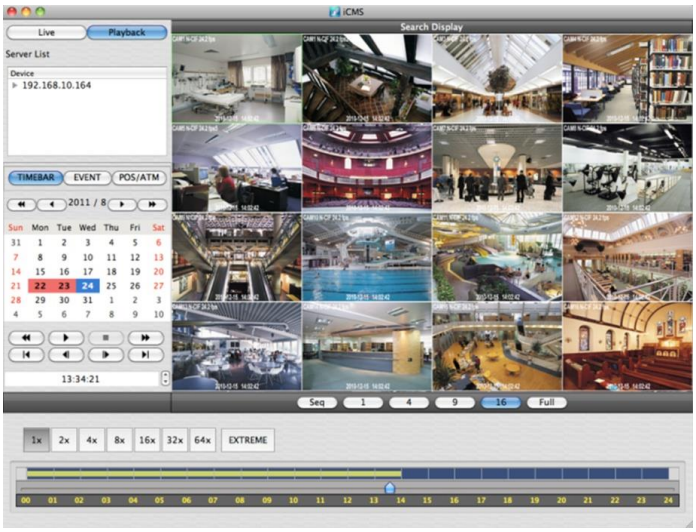

- Please choose one of the devices to playback from the Server List and right Click on the mouse to have popup menu with Connect.
- Select Date
  - In calendar, dates with recorded data are marked in red.
- Select the date among the dates marked in red.
- Select Time
  - Please select the time that users want to playback by Clicking ▲, ▼ buttons on the right-hand side to adjust the time or drag the Time Select Bar with mouse.

◀◀	Search previous 'Year'
▶▶	Search next 'Year'
◀	Search previous 'Month'
▶	Search next 'Month'

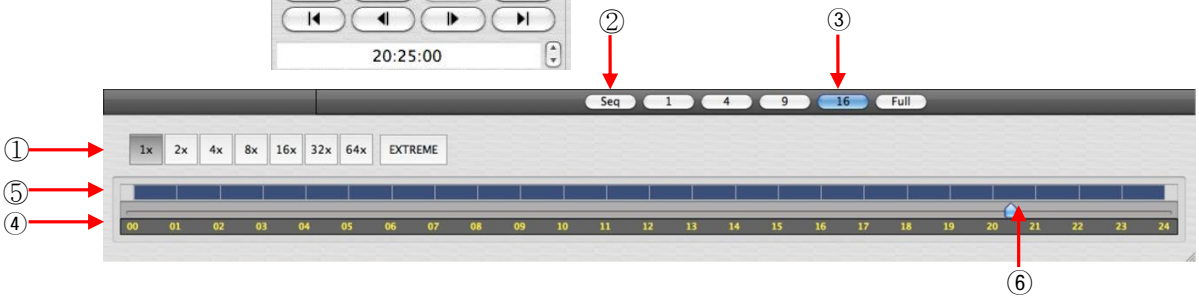

1	Fast Forward/Backward & Playback (Click the button to increase the speed by x1, x2, x4, x8, x16, x32, x64 and Extreme)
2	Sequence Mode
3	Display Mode (Click the button to divide the screen by 1, 4, 9, 16 and Full)
4	Time Bar (24 Hour)
5	Data Bar (Recorded data)
6	Time Select Bar

- When Date/Time search is completed, please Click Playback control button to begin playback.

7.6.2 Event Search

- The Event button allows users to search event recorded data of NVR.
- To start the event search, please Click **'EVENT'** and users will see the following screen.

- Please choose one of the devices among the **'Server List'** and right Click on the mouse to have popup menu with Connect.

• Please Click **‘Connect’** to start the event search
• Event search has Event Type, Select Camera and Date/Time setting.
① **Event Type:** it has Emergency and Alarm. Please choose one event that users want to use.
② **Select Camera:** Please select the camera that users want to view from Cam1 to Cam 16 for the event (Only 1 camera can be selected).
③ **Date/Time setting**: Please select the begin and end time by Clicking the up/down arrows and Click “Search”

7.6.3 POS/ATM

• POS/ATM button allows users to search for the POS/ATM text data by keyword.
• Please Click **‘POS/ATM’** button right next to the **‘EVENT’** and users will see the following screen.

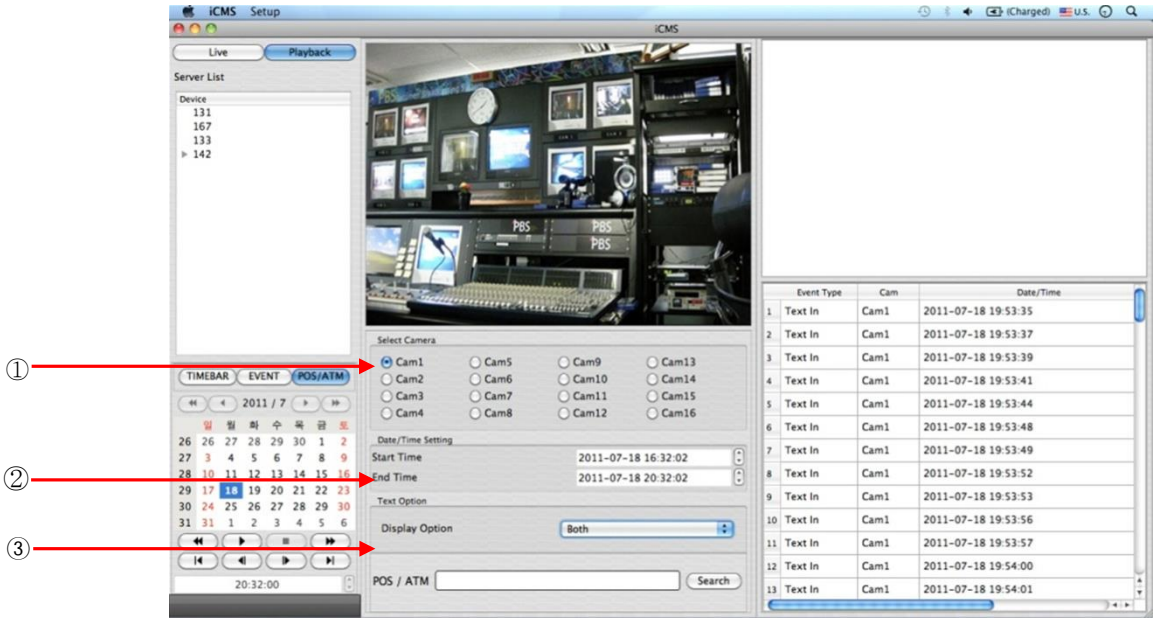

• Please choose one of the devices among the ‘Server List’ and right Click on the mouse to have popup menu.
• Please Click **‘Connect’** to start the event search
• Event search has Event Type, Select Camera and Date/Time setting.
① **Select Camera**: select a camera which has Text In connection to search (Only 1 camera can be selected).
② **Date/Time setting:** please specify the start and end time
③ **Text Option**
- Display Option: Users are able to select the display option of the playback.
1. Text window: The detected text will be shown on the **‘Windows text’** right next to the **‘Display screen’**.
2. Overlay: The text will be overlaid on the playback video.
3. Both: The text will be overlaid on the video and the text window as well.
4. Hide All: The text will not be displayed in both video and the text window.

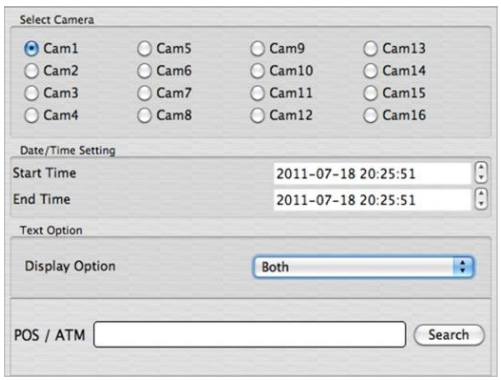

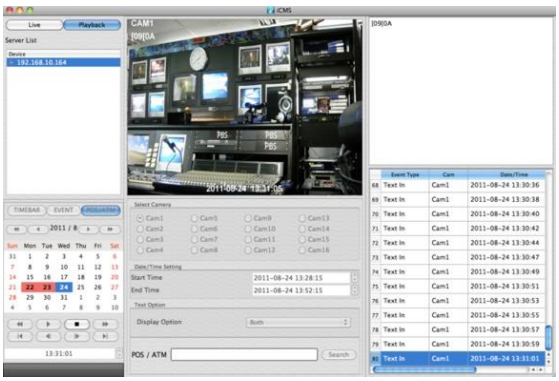

• Please fill out the text box with the searching keyword and click “Search”.

• The following screen shows the result of the POS/ATM search.

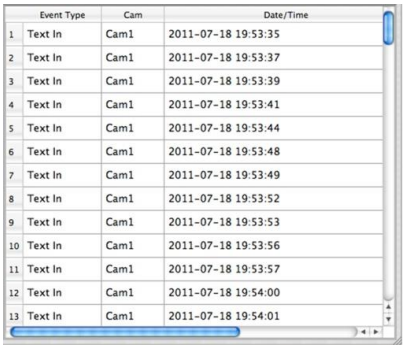

	Event Type	Cam	Date/Time
1	Text In	Cam1	2011-07-18 19:53:35
2	Text In	Cam1	2011-07-18 19:53:37
3	Text In	Cam1	2011-07-18 19:53:39
4	Text In	Cam1	2011-07-18 19:53:41
5	Text In	Cam1	2011-07-18 19:53:44
6	Text In	Cam1	2011-07-18 19:53:48
7	Text In	Cam1	2011-07-18 19:53:49
8	Text In	Cam1	2011-07-18 19:53:52
9	Text In	Cam1	2011-07-18 19:53:53
10	Text In	Cam1	2011-07-18 19:53:56
11	Text In	Cam1	2011-07-18 19:53:57
12	Text In	Cam1	2011-07-18 19:54:00
13	Text In	Cam1	2011-07-18 19:54:01

• Double Click on the event to playback of the data.

7.7 Disconnection

• When disconnect, please right Click on the connected site and choose ‘Disconnect’

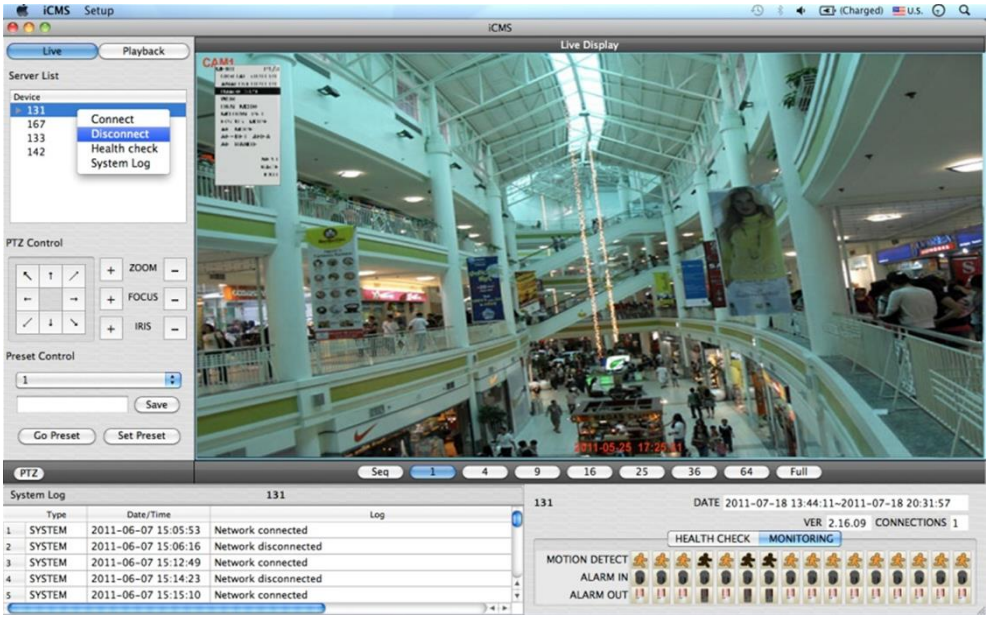

• if users Click **‘Disconnect’**, the message box below will display

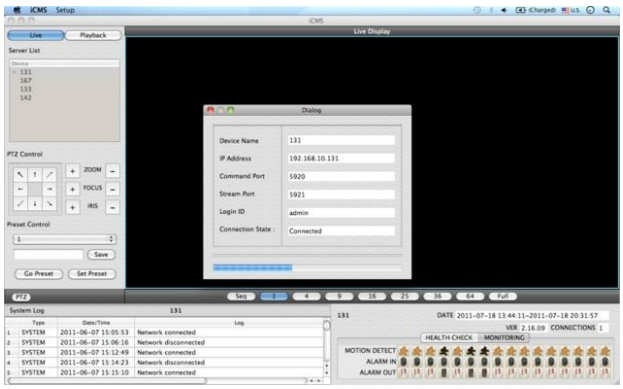

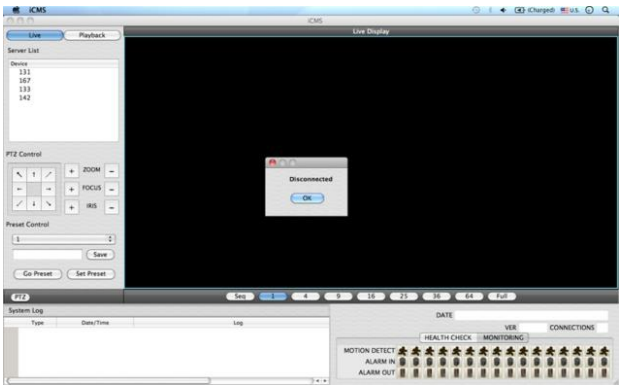

7.8 Uninstall

• Please go into the **‘Application’** folder and right Click on the iCMS icon.

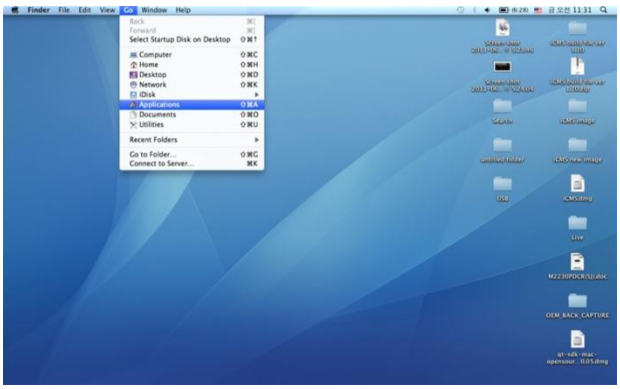

• Please choose **‘Move to Trash’** to uninstall the iCMS program

CMS Web Client Pro

User`s Manual

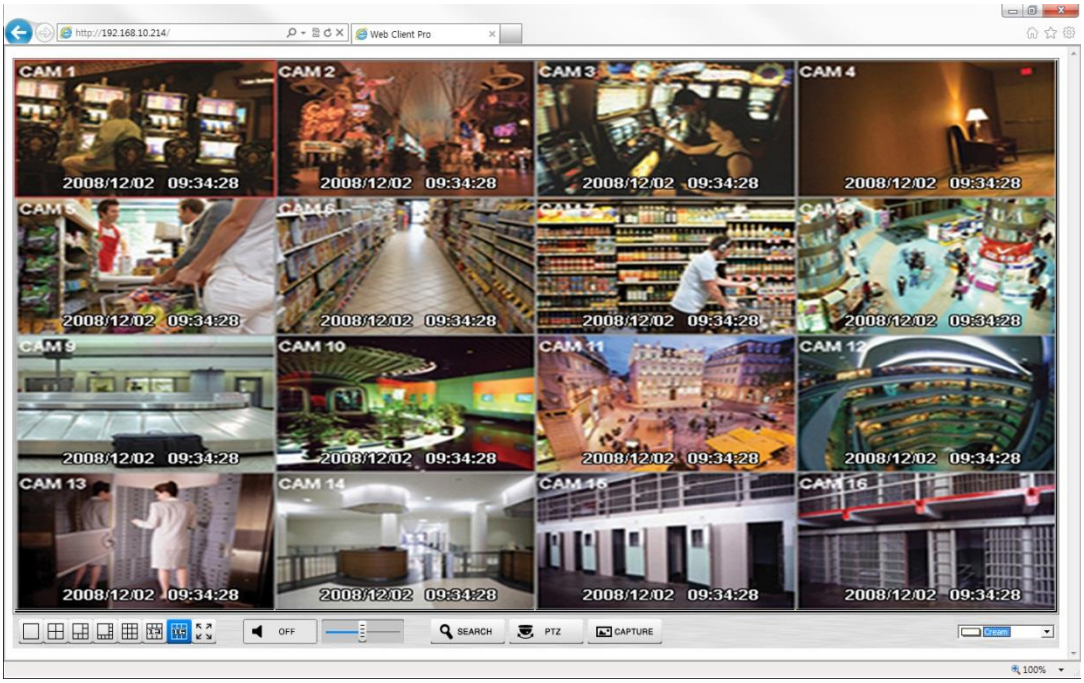

This document contains preliminary information and is subject to change without notice.

8. CMS WEB CLIENT Pro

8.1 System Requirements

• Web Client Pro may not run properly if the PC does not meet minimum requirements. Other programs should not run on the same PC where this is running. Otherwise, Web Client Pro software may not perform as designed.

	Minimum (Enable Dual Streaming)	Recommended (Disable Dual Streaming)
CPU	Intel Core i5	Intel Core i7
Main Memory	2GB	4GB or higher
Video Memory	1GB	2GB or higher
Display Resolution	1024 x 768 (with 32bit color) or higher	
HDD Storage Space	160GB or higher	
Network	100~1000 Mbps Fast Ethernet	
Operating System	Windows XP Professional SP3 / Windows 7 (32/64) / Windows 8 (32/64)	
Others	DirectX 9.0 C or higher	

8.2 Setup and Login

• MS Explorer web browser is required to install ActiveX in order to use this program.
• Open a browser and type the IP address of NVR. It is required to install ActiveX in the first connection.
• Click the message above in the screen, then following menu box will display.

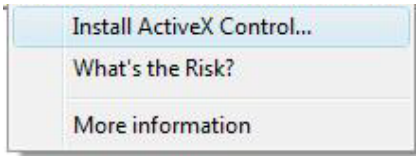

• Click “Install ActiveX Control…” and start installation.
• Installation box will displays and Click “Install” for next step.
• After complete installation, Login panel will display.
• Enter User ID and password of registered NVR then Click “OK”

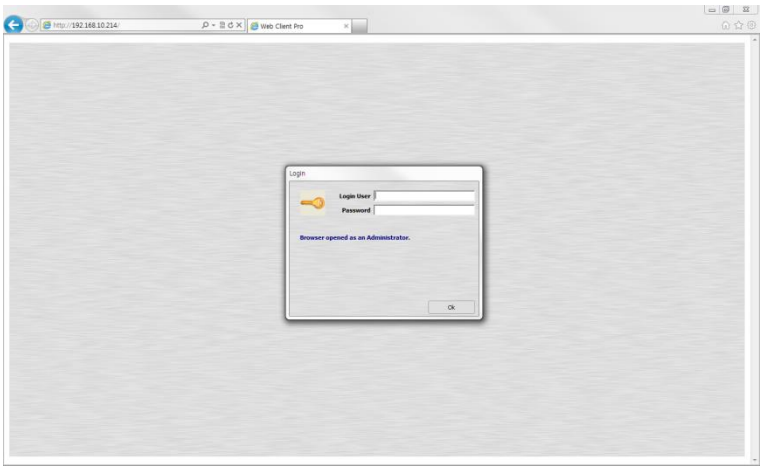

NOTE
Before network connection, be sure that HDD is installed. Otherwise, the NVR will not be connected over network.

8.3 Live Display

• After Login, following screen will display.

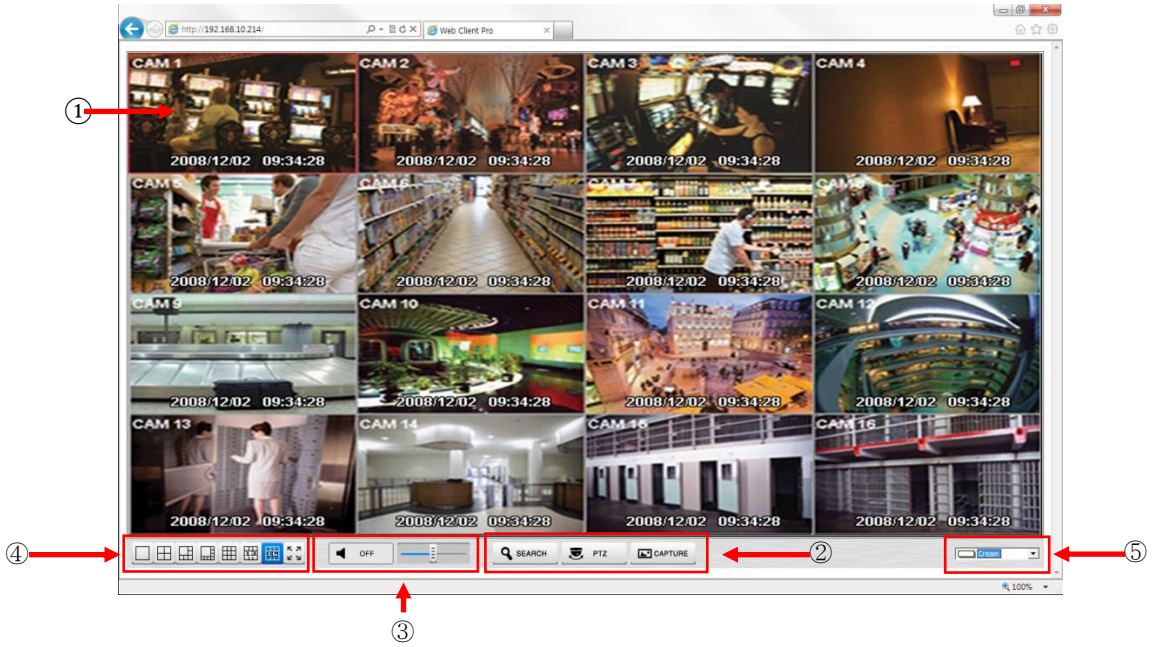

• The screen contains following features:

① Display current live video

② Setting display mode

- Search: Opening search mode in new window.
- PTZ: Open PTZ control panel.
- Capture: Capturing the image of selected channel.

③ Audio controller

- Able to control the volume.

④ Select display split mode. A user can choose 1, 4, 6, 8, 9, 13, 16 and Full screen.

⑤ OSD Font color

- Able to change the color of the OSD font.

• Additional features can be found with Right Click on Live screen.

① Digital zoom(1CH Display ONLY)

- Able to Zoom in for precise monitoring.

② Audio On/Off

- Able to turn on/off Audio function.

③ Display Option

- Show Camera Name: Display Camera Name on OSD
- Show Date/Time: Display Date/Time on OSD

④ About

- Display version information.

8.4 Search Screen

• Click SEARCH then following screen will display on a new window.

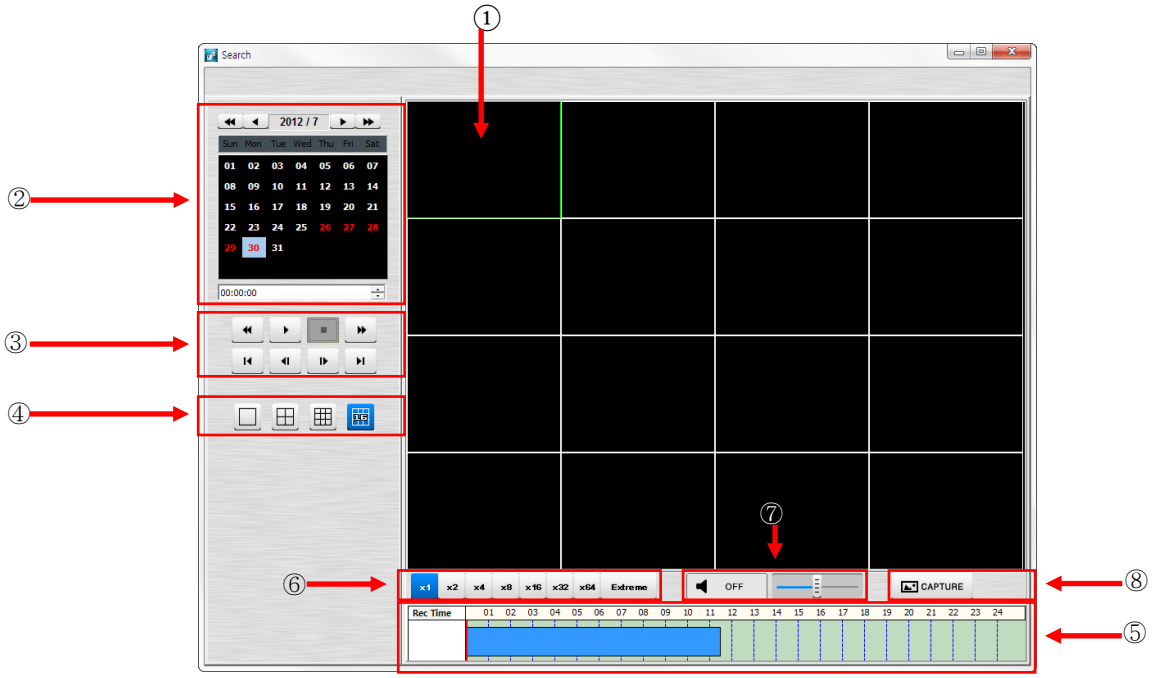

• The screen contains following features:

① Searched playback video displays.

② Setting Date/Time to search.

- Click a date in calendar, and then recorded data will be showed up in Time bar.
- Start Time: Setting starts time.
- Camera: Choosing camera number from 1~16 individually or all channels.

③ Play functions for playback.

	Fast Backward Play
	Fast Forward Play
	Play
	Stop
	Go to the First Image
	Go to the Last Image
	Go to the Previous Image
	Go to the Next Image

④ Select display split mode. A user can choose 1, 4,9,16 split displays consequently.

⑤ Indicate the recorded data in Time bar figure.

⑥ Select playback speed. A user can choose x1, x2, x4, x8, x16, x32, x64 and Extreme.

⑦ Audio controller

- Able to turn on/off Audio.
- Able to control the volume

⑧ Capturing the image of selected channel.

8.5 PTZ Control

• Click

then following screen will display on a new window.

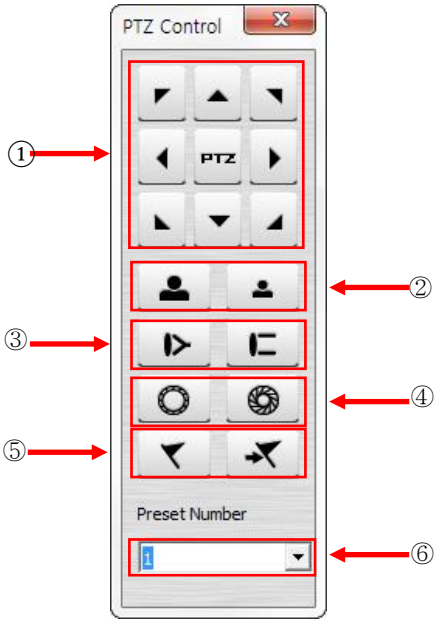

• The screen contains following features:

① Pan/Tilt Direction button.
② Zoom In / Zoom Out control button.
③ Focus Near / Focus Far control button.
④ Iris control button
⑤ Preset control button
⑥ Camera select button.

NOTE
Must complete the control setting on its NVR and Cameras first.

8.6 Capture

• Click then following screen will display on a new window.

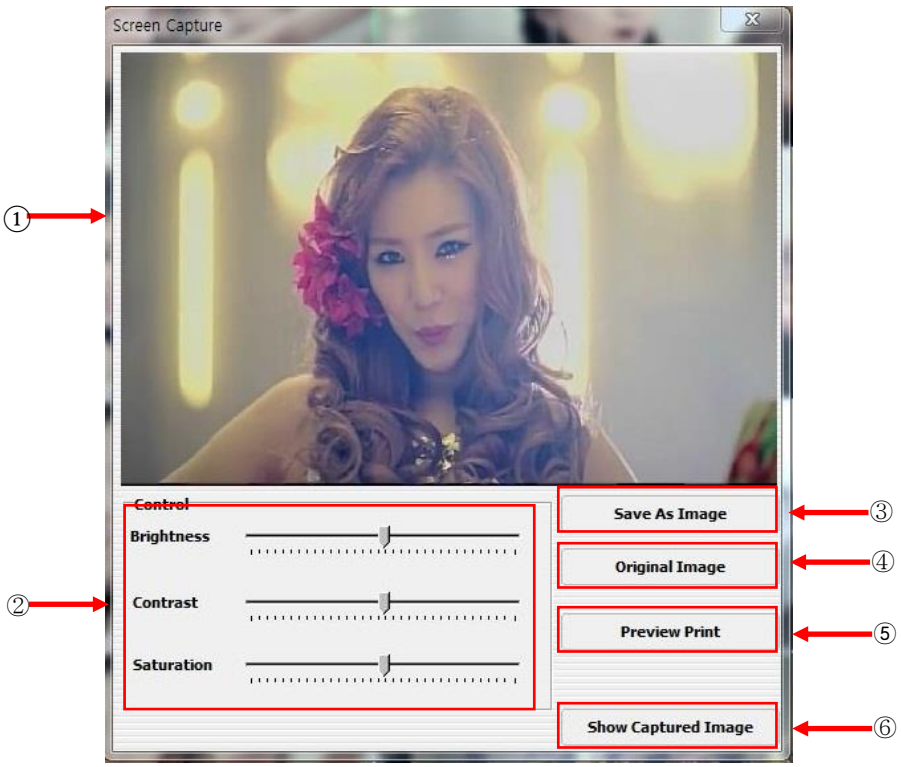

• The screen contains following features:

① Captured Image is displayed.

② Color Control

- A user can change Brightness, Contrast and Saturation of the captured image.

③ Save as Image

- A user can save the edited image in new name.

④ Original Image

- A user can undo all modification made to the image.

⑤ Preview Print

- Able to see print preview.

⑥ Show Captured Image

- Display all the previous captured images

CMS Mobile Viewer

User`s Manual

This document contains preliminary information and is subject to change without notice.

9. CMS MOBILE VIEWER

9.1 iPhone / iPad (mViewer Pro)

9.1.1 System Requirements

- There are no other requirements to run this program because it is specialized to perform on iOS interface.

9.1.2 Installation

- Turn on the iPhone or iPad then connect to App Store.
- Move to search menu and type “mviewer” then tap “ Search ”.

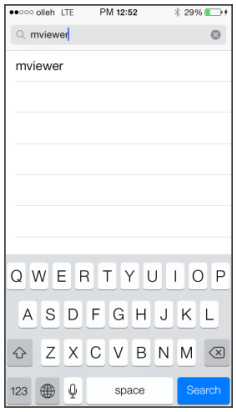

- Select “ ” program which is offered by dvrdomain for free.

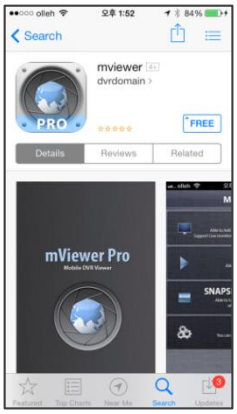

- When a user tap a “ FREE ” button, it will be turned to “ INSTALL ”
- Tap “ INSTALL ” to start installation.
- If a user already has Apple account, then input user’s account to download the program.

• If a user does not have the account, then Tap “ Create New Apple ID ” and it is registered by free.

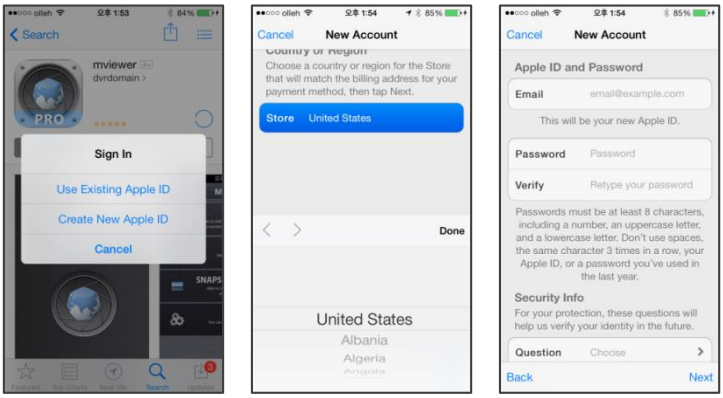
Search
mviewer
dvrdomain
Sign In
Use Existing Apple ID
Create New Apple ID
Cancel
Cancel
New Account
Choose a country or region for the Store that will match the billing address for your payment method, then tap Next.
Store United States
Done
United States
Albania
Algeria
Cancel
New Account
Apple ID and Password
Email
email@example.com
This will be your new Apple ID.
Password
Password
Verify
Retype your password
Passwords must be at least 8 characters, including a number, an uppercase letter, and a lowercase letter. Don't use spaces, the same character 3 times in a row, your Apple ID, or a password you've used in the last year.
Security Info
For your protection, these questions will help us verify your identity in the future.
Question
Choose
Back
Next

• When a user registers the account, the program will be automatically installed.

9.1.3 Site Registration

• Tap “ ” icon on iPhone or iPad then below will show.

• Tap “ MONITORING ” then below will show.

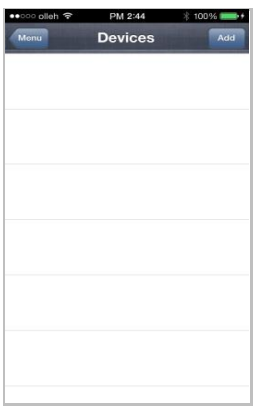

• Tap “ Add ” and enter site information which are same as CMS Pro site registration.

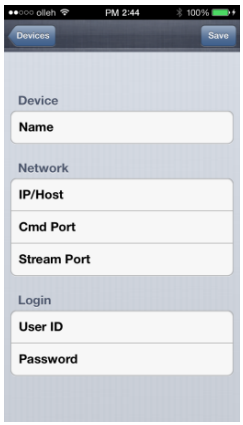

• Enter Site Name, IP or DDNS address.
• Enter Admin/Stream port value. (Default, 5920/5921)
• Enter ID/Password. (Default, admin/1111)

• Tap “ Save ” to save the setting.

• To edit the saved site, tap “ ” next to site Name, then change the value, and tap “ Save ”.

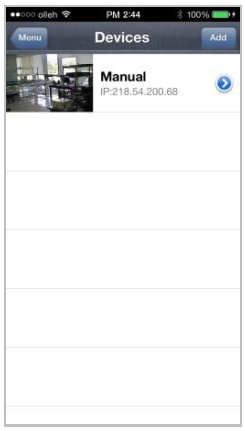

• To delete the saved site, slide the finger from right to left across Device Name. Then tap” Delete ” to remove the site.

9.1.4 Connection

• Tap on Device Name to connect the NVR to iPhone or iPad

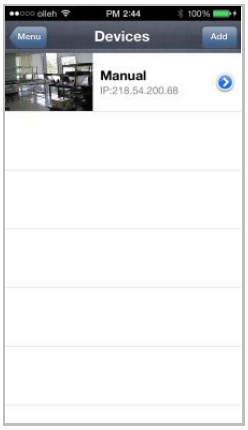

9.1.5 Live View (Portrait View)

- To select other channels,
  - Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
  - Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)
- Tap " " to take Snapshot.
- Tap " " to enable Frame skip or Tap " " to disable Frame skip.
- Tap "

" to choose split mode between 1, 4, 9 and 16.

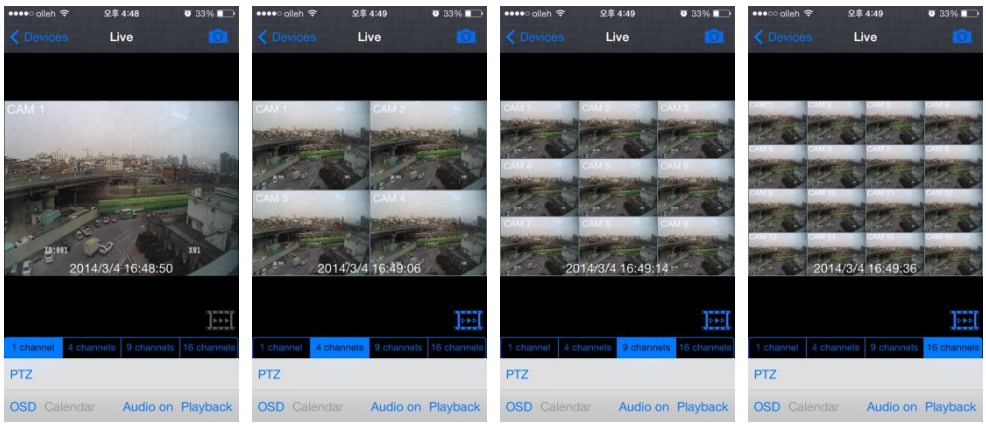

-In Multi-channel display mode, a user can double tap on certain channel to change to 1CH display mode.

- Tap "PTZ" to enable PTZ function. Please refer to **9.1.7 PTZ Control** for more detail.
- Tap "OSD" to remove Camera Name and Date/Time from OSD.
- Tap "Audio on" to enable audio or Tap "Audio off" to disable audio. (1CH display ONLY)
- Tap "Playback" to switch from Live mode to Playback mode.
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE
Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

NOTE
If a user enable frame skip, used memories will be stable and It's possible to use it on live mode and playback mode.

9.1.6 Live View (Landscape View)

- To select other channels,
  - Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
  - Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)
- Tap "Back" to go back to main menu.
- Tap "□ ⊞ ▦ 16" to choose split mode between 1, 4, 9 and 16.
  - In Multi-channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap "PTZ" to enable PTZ function. Please refer to **9.1.7 PTZ Control** for more detail.
- Tap "🎞" to enable Frame skip or Tap "🎞" to disable Frame skip.
- Tap "Audio" to enable audio or Tap "Audio"to disable audio. (1CH display ONLY)
- Tap "📷" to take Snapshot.
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE
Audio, Zoom and PTZ are available only in full screen mode. (1channel only)

NOTE
If a user enable frame skip, used memories will be stable and It's possible to use it on live mode and playback mode.

9.1.7 PTZ Control

- Users are able to control PTZ with iPhone or iPad by touching the screen.
- Tap "PTZ" or "PTZ" to execute PTZ function.

- Tap Arrow for Pan and Tilt movement.

• Touch “ ” to zoom out.

• Touch “ ” to zoom in.

• If users already set up the presets on NVR, users may use them by touching “P1 P2 P3”.

9.1.8 Search

• Users are able to search the recorded data with iPhone or iPad

• Tap “PLAYBACK” on Main menu or “Playback” on Live monitoring to use search function.

• Choose date that wish to search from Calendar

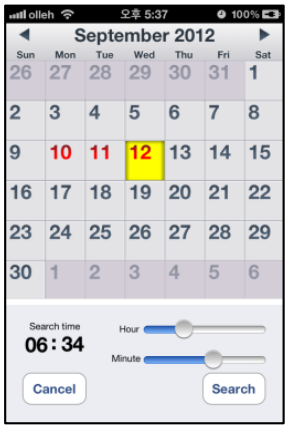

• Choose time to search by sliding the Hour and Minute bar.

• Tap “Search” to execute search.

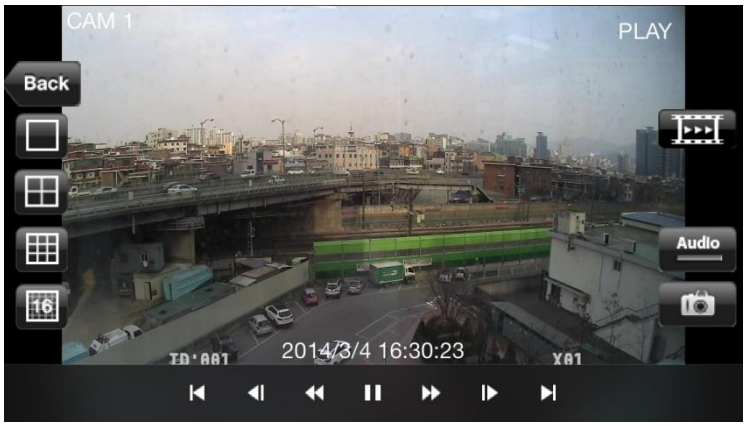

• To select other channels,
  - Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
  - Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)

• Tap “

” or “

” “to choose split mode between 1, 4, 9 and 16.
  - In Multi-channel display mode, user can double tap on certain channel to change to 1CH display mode.

• Tap “ ” or “ ” to control the playback.

• Tap “ ” or “ ” to take Snapshot.

• Tap “OSD” to remove Camera Name and Date/Time from OSD.

• Tap “Live” to switch from Live mode to Playback mode.

• Tap “ ” or “ ” to enable Frame skip.

• Tap “ ” or “ ” to disable Frame skip.

• Tap “Audio on” or “ ” to enable audio. (1CH display ONLY)

• Tap “Audio off” or “ ”to disable audio. (1CH display ONLY)

• To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE

Audio, Zoom and PTZ are available only in full screen mode. (1channel only)

NOTE

If a user enable frame skip, used memories will be stable and It’s possible to use it on live mode and playback mode.

9.1.9 Snapshot gallery

• Users are able to save the snapshot taken with mViewer pro while live monitoring and Playback.

• Tap “Snapshot gallery” from main menu.

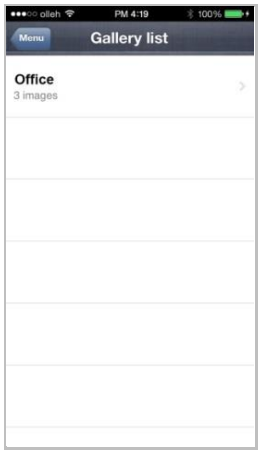

• Select the device and snapshot taken from the selected device will display.

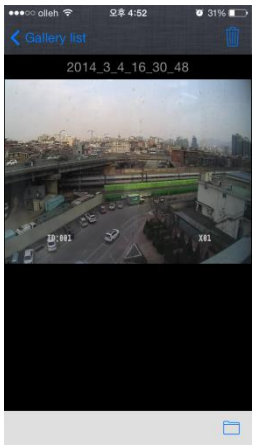

• To see other pictures slide finger across the screen.

• Tap “ ” to send the snapshot to the Photos.

• Tap ” ” to delete the selected snapshot.

9.1.10 Setting

- Tap "SETTING" to check the information of the application.
- A user can read the manual.

9.1.11 Uninstallation

- Tap the " " icon and hold for a while until the program icon shows "**x**" mark on the top-left side.

- Tap "**X**" mark then Delete popup will show

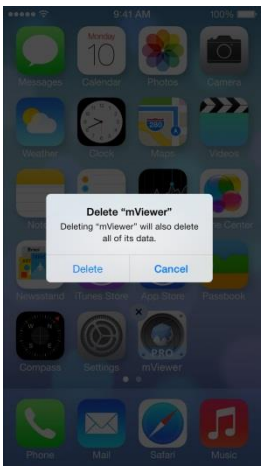

- Tap "

" button to successfully uninstall the program.

9.2 Android Phone (mViewer Pro)

9.2.1 System Requirements

- This program is designed and applied only for Android OS (version 2.3 or higher) based mobile device.
- Display: Min. 3.7 inch screen

> **NOTE**
> mViewer Pro might not work even though Android OS version is high enough. It is due to the hardware specification of Android device.

9.2.2 Installation

- Turn on the mobile device then connect to Play Store.
- Move to search menu and type “mViewerpro” then select “ ” program which is offered from dvrdomain for free.

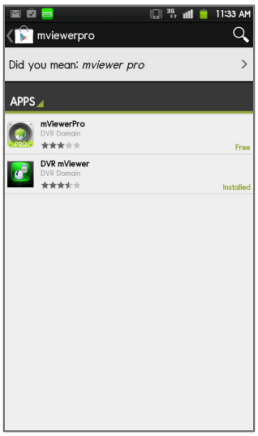

- Tap “

” then “

” to start installation.

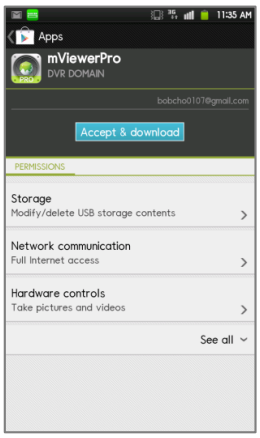

- The program will be automatically installed in user’s application menu.

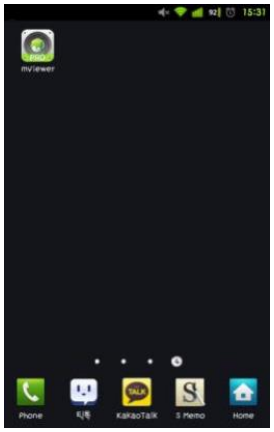

9.2.3 Site Registration

• Tap “ ” icon on application menu then below will show.

• Tap “MONITORING” on the main menu and tap “ ” on top right corner.

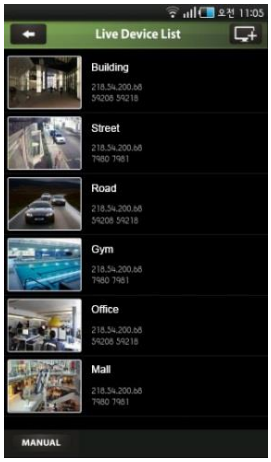

• Enter Device Name, IP/Host address.
• Enter Cmd/Stream port value. (Default, 5920/5921)
• Enter User ID/Password. (Default, admin/1111)
• Tap “OK” to save the setting.
• To edit or delete the saved site, press the Device Name for 2 sec from Live Device List and popup menu will display.

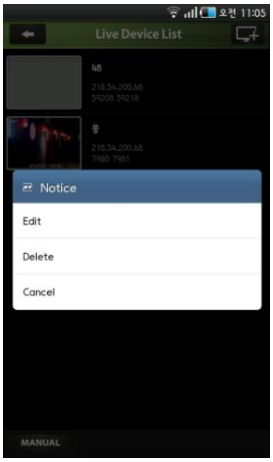

9.2.4 Connection

• Tap on Device Name to connect the NVR to mobile device.

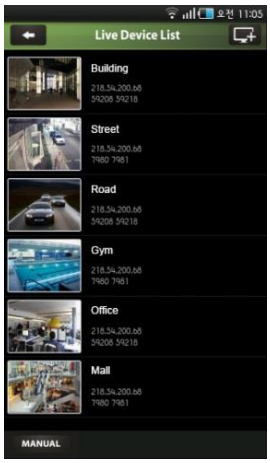

9.2.5 Live View (Portrait View)

• To select other channels,
  - Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
  - Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)

• Tap “ ” to enable Landscape view when the device is tilted

• Tap “ ” to enable Frame skip or Tap “ ” to disable Frame skip.

• Tap “ ” to enable PTZ function. Please refer to **9.2.7 PTZ Control** for more detail.

• Tap “ ” to enable Alarm Out control. Please refer to **9.2.8 Alarm Out Control** for more detail.

• Tap “ ” to enable audio or Tap “ ” to disable audio

• Tap “ ” to change to other Device if there is any.

• Tap “ ” to switch to Search mode.

• Tap on “ ” or “

”to choose split mode between 1, 4, 9 and 16.

- In Multi-channel display mode, a user can double tap on certain channel to change to 1CH display mode.

• Tap “ ” to take Snapshot.

- Enter file name and press “

” to save the image.

• Tap “

” to remove Camera Name and Date/Time from OSD.

NOTE
Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

NOTE
If a user enable frame skip, used memories will be stable and It’s possible to use it on live mode and playback mode.

9.2.6 Live view (Landscape View)

• Tap “ ” to enable landscape view when the device is tilted horizontally.

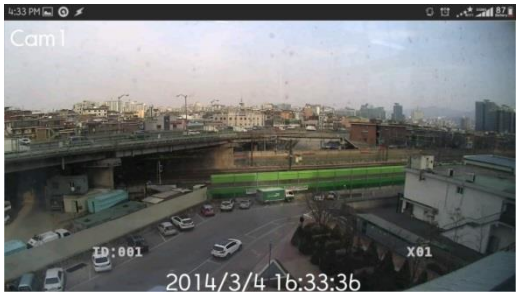

• Tap screen once and menu bar will display on each side of OSD.

• To select other channels,

- Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
- Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)

• Tap on “

” to choose split mode between 1, 4, 9 and 16.

- In Multi-channel display mode, a user can double tap on certain channel to change to 1CH display mode.

• Tap “PTZ” to enable PTZ function. Please refer to **9.2.7 PTZ Control** for more detail.

• Tap “Audio” to enable audio.

• Tap “OSD” to remove Camera Name and Date/Time from OSD.

• Tap “Capture” to take Snapshot.

- Enter file name and press “Save” to save the image.

NOTE
Audio is available only in full screen mode. (1channel only)

9.2.7 PTZ control

• Users are able to control PTZ with mobile device by touching the screen.

• Tap “” or “PTZ” to execute PTZ function.

• Tap Arrow for Pan and Tilt movement.

• Touch “” to zoom out.

• Touch “” to zoom in.

• If users already set up the presets on NVR, users may use them by touching “P1 P2 P3”.

9.2.8 Alarm Out Control

• Users are able to manually send Alarm out command with the mobile device.

• Tap “” to enable the Alarm Out control and it will display on lower left corner of Live screen.

• Tap the numbers to send out Alarm from the connected NVR to its output source.

9.2.9 Search

- Users are able to search the recorded data with mobile device.
- Tap “PLAYBACK” on main menu or “

” on Live monitoring to use search function.

- Choose date and time that wish to search from Calendar
- Tap “

” to execute search.

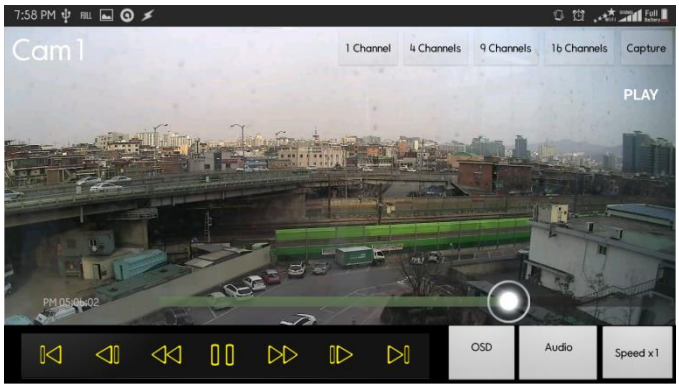

- To select other channels,
  - Slide finger from Right to Left to ascend. (1 → 2 → 3 …… 14 → 15 → 16)
  - Slide finger from Left to Right to descend. (16 → 15 → 14 …… 3 → 2 → 1)
- Tap “
” to enable Frame skip or Tap “
” to disable Frame skip.
- Tap “
” or “

” or “

“to choose split mode between 1, 4, 9 and 16.
  - In Multi-channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap “
” to control the playback.
- Tap “
” to enable Landscape view when the device is tilted.
- Tap “
” to change date/time of Search.
- Tap “
” or “ 

” to enable select FF and REW speed from x1, x2, x4, x8, x16 and Extreme.
- Tap “
” or “ 

” to enable audio. (1CH display ONLY)
- Tap “
” or “ 

”to disable audio. (1CH display ONLY)
- Tap “
” to change to other Device if there is any.
- Tap “
” to switch to Live mode.

• Tap “ ” or “ 

” to take Snapshot.

- Enter file name and press “

” to save the image.

• Tap “ 

” or “

” to remove Camera Name and Date/Time from OSD.

NOTE
Audio and Alarm Out are available only in full screen mode.(1channel only)

NOTE
If a user enable frame skip, used memories will be stable and It’s possible to use it on live mode and playback mode.

9.2.10 Snapshot Gallery

• Users are able to watch snapshot with the mobile device.

• Tap “

” on main menu to enter the gallery.

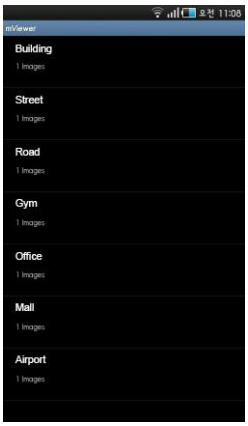

• Tap Device name to view snapshot.
• To see other pictures, slide finger across the screen or touch the thumbnail below.
• To delete the picture/folder,
- Press the device name for 2-3 seconds till pop-up window appears.
- Tap “OK” to delete.

9.2.11 Setting

• Tap “

” to check the information of the application.

• A user can read the manual.
• Users are able to set Password Lock.
- Tap “Password Lock” from the setting menu.
- Enter password. (Default password is 1111)

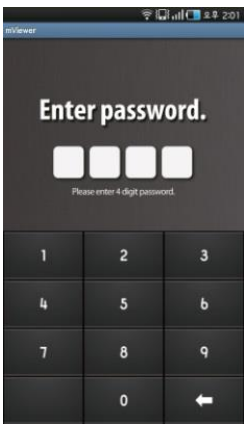

- Tap “ ” to enable Password Lock when launching the mViewer pro.

- Tap “change” to change the password.

9.2.12 Uninstallation

• Move to Setup > Application > Manage Applications then select “ ”.

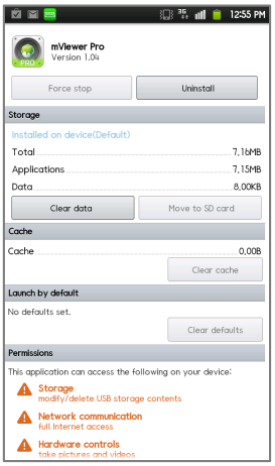

• Tap “Uninstall” icon then it will ask to delete the program.

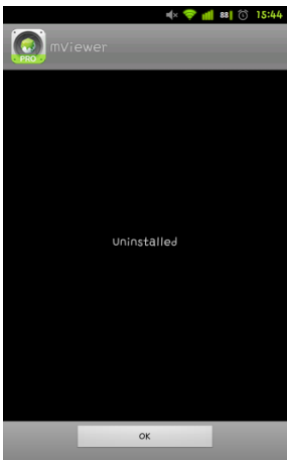

• Tap “OK” button to successfully uninstall the program.

TEXT-IN (POS)

User`s Manual

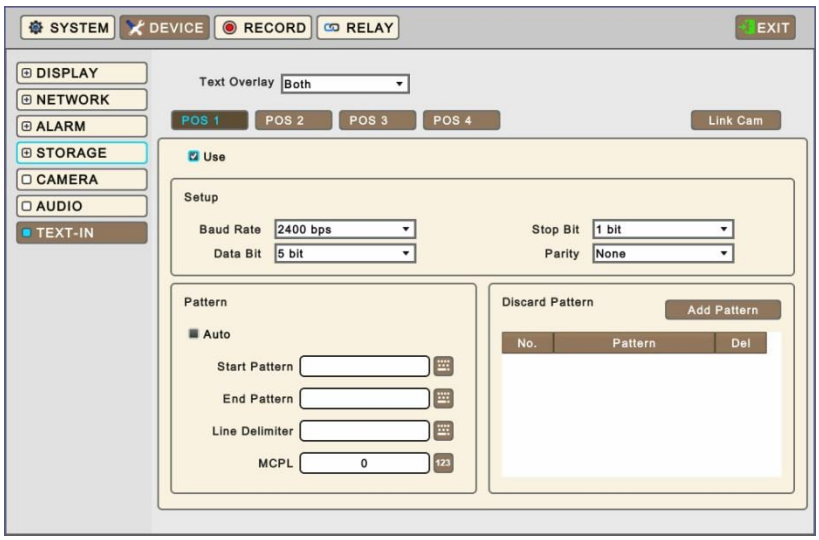

This document contains preliminary information and is subject to change without notice.

10. TEXT-IN (POS)

10.1 Usage of Serial-In Function

- Enables a user may use Serial In connections to record/search/display text data from POS/Cash Register's serial.
- A user can choose the data whether to record/display or both.

10.2 Connection Method

- Up to four ATM/POS channels are available could be connected.
- A NVR uses a USB port for Serial In to connect to a POS/Cash Register. Use correct USB to RS232 converters as follows.
  - FTDI chipset included converter
  - Prolific PL2303 / PL2303X / PL2303HX chipset included converter
  - Winchiphead chipset included converter
- When using a converter, please connect USB slot of NVR first, then restart in order to the NVR recognizes the USB converter as an RS-232 Serial In.
- When using a multi-converter, the port recognizes Serial In1 as its shortest line.

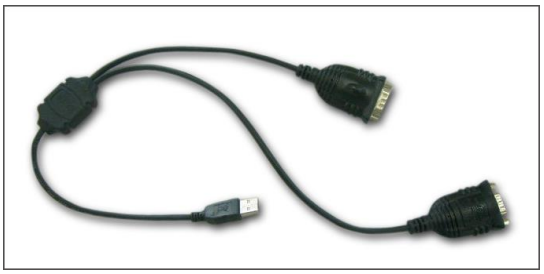

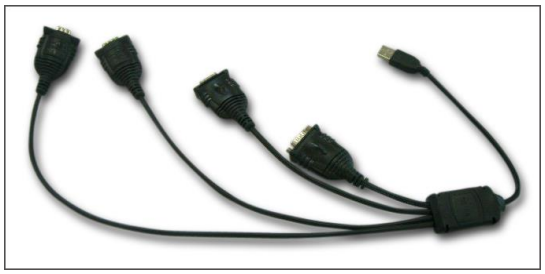

NOTE

A NVR can only recognize English alphanumeric characters.

The maximum extension length for RS-232 cable is 15 meters approximately with no signal loss.

10.3 Connection Diagram

- Users can connect RS-232 port to USB port at front/rear of NVR by using a converter.

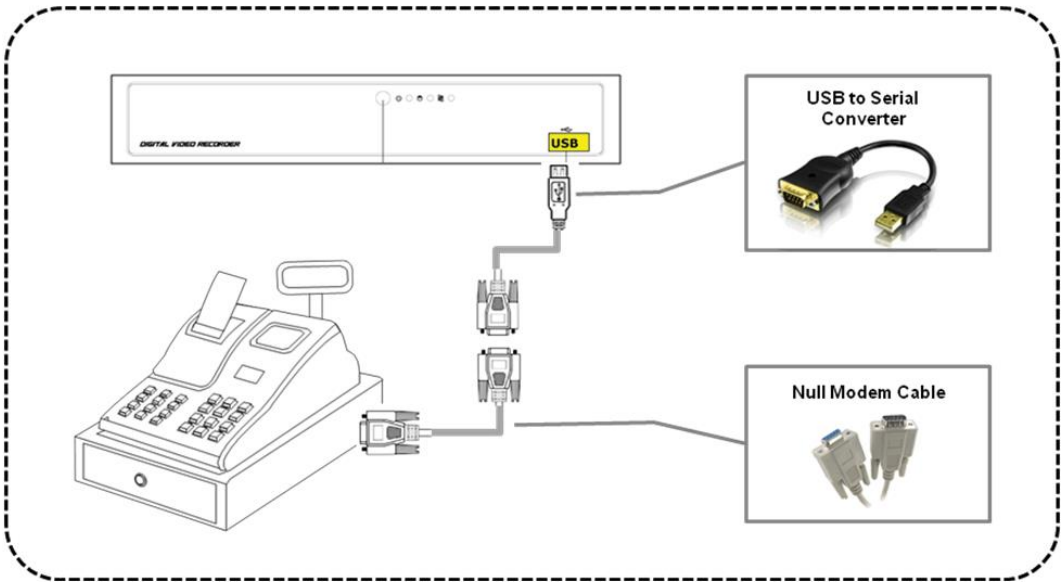

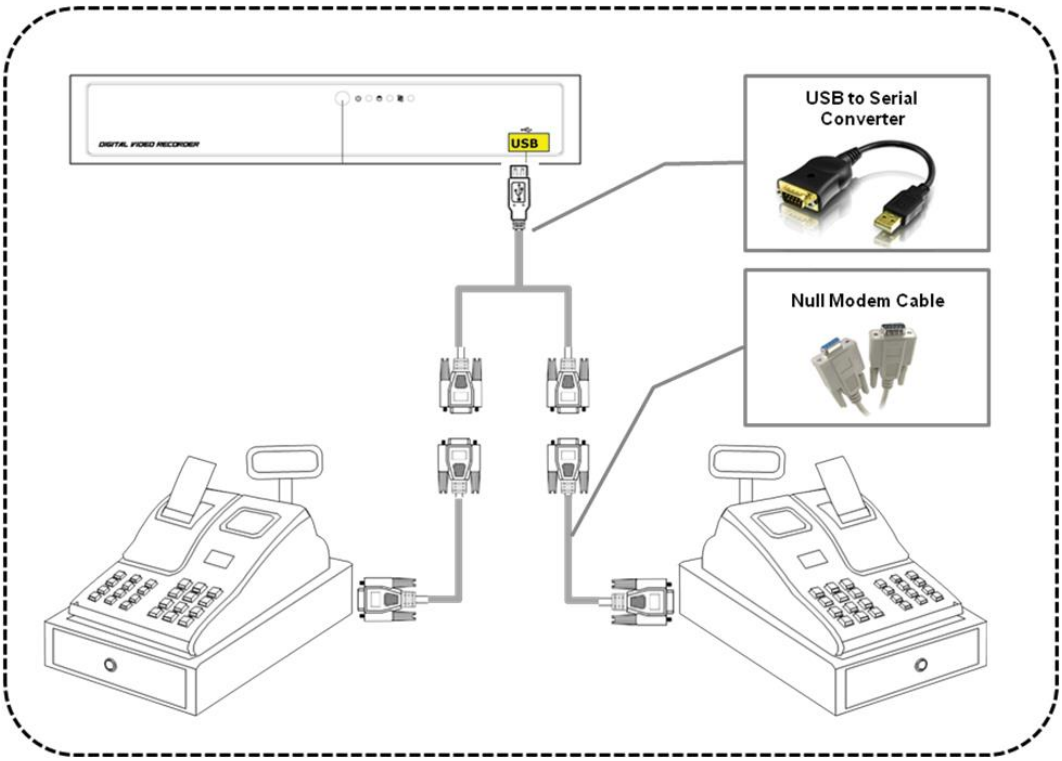

NOTE

- After cables connected and Serial In (NVR menu) values changed, please restart the NVR so that the NVR recognizes attached Serial In connections.
- Use RS232 null modem cable between POS/Cash Register and USB to RS232 converter. RS232 cross-over connector is useful when a user needs to switch the Rx/Tx connections.

Direct connection

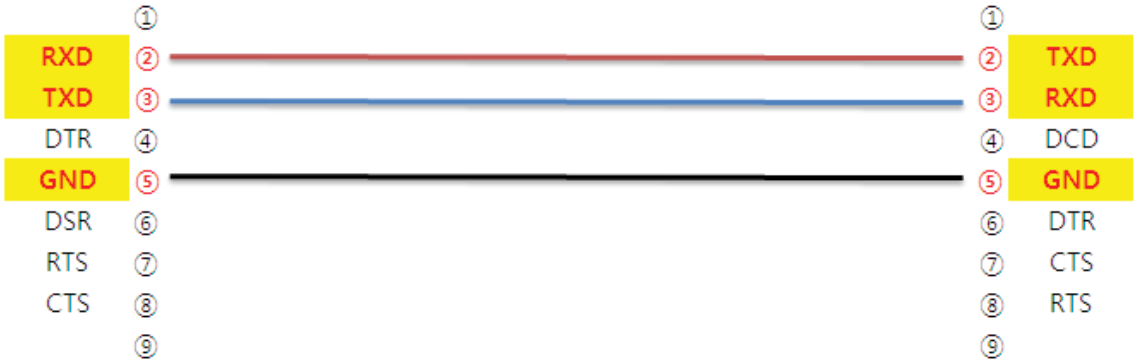

Cross connection[Null modem]

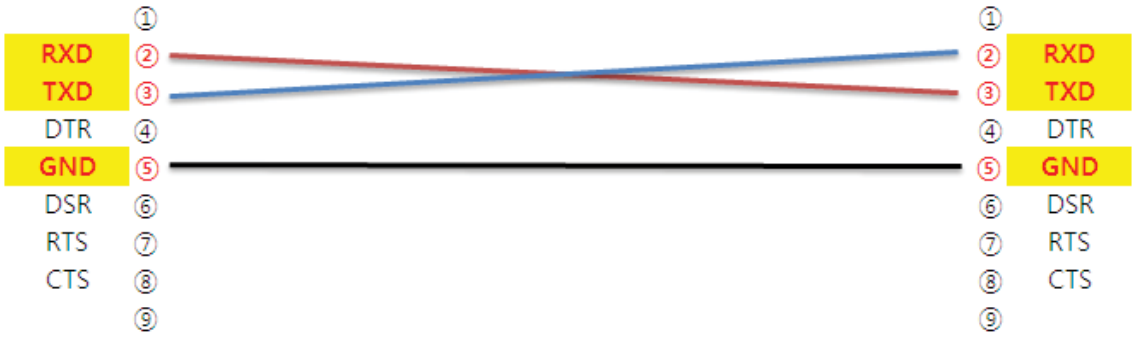

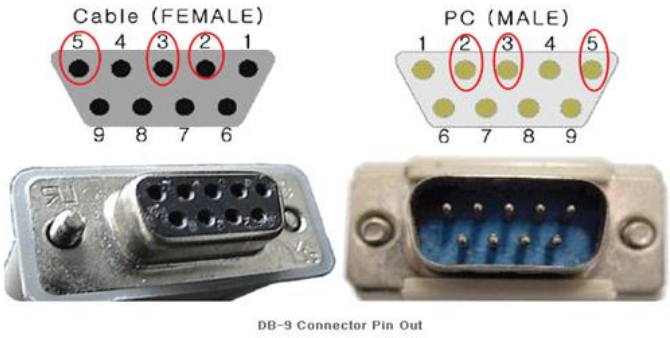

DB-9 Connector Pin Out

Pin Number	Signal	info
1	CD	Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground /Common
6	DSR	Data Set Ready
7	RTS	Request To send
8	CTS	Clear to send
9	RI	Ring indicator

10.4 Relay

10.4.1 Relay Setup (Optional)

• Click "**Setup>Relay>TEXT-In**" and the following screen will display.

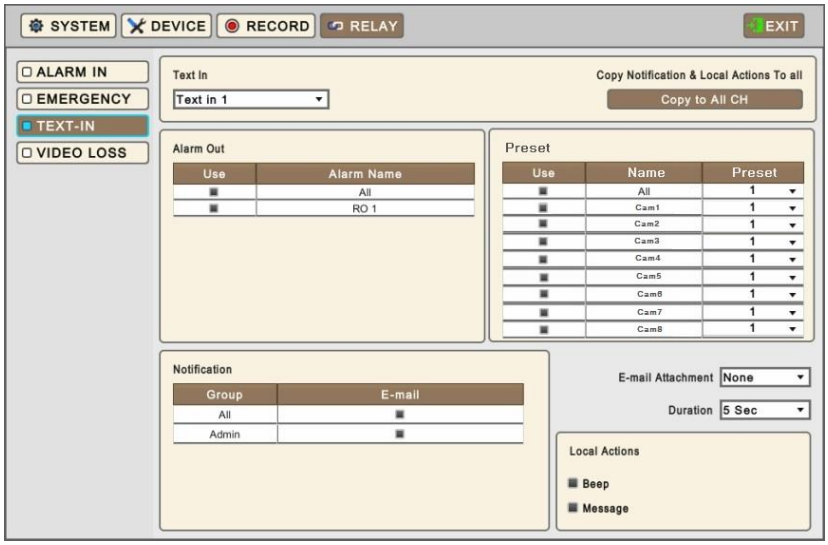

• Select cameras for Preset, Alarm Out and Notification while the Text In is operation, if necessary.
• Link Notification displays E-mail addresses registered in System>General>Account>User>Email
• Please follow the setup procedures below.

① Click (↵) Drop-down list of Text In box and select Text 1.
② Select alarm outputs to be worked when Text In 1 is on. Please check ☑ a check box of use column on Alarm Out box. More than two alarm outputs can be set. If Click (↵) 'All' of use box, all items are checked/unchecked at once.
③ Select cameras for preset when Text In 1 is on. Please check ☑ a check box of use column on Preset box. More than two cameras can be set. If Click (↵) 'All' of use column, all items are checked/unchecked at once
④ Click (↵) Drop-down list of Preset to change Cameras preset. If Click (↵) Drop-down list of all preset column, all items are changed at once
⑤ Select group for notification when Text In 1 is on. Please check ☑ a check box of E-Mail column. More than two Groups can be set.
⑥ Click (↵) Drop-down list of E-mail Attachment box to attach JPEG, EXE or None
⑦ Click (↵) Drop-down list of Duration box to set the duration of recorded data for attached EXE
⑧ Select Local Actions
-Beep: When Text In 1 is on, it will give the alarm sound
-Message: When Text In 1 is on, the alarm message will pop up on the OSD

• Repeat the above procedure for Text In 2~ Text In 4
• Click (↵) Copy to All CH button to copy Notification & Local Actions to all channels.

10.4.2 Schedule Setup (Mandatory)

• Click “**Setup>Record>Schedule**” then shows as below.

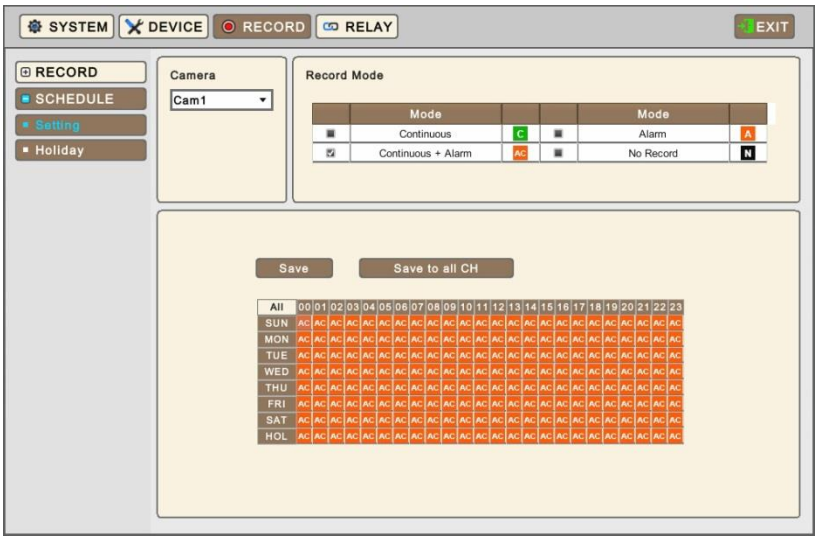

• Check the box (□) item related to Alarm. ‘Continuous + Alarm’ is recommended
• Click the Time/Date that wishes to activate TEXT-IN function on schedule.
• Do the same for additional Text In channel.

10.5 Setup (Mandatory)

• Please Click (↵) “**Setup>Devices>TEXT-IN**”, then a user will see the display below.

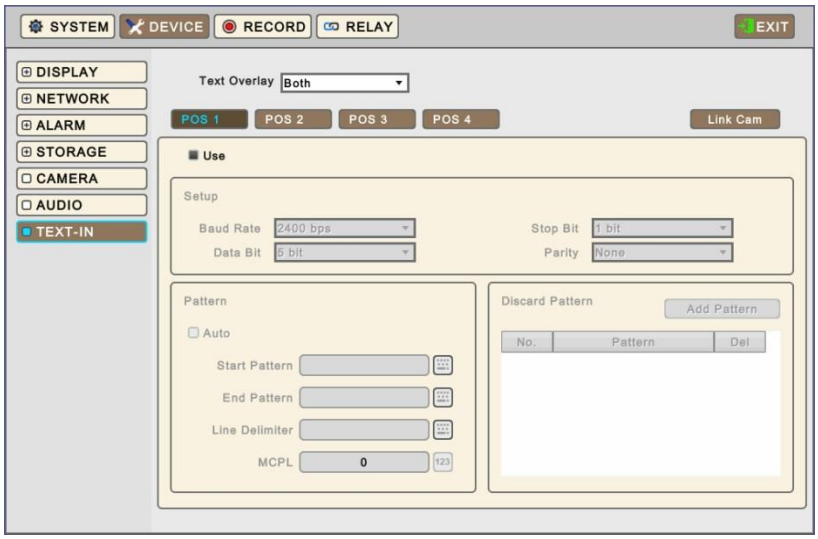

10.5.1 Text Overlay

• A use may choose whether to display the text inputs connected to the rs232 port on OSD screen.
• They have 4 menus as followings:
  - None: any displays on the OSD screen.
  - Live: displays incoming information from the serial port in real time on the OSD screen.
  - Record: displays the saved information on the OSD screen during replay.
  - Both: displays all the information on both Live and Playback mode.

10.5.2 Link Cam

• Click

and following screen will display.

• Link the POS1, 2, 3, 4 to any channel and it is possible to select more than one channel per POS device.

10.5.3 Device Setting

• Check the box (□) next to 'Use' to activate the setting for POS device.

Setup

• Default values are Baud rate 2400 bps, Data Bit 5 bit, Stop Bit 1 bit, Parity None.

• Those values should match with the POS/Cash Register. Please refer to POS/Cash Register manual for exact values.

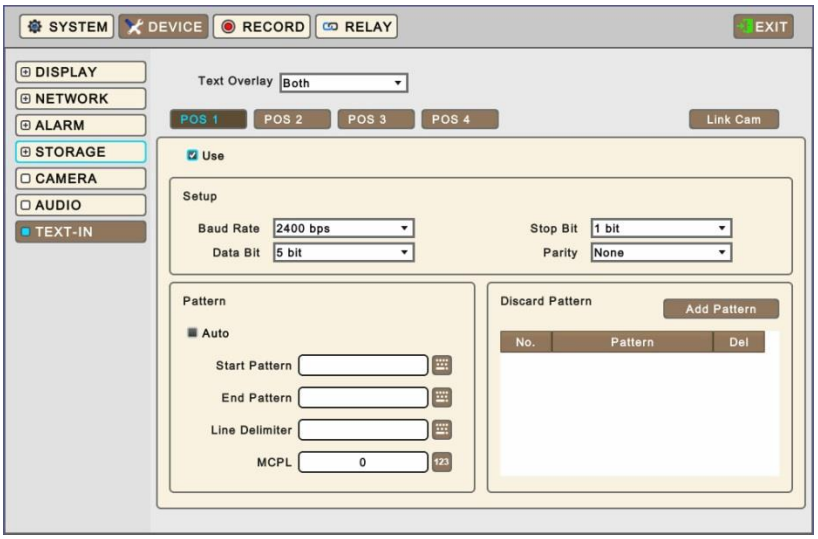

Pattern

• Check☑ the "Auto" to automatically filter unnecessary data from POS/Cash Register. Additional filtering may also be required.
  - "Discard Pattern", "Line Delimiter" and "MCPL" are used with/without 'Auto' mode to get desired text inputs format.

• **Start Pattern**: Indicates the beginning of the new data when new designated data are received from a serial device.

• **End Pattern**: Indicates the end of the data when designated data are received from a serial device.

• **Line Delimiter**: Inputs characters to be used as delimiter between lines.

• **MCPL (Minimum Character Per Line)**: Sets up the number of the minimum strings each line. Does not show the characters on OSD screen if there is a character of which number is below the designated number in each line divided by the line delimiter.

Discard Pattern

- Discard Pattern: Does not show the specified data on OSD screen. Sets up in order to designate dummy data or characters which is not to be displayed. Can be designated up to 33 of discard patterns in total.
- Press

to add a pattern which does not need to be displayed/saved.
- To edit the saved discard pattern, press the pattern then virtual keyboard will display.
- To delete the saved discard pattern, Press ‘x’ next to each pattern.

10.5.4 Example

- When it firstly connected, the data will be displayed as below.

Cam 1
Start[ODEspresoo End Start $3.25 End Start [3D[ODcappuccino End Start $4.75 End Start [OD[SDCaffe latte End Start $4.76[ODAm
Audio 1
2013/12/18 08:42:02
4%

CAUTION

THE SCREEN MUST BE ON 1CH VIEW MODE TO SEE TEXT IN DATA.

- Input a certain repeated string to “Line Delimiter” like ‘[OD’ on the picture.

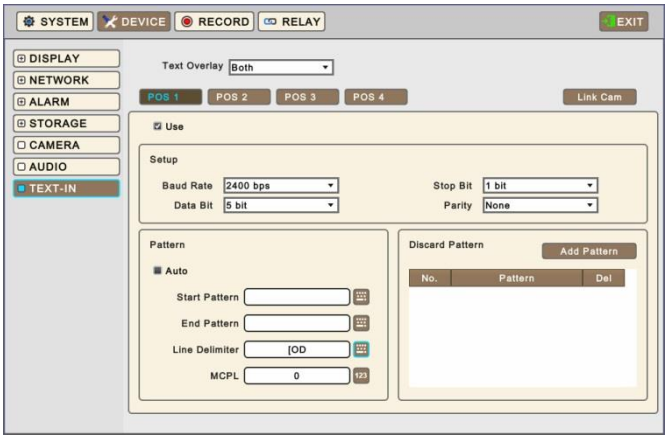

- Decide the number of minimum characters in “MCPL” item to hide data under the designated number of characters.

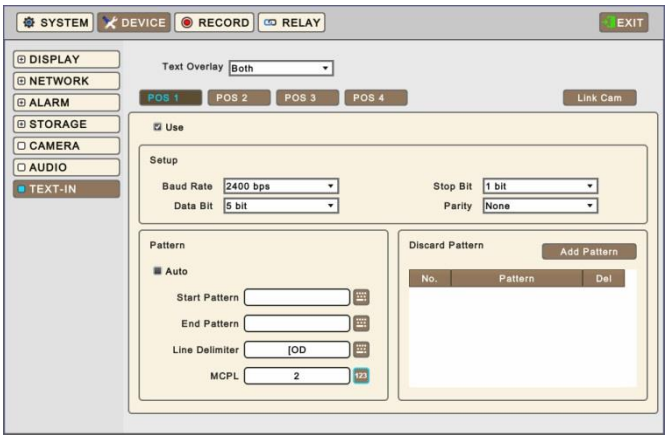

• Input the pattern of dummy data to Discard Pattern like '[3D' on the picture.

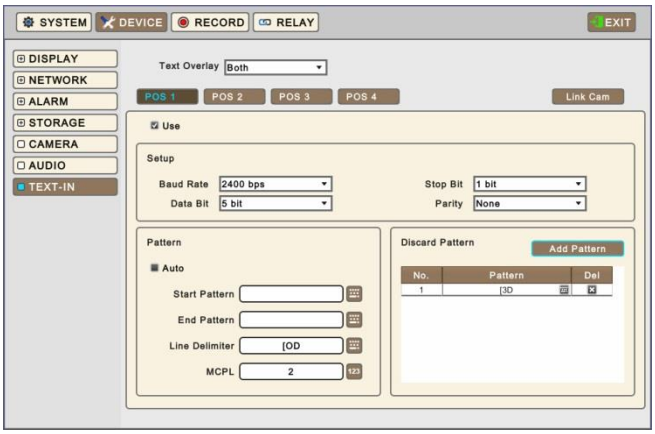

• Choose the data which willing to display and enter the Start Pattern and End Pattern.

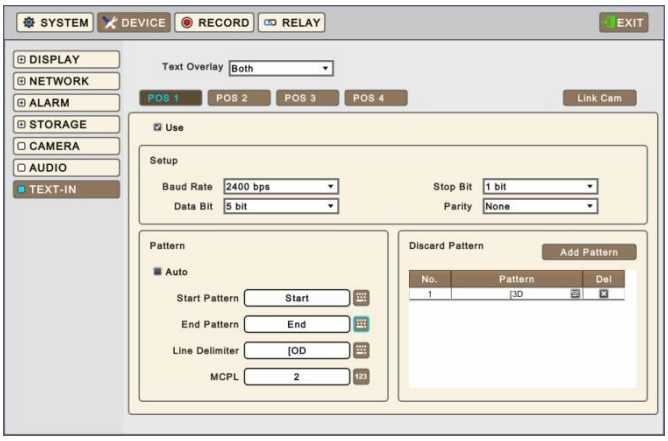

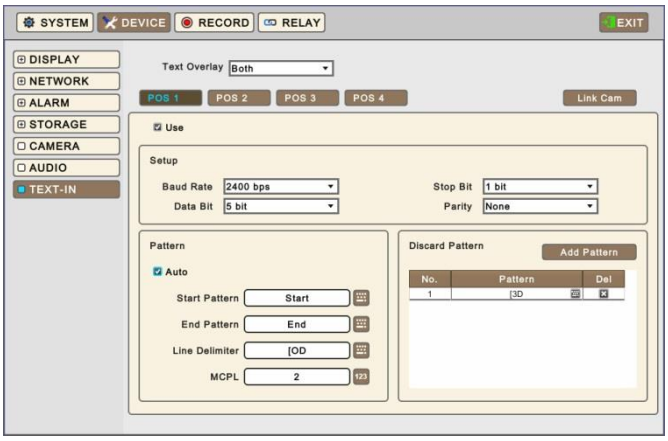

• Check or uncheck the 'Auto' box to see the differences. Depending on models of POS/Cash Register machines, it may give a better result or not.

• A user may need to repeat the processes to get the best result. Sometimes, checking the recorded data and pause the playback would be easier to verify.

10.6 Search

- TEXT-IN can be searched by keyword in Playback mode.
- Click (↵) in the Playback mode, then a user will see the following screen.

- Please Click (↵) to do Event Search and choose ‘POS/ATM Search’ then virtual keypad is display. Type a keyword to search by.
- Searched data will be listed.